

Operation Manual

5L SERIES – Rev 1.0 P/N 160908-10

5L Series Programmable DC Load



PAGE LEFT INTENTIONALLY LEFT BLANK FOR HARDCOPY VERSIONS OF THIS DOCUMENT



Table of Contents

1	Contact Information	6
2	Front Matter.....	7
2.1	Limited Warranty	7
2.2	Service and Spare Parts Limited Warranty	7
2.3	Safety Information.....	7
2.4	Safety Notices	9
3	Product Overview	11
3.1	General Description.....	11
3.2	Operating Modes	11
3.2.1	Constant Current Mode	11
3.2.2	Constant Resistance Mode	12
3.2.3	Constant Voltage Mode	12
3.2.4	Constant Power Mode	12
3.3	Static versus Dynamic Operating Modes	13
3.3.1	Programmable Parameters.....	13
3.3.2	Slew Rates	14
3.3.3	Determining Actual Transition Times	15
3.3.4	Current Read-back.....	16
3.4	Analog Input Mode	16
3.5	Product Features	16
3.6	Accessories Included	17
3.7	Interface Options.....	17
3.8	Load Cable Options	17
4	Technical Specifications	18
4.1	Operating Ranges	18
4.2	Operating Modes	18
4.3	Protection Modes.....	18
4.4	Dynamic Operation Mode	19
4.5	Metering	19
4.6	Miscellaneous	19
4.7	AC Input & Cooling	20
4.8	Dimensions & Weight	20
4.9	Environmental	20
4.10	Voltage versus Current Operating Envelope Charts.....	21
4.10.1	Model 5L06-12 V-I Curves	22
4.10.2	Model 5L12-12 V-I Curves	23
4.10.3	Model 5L12-24 V-I Curves	24
4.10.4	Model 5L18-12 V-I Curves	25
4.10.5	Model 5L18-24 V-I Curves	26
4.10.6	Model 5L18-36 V-I Curves	27
5	Unpacking and Installation	28
5.1	Inspection	28
5.2	Check Line Voltage	28
5.3	Input Fuse	29
5.3.1	Fuse Replacement Procedure.....	30
5.4	Grounding Requirements	30

5.5	Chassis Position	30
5.6	Rack Mounting.....	31
5.7	Cleaning.....	31
5.8	Powering Up	31
5.9	In Case of Malfunction	31
5.10	Load Connection.....	33
5.11	Interface Options.....	34
5.11.1	RS232 Serial Interface.....	34
5.11.2	GPIB Interface	34
5.11.3	USB Interface	35
5.11.4	LAN Interface	35
5.12	Analog Programming Input.....	36
5.13	Load Current Slew Rate.....	38
6	Front Panel Operation	40
6.1	Front Panel Layout	40
6.2	User Controls and Readouts	41
6.3	Bottom LCD Display.....	51
6.4	Bottom Keypad Description.....	53
6.5	Setting System Parameters.....	54
6.6	Settings STORE/RECALL Operation.....	56
6.6.1	Storing a Load Setup.....	56
6.6.2	Recalling a Load Setup.....	56
6.7	WAKE-UP Function	56
6.8	AUTO-SEQUENCING	58
6.8.1	AUTO-SEQUENCE – EDIT MODE	58
6.8.2	AUTO-SEQUENCE – TEST MODE.....	61
6.9	Initial Power-on Settings	65
6.9.1	Model 5L06-12 Power-on Settings	65
6.9.2	Model 5L12-12 Initial Settings	65
6.9.3	Model 5L12-24 Initial Settings	66
6.9.4	Model 5L18-12 Initial Settings	66
6.9.5	Model 5L18-24 Initial Settings	67
6.9.6	Model 5L18-36 Initial Settings	67
7	Rear Panel Overview and Connectors.....	68
7.1	DC INPUT Terminals	68
7.1.1	Wire Size.....	68
7.1.2	Connecting a UUT	68
7.1.3	Polarity and Ground	68
7.2	Voltage Sense Input Terminals	70
7.3	Current Output Monitor (I-Monitor).....	71
7.3.1	Non-Isolated Output	71
7.3.2	Output Impedance	72
7.3.3	Connecting I-Monitor Output to an Oscilloscope.....	73
7.4	Protection Features.....	74
7.4.1	Over Voltage Protection.....	74
7.4.2	Over Current Protection.....	74
7.4.3	Over Power Protection.....	74
7.4.4	Over Temperature Protection	75
7.4.5	Reverse Polarity Protection Indication.....	75

8	Remote Control Programming.....	76
8.1	Overview	76
8.2	RS232 Set-up.....	77
8.3	Programming Syntax.....	78
8.3.1	Parenthesis.....	78
8.3.2	Terminators.....	78
8.4	Short Form Command Syntax.....	80
8.4.1	Notations and Conventions Used in programming commands:	84
8.5	Long Form Command Syntax.....	85
8.6	Remote Control Command Descriptions	89
8.6.1	SETTING Commands.....	90
8.6.2	LIMIT Commands.....	98
8.6.3	STATE Commands.....	101
8.6.4	SYSTEM Commands	109
8.6.5	MEASUREMENT Commands.....	113
9	USB Driver Installation.....	114
9.1	Overview	114
9.2	USB Driver Installation	114
10	LAN Driver Installation.....	117
10.1	Overview	117
10.2	Introduction	117
11	Auto Sequence Programming Examples	119
11.1	Overview	119
11.2	Edit Mode	119
11.3	Test Mode.....	120
11.4	AUTO TEST SEQUENCY Example	121
12	Short Circuit, OPP and OCP Test Examples	123
12.1	Overview	123
12.2	SHORT Test	123
12.3	OPP Test.....	124
12.4	OCP Test.....	125
13	RoHS Material Content Declaration.....	126

1 Contact Information

AMERICA / CANADA

Adaptive Power Systems
Irvine, USA
Phone: +1(949) 752-8400
Fax: +1 (949) 756-0838
Email: support@adaptivepower.com

EUROPE

Caltest Instruments Ltd.
Guildford, United Kingdom
Phone: +44(0)1483 302 700
Fax: +44(0)1483 300 562
Email: support@adaptivepower.com

CHINA

PPST Shanghai Co. Ltd.
Shanghai, China
Phone: +86-21-6763-9223
Fax: +86-21-5763-8240
Email: support@adaptivepower.com

Web: <http://www.adaptivepower.com>

2 Front Matter

2.1 Limited Warranty

Adaptive Power Systems, Inc. (APS) warrants each unit to be free from defects in material and workmanship. For the period of one (1) year from the date of shipment to the purchaser, APS will either repair or replace, at its sole discretion, any unit returned to the APS factory in Irvine, California or one of its designated service facilities. It does not cover damage arising from misuse of the unit or attempted field modifications or repairs. This warranty specifically excludes damage to other equipment connected to this unit.

Upon notice from the purchaser within (30) days of shipment of units found to be defective in material or workmanship, APS will pay all shipping charges for the repair or replacement. If notice is received more than thirty (30) days from shipment, all shipping charges shall be paid by the purchaser. Units returned on debit memos will not be accepted and will be returned without repair.

This warranty is exclusive of all other warranties, expressed or implied.

2.2 Service and Spare Parts Limited Warranty

APS warrants repair work to be free from defects in material and workmanship for the period of ninety (90) days from the invoice date. This Service and Spare Parts Limited Warranty applies to replacement parts or to subassemblies only. All shipping and packaging charges are the sole responsibility of the buyer. APS will not accept debit memos for returned power sources or for subassemblies. Debit memos will cause return of power sources or assemblies without repair.

This warranty is exclusive of all other warranties, expressed or implied.

2.3 Safety Information

This chapter contains important information you should read BEFORE attempting to install and power-up APS Equipment. The information in this chapter is provided for use by experienced operators. Experienced operators understand the necessity of becoming familiar with, and then observing, life-critical safety and installation issues. Topics in this chapter include:

- Safety Notices
- Warnings
- Cautions
- Preparation for Installation
- Installation Instructions



Make sure to familiarize yourself with the **SAFETY SYMBOLS** shown on the next page. These symbols are used throughout this manual and relate to important safety information and issues affecting the end user or operator.

SAFETY SYMBOLS



Direct current (DC)



Alternating current (AC)



Both direct and alternating current



Three-phase alternating current



Protective earth (ground)



On (Supply)



Off (Supply)



Fuse



Caution: Refer to this manual before using the meter.



Caution, risk of electric shock

2.4 Safety Notices

SAFETY SUMMARY

The following general safety precautions must be observed during all phases of operation, service, and repair of this instrument. Failure to comply with these precautions or with specific warnings elsewhere in this manual violates safety standards of design, manufacture, and intended use of the instrument. Adaptive Power Systems assumes no liability for the customer's failure to comply with these requirements.

GENERAL

This product is a Safety Class 1 instrument (provided with a protective earth terminal). The protective features of this product may be impaired if it is used in a manner not specified in the operation instructions.

ENVIRONMENTAL CONDITIONS

This instrument is intended for indoor use in an installation category I, pollution degree 2 environments. It is designed to operate at a maximum relative humidity of 80% and at altitudes of up to 2000 meters. Refer to the specifications tables for the ac mains voltage requirements and ambient operating temperature range.

BEFORE APPLYING POWER

Verify that the product is set to match the available line voltage and the correct fuse is installed.

GROUND THE INSTRUMENT

This product is a Safety Class 1 instrument (provided with a protective earth terminal). To minimize shock hazard, the instrument chassis and cabinet must be connected to an electrical ground. The instrument must be connected to the ac power supply mains through a properly rated three-conductor power cable, with the third wire firmly connected to an electrical ground (safety ground) at the power outlet. Any interruption of the protective (grounding) conductor or disconnection of the protective earth terminal will cause a potential shock hazard that could result in personal injury.

FUSES

Only fuses with the required rated current, voltage, and specified type (normal blow, time delay, etc.) should be used. Do not use repaired Fuses or short circuit the fuse holder. To do so could cause a shock or fire hazard.

DO NOT OPERATE IN AN EXPLOSIVE ATMOSPHERE.

Do not operate the instrument in the presence of flammable gases or fumes.

KEEP AWAY FROM LIVE CIRCUITS.

Operating personnel must not remove instrument covers. Component replacement and internal adjustments must be made by qualified service personnel. Do not replace components with power cable connected. Under certain conditions, dangerous voltages

may exist even with the power cable removed. To avoid injuries, always disconnect power, discharge circuits and remove external voltage sources before touching components.

DO NOT SERVICE OR ADJUST ALONE.

Do not attempt internal service or adjustment unless another person, capable of rendering first aid and resuscitation, is present.

DO NOT EXCEED INPUT RATINGS.

This instrument may be equipped with a line filter to reduce electromagnetic interference and must be connected to a properly grounded receptacle to minimize electric shock hazard. Operation at line voltages or frequencies in excess of those stated on the data plate may cause leakage currents in excess of 5.0 mA peak.

DO NOT SUBSTITUTE PARTS OR MODIFY INSTRUMENT.

Because of the danger of introducing additional hazards, do not install substitute parts or perform any unauthorized modification to the instrument. Return the instrument to an Adaptive Power Systems Sales and Service Office for service and repair to ensure that safety features are maintained.

Instruments that appear damaged or defective should be made inoperative and secured against unintended operation until they can be repaired by qualified service personnel.

3 Product Overview

This chapter provides an overview of the APS 5L Series Programmable DC loads. It introduces the reader to general operating characteristics of these loads.

3.1 General Description

The APS 5L Series Electronic Load is designed to test, evaluation and burn-in of DC power supplies and batteries. The APS 5L Series electronic load can be operated from the front panel (manual mode) or using RS232, USB, LAN (Ethernet) or GPIB remote control.

The VI curve constant power contours of the various 5L Series models are shown in the Technical Specification Section. All models have dual voltage range capability of 0 to 6.0Vdc and 0 to 60.0Vdc. Maximum current and power capability depends on the specific model.

3.2 Operating Modes

Available operating modes for all models are:


- Current (CC) mode
- Constant Resistance (CR) mode
- Constant Voltage (CV) mode
- Constant Power (CP) mode.

A more detailed explanation of each mode and under what condition each mode is most appropriate to use follows.

3.2.1 Constant Current Mode

This is the most commonly used mode of operating when testing a voltage source such as a DC power supply, battery, AC/DC converter or ADC. In this mode of operation, the load will sink a constant level of current as set by the user, regardless of any voltage variations. A real time feedback loop ensures a stable current under any voltage variation of the DC supply or battery.

This mode is recommended for load regulation testing, loop stability testing, battery discharge testing and any other form.

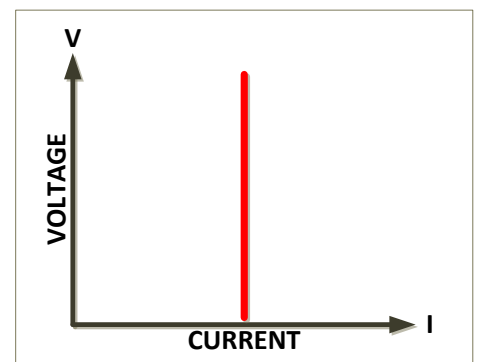


3.2.2 Constant Resistance Mode

In Constant Resistance mode, the load will sink current directly proportional to the sensed DC input voltage. The ratio between DC voltage and current is linear per ohms law and can be set by the user within the operating range of the DC load. The current is defined by the formula shown here where R is the set value in CR mode and V is the dc input voltage from the unit under test.

$$I = V/R$$


CR mode is useful for battery discharge testing of battery systems used to power constant impedance loads as the voltage will decrease as the battery discharges over time resulting in reduced current sinking.

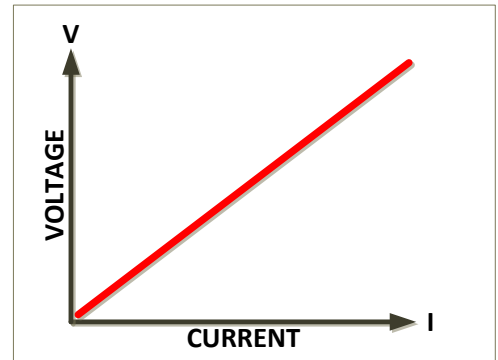

3.2.3 Constant Voltage Mode

In Constant Voltage mode, the load will attempt to sink as much current as needed to reach the programmed voltage setting. This mode should only be used with current controlled DC power sources.

Note: Most DC power supplies are voltage controlled, i.e. they regulate the output voltage to a predefined voltage level. Such DC voltage supplies should not be tested using CV mode as the DC supply voltage regulation loop will conflict with the DC Load control loop.

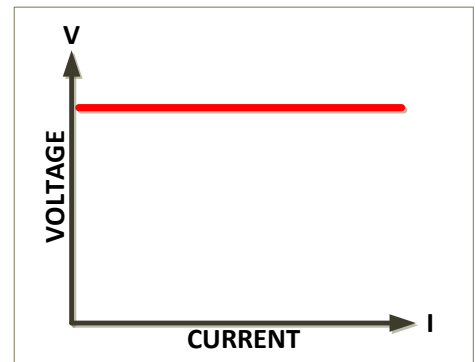


3.2.4 Constant Power Mode

In Constant Power mode, the DC load will attempt to maintain the programmed Power dissipation by sinking more or less current at the voltage sensed. The current is defined by the formula shown below.

$$I = P/V$$

Constant power mode is useful for battery discharge testing as it simulates constant power drain on the battery, regardless of battery charge state.

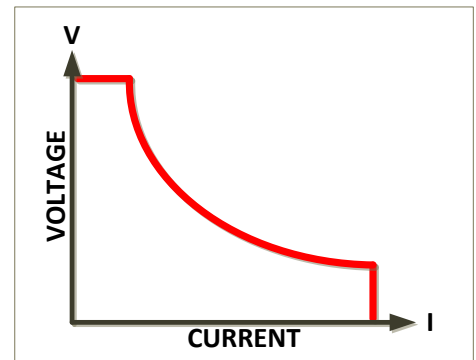

3.3 Static versus Dynamic Operating Modes

The 5L Series supports both STATIC and DYNAMIC CC mode. Static mode uses a constant load level whereas dynamic mode allows rapid changes between two pre-set current sink levels using programmable current slew rates and duty cycle.

Static Constant Current mode presents a static load condition as the load current remains constant. This tests load regulation of a DC power supply under steady state operating conditions.

To test voltage regulation under dynamic load conditions, specific changes in current level and current slew rates must be applied to the DC supply under test. The dynamic CC mode is provided for this application.

The 5L Series offer a wide range of dynamic load conditions with independent rise and fall current slew rate programming in Constant Current mode.

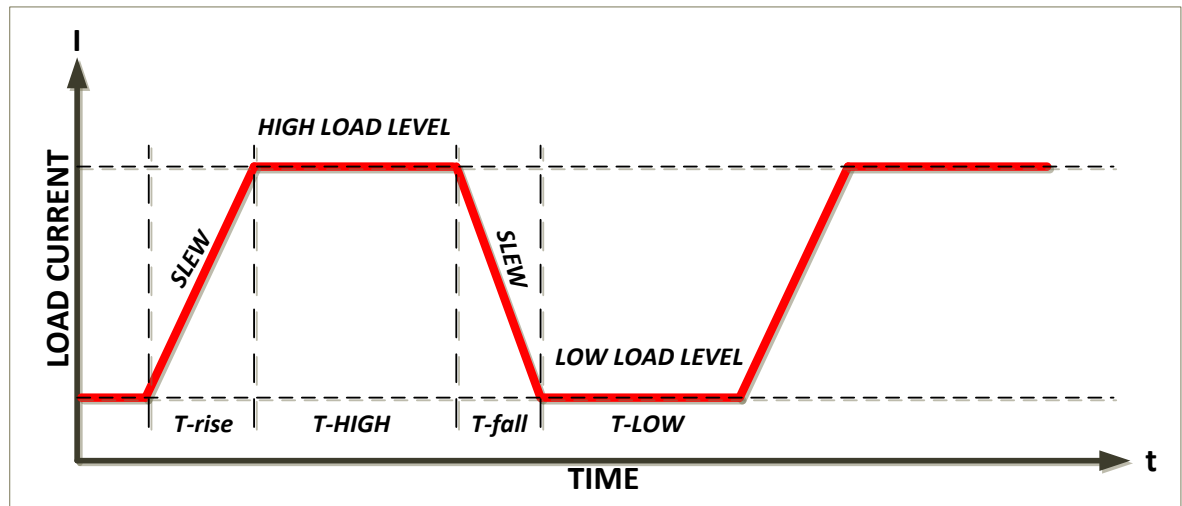


Figure 3-1: Dynamic Current Wave Form

3.3.1 Programmable Parameters

There are six programmable parameters to generate dynamic wave form or pulse wave form, the 3350F Series Electronic Load will sink current from power source proportional to the dynamic wave form, the dynamic wave form definition is shown in Figure 3-1. Available settings are:

Parameter	Description	Type
Current High	Highest programmed load current	Current Setting
Current Low	Lowest programmed load current	Current Setting
T-High	Duration at High current setting	Time (secs)
T-Low	Duration at Low current setting	Time (secs)
Rising Slew Rate	Current Slew Rate from Low to High Current	A/sec
Falling Slew Rate	Current Slew Rate from High to Low Current	A/sec

Table 3-1: Dynamic Current Mode Parameters

The resulting Current Waveform has the following characteristics:

$$\text{Period} = T\text{-High} + T\text{-Low}$$

$$\text{Frequency} = 1 / (T\text{-High} + T\text{-Low})$$

$$\text{Duty Cycle} = T\text{-High} / (T\text{-High} + T\text{-Low})$$

3.3.2 Slew Rates

Slew rate is defined as the change in current or voltage over time. A programmable slew rate allows a controlled transition from one load setting to another to minimize induced voltage drops on inductive power wiring, or to control induced transients on a test device (such as would occur during power supply transient response testing).

In cases where the transition from one setting to another is large, the actual transition time can be calculated by dividing the voltage or current transition by the slew rate. The actual transition time is defined as the time required for the input to change from 10% to 90% or from 90% to 10% of the programmed current excursion. In cases where the transition from one setting to another is small, the small signal bandwidth of the load limits the minimum transition time for all programmable slew rates. Because of this limitation, the actual transition time is typically longer than the expected time based on the slew rate setting, as shown in Figure 3-2.

Therefore, both minimum transition time and slew rate must be considered when determining the actual transition time. **See also section 5.13 "Load Current Slew Rate" on page 38 on setting slew rates.**

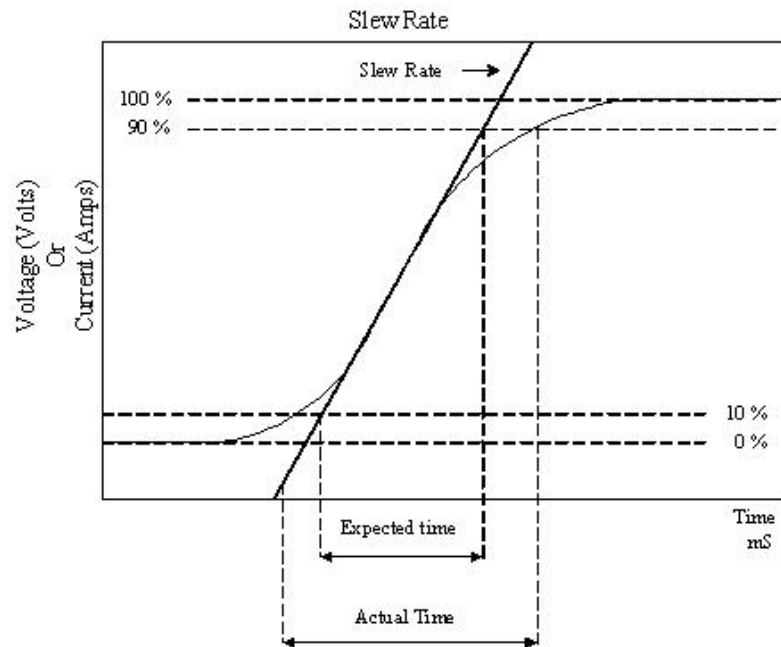


Figure 3-2: Rise Time Performance Limits

3.3.3 Determining Actual Transition Times

The minimum transition time (Tr_{min}) for a given slew rate applies for smaller changes in current as a percent of current range. At about a 30% or greater load change, the slew rate starts to increase from the minimum transition time to the maximum transition time (Tr_{max}) at a 100% load change. The actual transition time will be either the minimum transition time, or the total slew time (T-fall or T-rise) divided by the current slew rate, whichever is longer.

Minimum Tr

Use the following formulas to calculate the minimum transition time for a given slew rate:

$$Tr_{min} = \frac{36}{\text{slew rate (A/s)}} * \frac{(90\% - 10\%)}{100\%} \mu s$$

Which is equivalent to:

$$Tr_{min} = \frac{36}{\text{slew rate (A/s)}} * 0.8 \mu s$$

For a slew rate of 5A/s, this results in:

$$Tr_{min} = \frac{36}{5} * 0.8 \mu s = 5.76 \mu s$$

Example 1:

Assume high current level C-high = 24A and low current level C-low = 0A. Assume 24A represents less than 30% of full scale current for the DC load model used. If the slew rate is set to 5A/s, the expected transition time would be:

$$Tr = \frac{0.8 * (24 - 0)}{5} \mu s = 3.84 \mu s$$

However, we determined that Tr_{min} for a slew rate of 5A/s is at least 5.76 μs so the actual transition time will be limited to no less than 5.76 μs .

Maximum Tr

Use the following formula to calculate the maximum transition time for a given slew rate:

$$Tr_{max} = \frac{120}{\text{slew rate (A/s)}} * 0.8 \mu s$$

For a slew rate of 5A/s, this results in:

$$Tr_{max} = \frac{120}{5} * 0.8 \mu s = 19.2 \mu s$$

Example 2:

Assume high current level C-high = 100A and low current level C-low = 0A. Assume 100A represents more than 30% of the current range for the DC load model used. If the slew rate is set to 5A/s, the expected transition time would be:

$$Tr = \frac{0.8 * (100 - 0)}{5} \mu s = 16.0 \mu s$$

Since Tr_{max} for a slew rate of 5A/s is 19.2 μs so the actual transition time will be larger of these two values or 19.2 μs .

3.3.4 Current Read-back

The load current levels and load status can be set from the Front panel or over the remote control interface.

During testing load input voltage and load current can be read back but the current read back will typically display the average current level unless the dynamic current frequency setting is low enough. An analog current monitor output is provided to allow capturing of dynamic current on a digital storage scope or data recorder.

3.4 Analog Input Mode

An analog input is provided at the rear panel to allow analog programming of load current using a function or arbitrary waveform generator. This allows any current profile within the performance envelope of the DC load to be used for perform dynamic load testing beyond the built in dynamic CC mode.

Note: This mode is supported in Constant Current mode only.

3.5 Product Features

The following key characteristics apply to all 5L Series models.

- Fully programmable electronic DC Load with flexible configuration and dual range capabilities.
- Fully remote control of all Load settings and metering read back.
- Dual high accuracy and high-resolution 5 digit voltage and current meters.
- Built-in pulse generator includes wide Thigh/Tlow dynamic load range, independent Rise/Fall load current slew rate control, and High/Low Load level.
- Controllable load current slew rate of load level change,
- Load ON/OFF switch change and power supply turn ON.
- Short circuit test and current measure capability.
- Automatic voltage sensing and external sense.
- Full protection from over power, over temperature, over voltage, and reverse polarity.
- Analog programming input.

3.6 Accessories Included

The following accessories are included with each 5L Series DC Load. If one or more of these is missing upon incoming inspection of the product, please contact Adaptive Power Systems customer service.

Item	Quantity
Operation Manual in hardcopy or PDF Format on CD ROM	1
AC Line Cord	1
Rack Handles (detached)	1
Analog Input BNC Cable (1 meter/39.4")	1
Voltage Sense alligator clip lead, Red (1 meter, 39.4")	1
Voltage Sense alligator clip lead, Black (1 meter, 39.4")	1
M6 Round Screw	1
Certificate of Conformance	1

Table 3-2: Included Accessories

3.7 Interface Options

Following options can be ordered at time of original purchase or may be added at a later time.

Option	Model No.
RS-232 Interface Option	Opt RS-232
GPIB Interface Option	Opt GPIB
USB Interface Option, Includes LAN/USB Driver CD ROM	Opt USB
LAN Interface Option, Includes LAN/USB Driver CD ROM	Opt LAN

Table 3-3: Available Remote Control Interface Options

3.8 Load Cable Options

The user may assembly his own DC load cable as desired. Alternatively, Adaptive Power Systems offers pre-assembled high current capable load cables in different lengths.

APS Model	Description	Min. Order Qty.
OPT-C1KA1	Load Cable, 1000A rated, 1 meter	2
OPT-C1KA2	Load Cable, 1000A rated, 2 meter	2
OPT-C1KA3	Load Cable, 1000A rated, 3 meter	2
OPT-C1KA4	Load Cable, 1000A rated, 4 meter	2
OPT-C1KA5	Load Cable, 1000A rated, 5 meter	2

Table 3-4: Available Load Cable Options

4 Technical Specifications

Technical specifications shown here apply at an ambient temperature of 25° C \pm 5°. Refer to V-I curve and Very Low Voltage V-I Curve charts by models for operating envelope.

4.1 Operating Ranges

MODEL	5L06-12	5L12-12	5L12-24	5L18-12	5L18-24	5L18-36
OPERATING RANGES						
Power Ranges	0-60 W/0-600 W	0-120 W/0-1200 W	0-120 W/0-1200 W	0-180 W/0-1800 W	0-180 W/0-1800 W	0-180 W/0-1800 W
Current Ranges	0-12 A / 0-120 A	0-12 A / 0-120 A	0-24 A / 0-240 A	0-12 A / 0-120 A	0-24 A / 0-240 A	0-36 A / 0-360 A
Voltage Range	0 - 60 V	0 - 60 V	0 - 60 V	0 - 60 V	0 - 60 V	0 - 60 V
Minimum Voltage	0.6 V @ 120 A	0.6 V @ 120 A	0.7 V @ 240 A	0.4 V @ 120 A	0.7 V @ 240 A	0.7 V @ 360 A

4.2 Operating Modes

MODEL	5L06-12	5L12-12	5L12-24	5L18-12	5L18-24	5L18-36
OPERATING MODES						
CC Mode Range	0-12 A / 120 A	0-12 A / 120 A	0-24 A / 240 A	0-12 A / 120 A	0-24 A / 240 A	0-36 A / 360 A
Resolution	0.2 mA / 2 mA	0.2 mA / 2 mA	0.4 mA / 4 mA	0.2 mA / 2 mA	0.4 mA / 4 mA	0.6 mA / 6 mA
Accuracy	$\pm 0.1\%$ OF (SETTING + RANGE)					
CR Mode Range	0.0083 / 0.5 / 30k Ω	0.0083 / 0.5 / 30k Ω	0.0041 / 0.25 / 15k Ω	0.0083 / 0.5 / 30k Ω	0.0041 / 0.25 / 15k Ω	0.0027 / 0.167 / 10 Ω
Resolution	0.0083m Ω / 0.033mS	0.0083m Ω / 0.033mS	0.0041m Ω / 0.066mS	0.0083m Ω / 0.033mS	0.0041m Ω / 0.066mS	0.0027m Ω / 0.1mS
Accuracy	$\pm 0.2\%$ OF (SETTING + RANGE)					
CV Mode Range	0-6.0 V / 0-60.0 V	0-6.0 V / 0-60.0 V	0-6.0 V / 0-60.0 V	0-6.0 V / 0-60.0 V	0-6.0 V / 0-60.0 V	0-6.0 V / 0-60.0 V
Resolution	0.1 mV / 1 mV	0.1 mV / 1 mV	0.1 mV / 1 mV	0.1 mV / 1 mV	0.1 mV / 1 mV	0.1 mV / 1 mV
Accuracy	$\pm 0.05\%$ OF (SETTING + RANGE)					
CP Mode Range	0-60 W/0 -600 W	0-120 W/0 -1200 W	0-120 W/0 -1200 W	0-180 W/0 -1800 W	0-180 W/0 -1800 W	0-180 W/0 -1800 W
Resolution	1 mW / 10 mW	2 mW / 20 mW	2 mW / 20 mW	3 mW / 30 mW	3 mW / 30 mW	3 mW / 30 mW
Accuracy	$\pm 0.5\%$ OF (SETTING + RANGE)					

4.3 Protection Modes

MODEL	5L06-12	5L12-12	5L12-24	5L18-12	5L18-24	5L18-36
PROTECTION						
Over Power (OP)	630 W	1260 W	1260 W	1890 W	1890 W	1890 W
Over Current (OC)	126.0 A	126.0 A	252.0 A	126.0 A	252.0 A	378.0 A
Over Voltage (OV)	63.0 V	63.0 V	63.0 V	63.0 V	63.0 V	63.0 V
Over Temperature (OT)	+85° C / +185° F					

4.4 Dynamic Operation Mode

MODEL	5L06-12	5L12-12	5L12-24	5L18-12	5L18-24	5L18-36
DYNAMIC OPERATION						
T high & T low	0.050 - 9.999 / 99.99 / 999.9 / 9999ms (20 kHz)					
Resolution	0.001 / 0.01 / 0.1 / 1ms					
Accuracy	1μs / 10μs / 100μs / 1ms + 50ppm					
Slew Rate	8mA-500mA/μs	16mA-1A/μs	8mA-500mA/μs	16mA-1A/μs	24mA-1500mA/μs	
	80mA-5A/μs	160mA-10A/μs	80mA-5A/μs	160mA-10A/μs	240mA-15A/μs	
Accuracy	± 5% OF SETTING ± 10 μs					
Min. Rise Time	24μs Typical					

4.5 Metering

MODEL	5L06-12	5L12-12	5L12-24	5L18-12	5L18-24	5L18-36
METERING						
Voltage Range	0 - 6.0 V / 60.0 V					
Resolution	0.1 mV / 1 mV					
Accuracy	\pm 0.025% OF (READING + RANGE)					
Current Range	0-12 A / 120 A	0-12 A / 120 A	0-24 A / 240 A	0-12 A / 120 A	0-24 A / 240 A	0-36 A / 360 A
Resolution	0.2 mA / 2 mA	0.2 mA / 2 mA	0.4 mA / 4 mA	0.2 mA / 2 mA	0.4 mA / 4 mA	0.6 mA / 6 mA
Accuracy	\pm 0.1% OF (READING + RANGE)					
Power Range	0 - 600.0 W	0 - 1200.0 W	0 - 1200.0 W	0 - 1800.0 W	0 - 1800.0 W	0 - 1800.0 W
Resolution	0.1 W					
Accuracy	\pm 0.125% OF (READING + RANGE)					
Analog Input (CC mode)	0 - 10V in for F.S. current @ 10V					

4.6 Miscellaneous

MODEL	5L06-12	5L12-12	5L12-24	5L18-12	5L18-24	5L18-36
SHORT CIRCUIT						
Max. Short Current	120 A	120 A	240 A	120 A	240 A	360 A
ANALOG I/O						
Analog Monitor Out	0 - 10 V out F.S. / 1K Ω Zout, Non-isolated					
Analog Input (CC mode)	0 - 10V in for F.S. current @ 10V					

4.7 AC Input & Cooling

MODEL	5L06-12	5L12-12	5L12-24	5L18-12	5L18-24	5L18-36
AC INPUT AND COOLING SPECIFICATIONS						
Dimensions (H x W x D)	177 x 440 x 445 mm / 7.0" x 17.3" x 17.5"					
Weight (Net)	15.2kg / 33.5lbs	19.4kg / 42.8lbs	19.4kg / 42.8lbs	23.6kg / 52.0lbs	23.6kg / 52.0lbs	23.6kg / 52.0lbs

4.8 Dimensions & Weight

MODEL	5L06-12	5L12-12	5L12-24	5L18-12	5L18-24	5L18-36
DIMENSIONS AND WEIGHT						
Dimensions (H x W x D)	177 x 440 x 445 mm / 7.0" x 17.3" x 17.5"					
Weight (Net)	15.2kg / 33.5lbs	19.4kg / 42.8lbs	19.4kg / 42.8lbs	23.6kg / 52.0lbs	23.6kg / 52.0lbs	23.6kg / 52.0lbs

4.9 Environmental

MODEL	5L06-12	5L12-12	5L12-24	5L18-12	5L18-24	5L18-36
ENVIRONMENTAL						
Operating Temperature	0 - 40° C / 32 - 104° F					
Relative Humidity	80% max. non-condensing					
Environmental	Indoor Use Only, Pollution Degree 2					
Altitude	2000 meter / 6500 feet max. Operating					
EMC & Safety	CE Mark					

4.10 Voltage versus Current Operating Envelope Charts

Following charts show constant power operating envelopes for each mode. For operation at voltages below 1.0 Vdc, refer to the Low Voltage Operating charts. Operation below the red line shown in these charts is not specified.

Charts are shown by model on following pages.

4.10.1 Model 5L06-12 V-I Curves

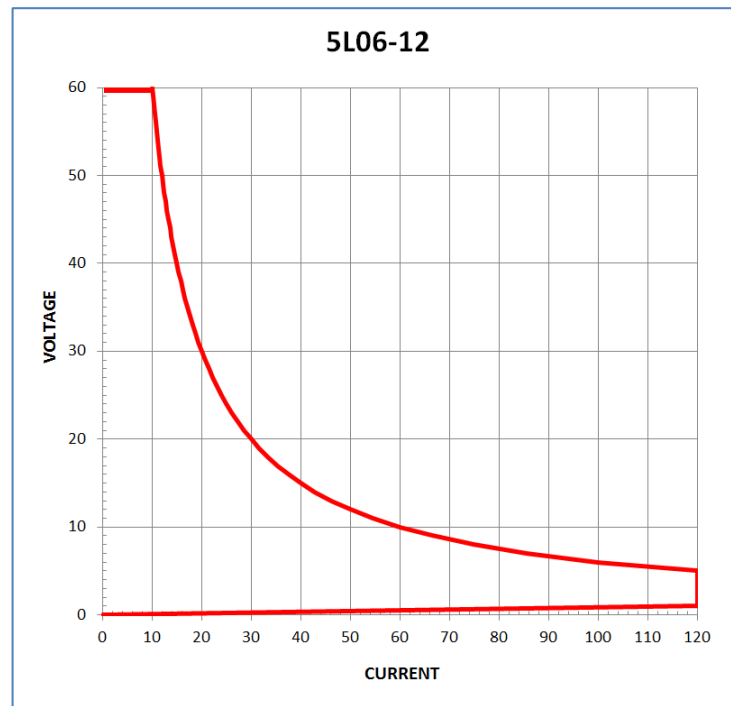


Figure 4-2: Model 5L06-12 VI Curve

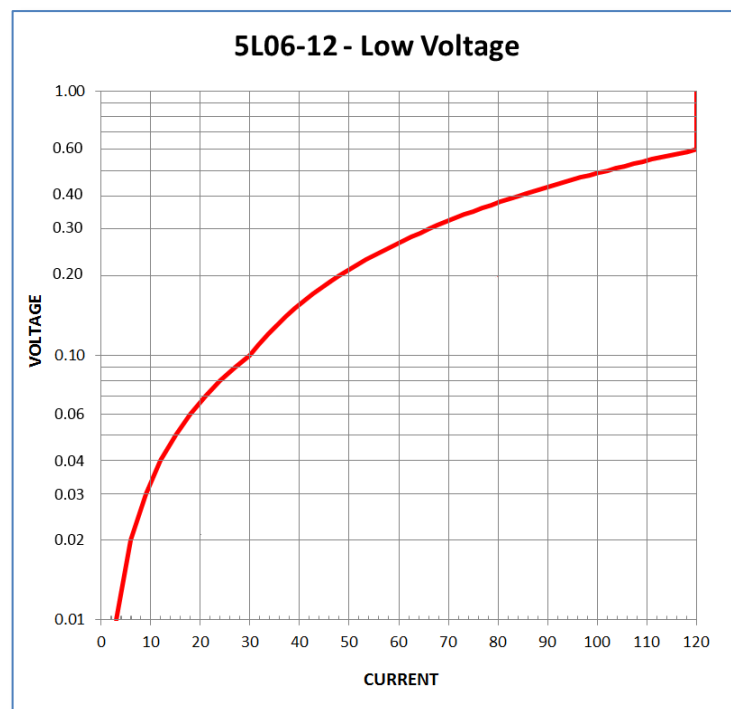


Figure 4-2: Model 5L06-12 Low Voltage Curve

4.10.2 Model 5L12-12 V-I Curves

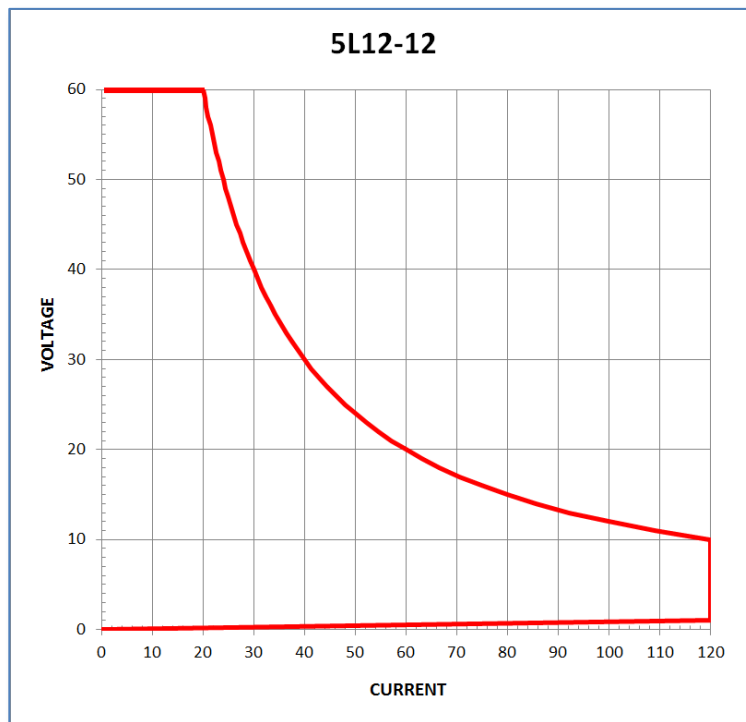


Figure 4-4: Model 5L12-12 VI Curve

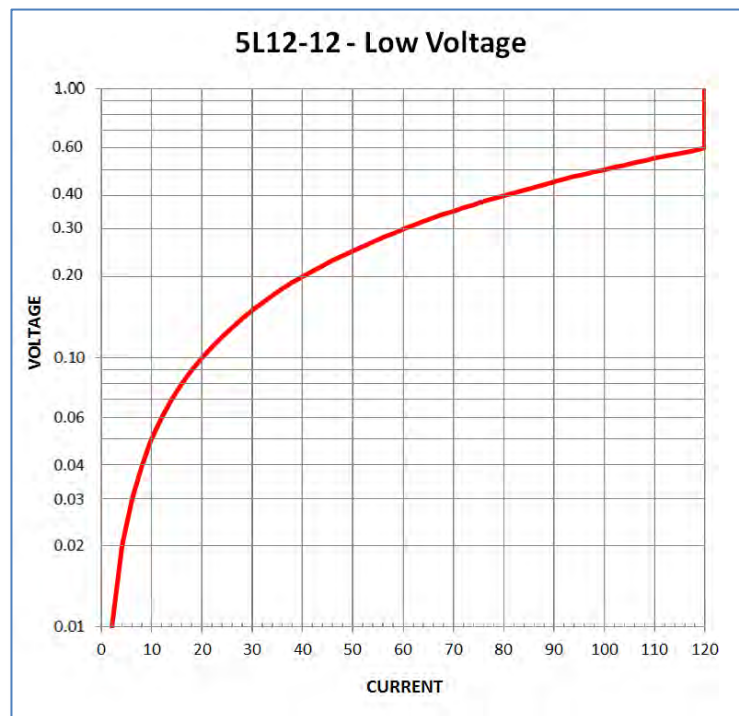


Figure 4-4: Model 5L12-12 Low Voltage Curve

4.10.3 Model 5L12-24 V-I Curves


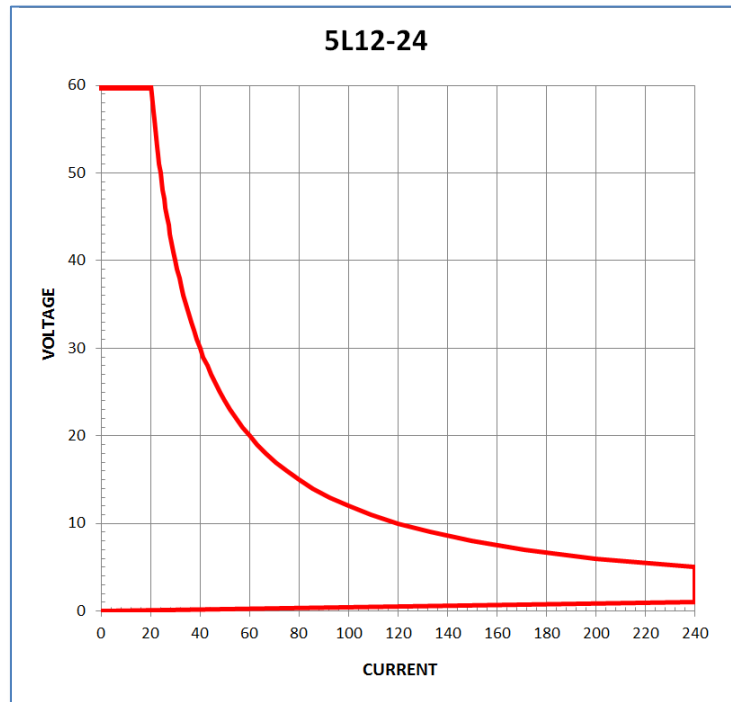


Figure 4-5: Model 5L12-24 VI Curve

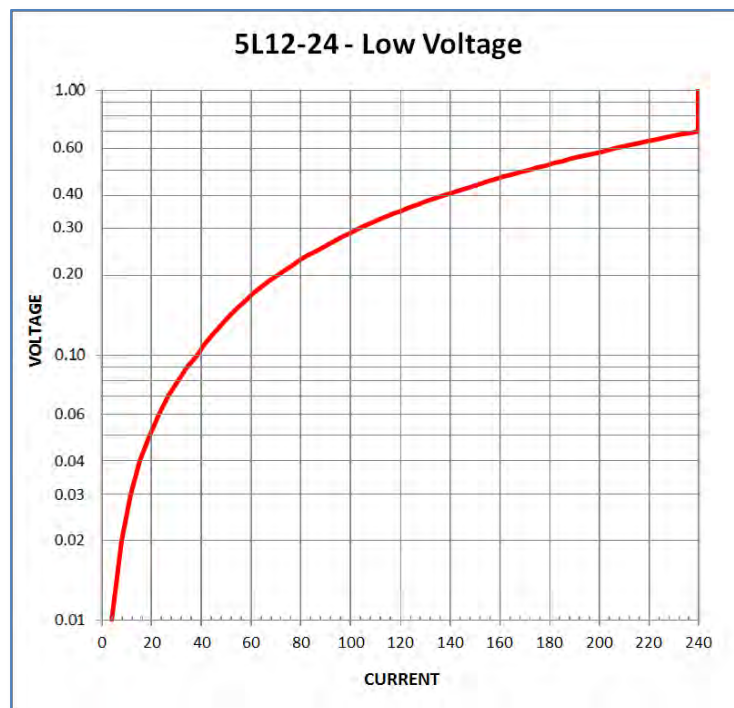

4.10.4 Model 5L18-12 V-I Curves

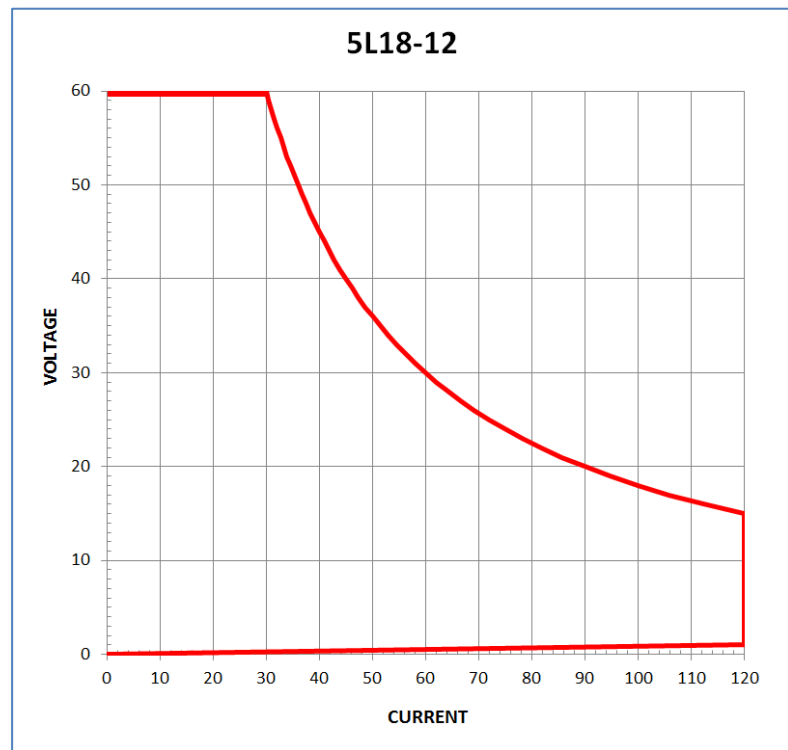


Figure 4-7: Model 5L18-12 VI Curve

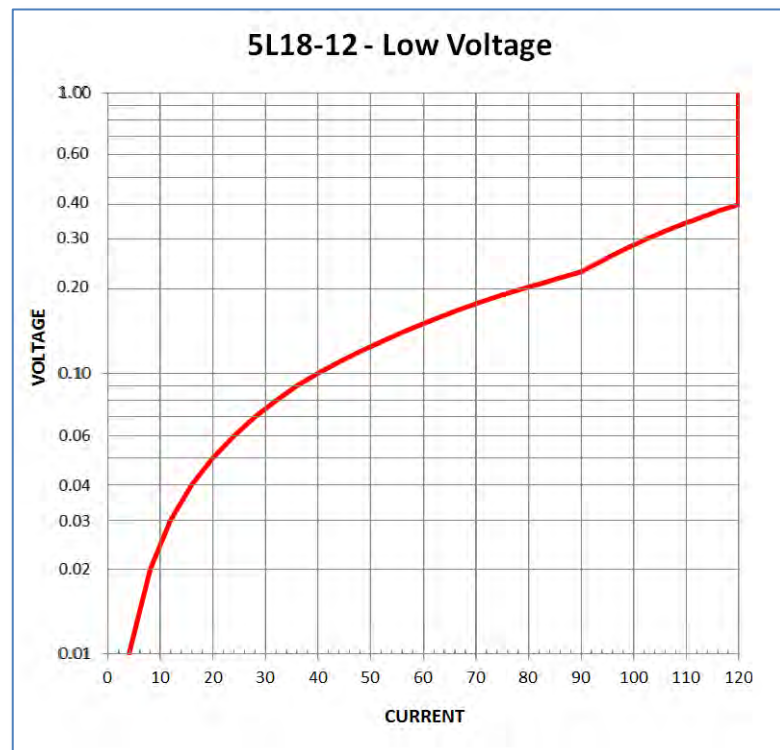


Figure 4-6: Model 5L18-12 Low Voltage Curve

4.10.5 Model 5L18-24 V-I Curves

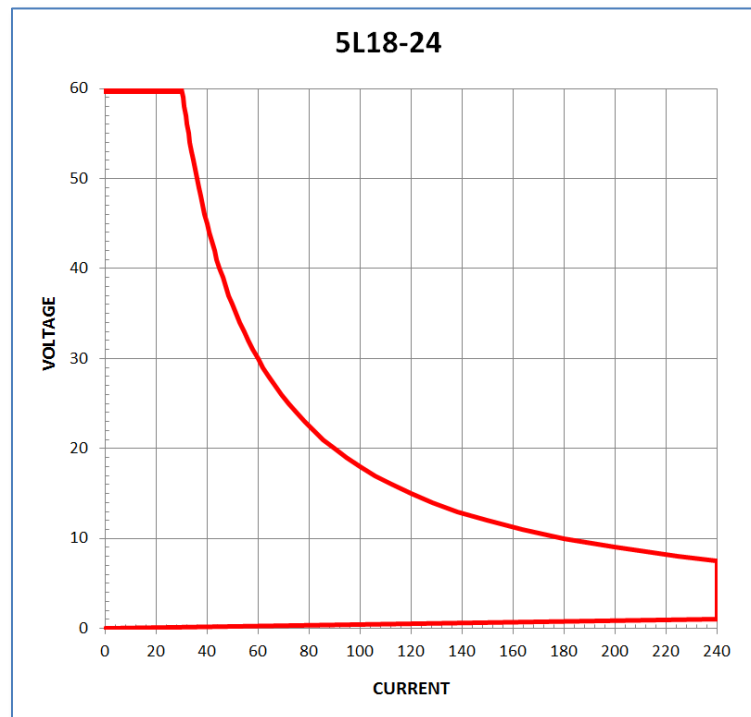


Figure 4-8: Model 5L18-24 VI Curve

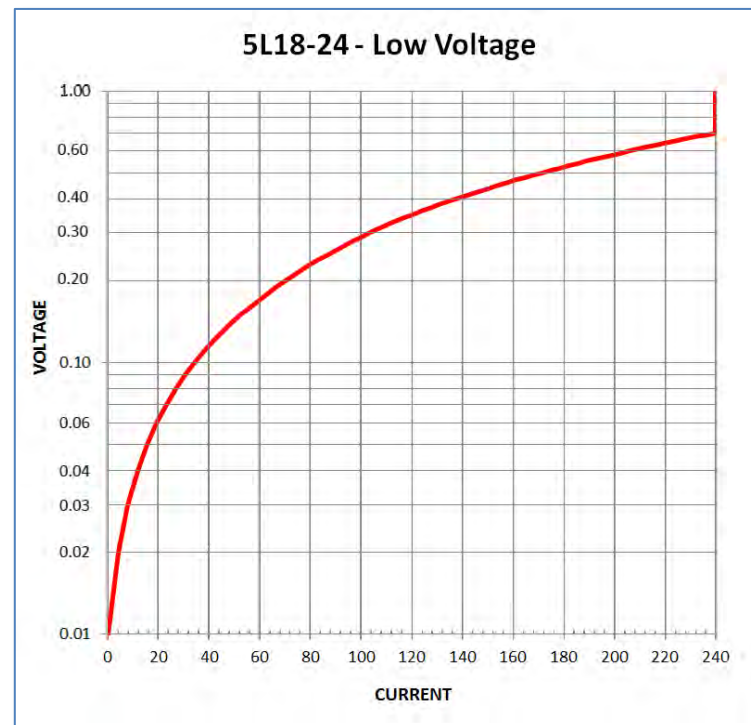


Figure 4-9: Model 5L18-24 Low Voltage Curve

4.10.6 Model 5L18-36 V-I Curves

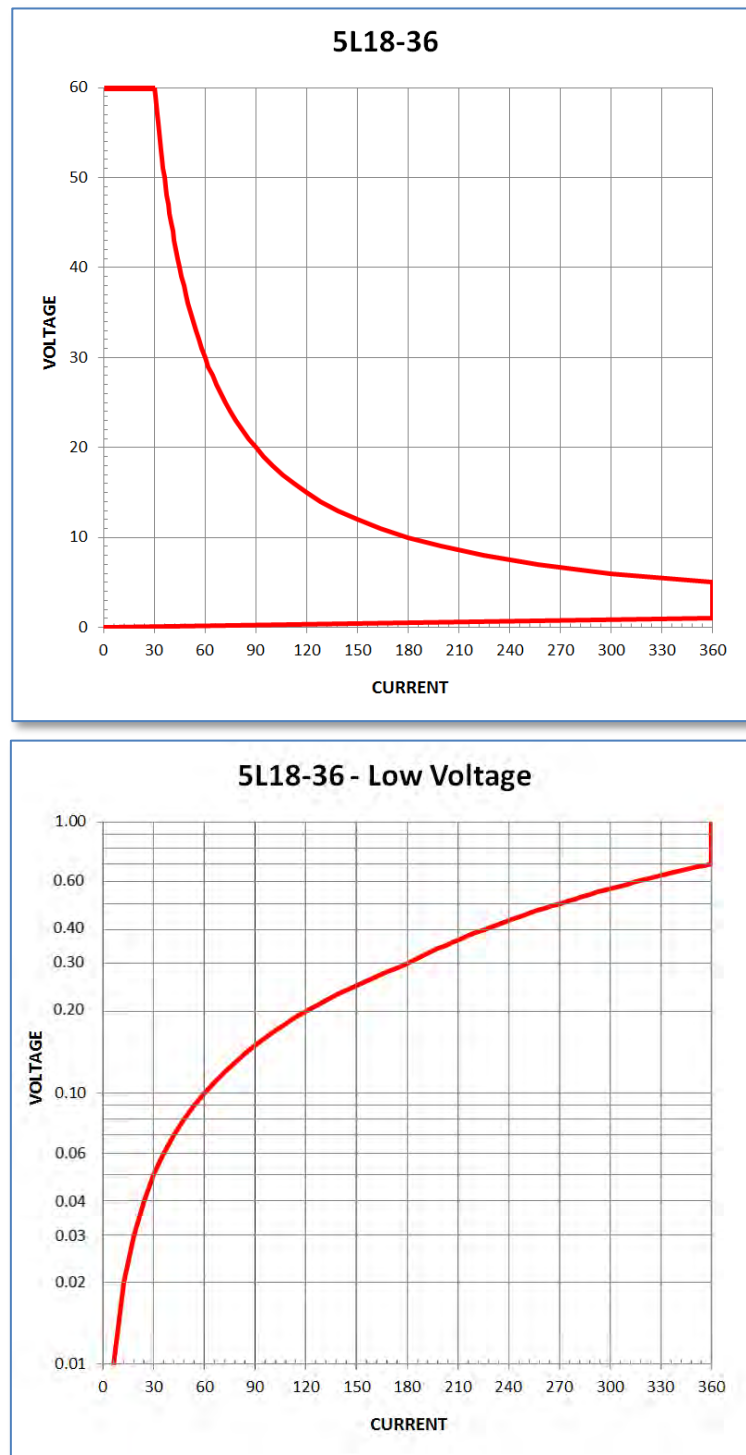


Figure 4-10: Model 5L18-36 Low Voltage Curve

5 Unpacking and Installation

5.1 Inspection

The 5L Series DC Loads are carefully inspected before shipment. If instrument damage has occurred during transport, please inform Adaptive Power Systems' nearest sales and service office or representative.

Your DC load was shipped with a power cord for the type of outlet used at your location. If the appropriated cord was not included, please contact your nearest sales office to obtain the correct cord. Refer to "check line voltage" to check the line voltage selection and fuse type.

5.2 Check Line Voltage

The 5L Series load can be operated with a 115Vac or 230Vac input as indicated on the label on the rear panel. Make sure that the factory check mark corresponds to your nominal line voltage. Skip this procedure if the label is corrected marked.

1. With the 5L Series load powered OFF, disconnect the AC power cord.
2. Refer the drawing on the rear panel of 5L Series load in Figure 5-1, set the switches to the proper voltage as indicated below.

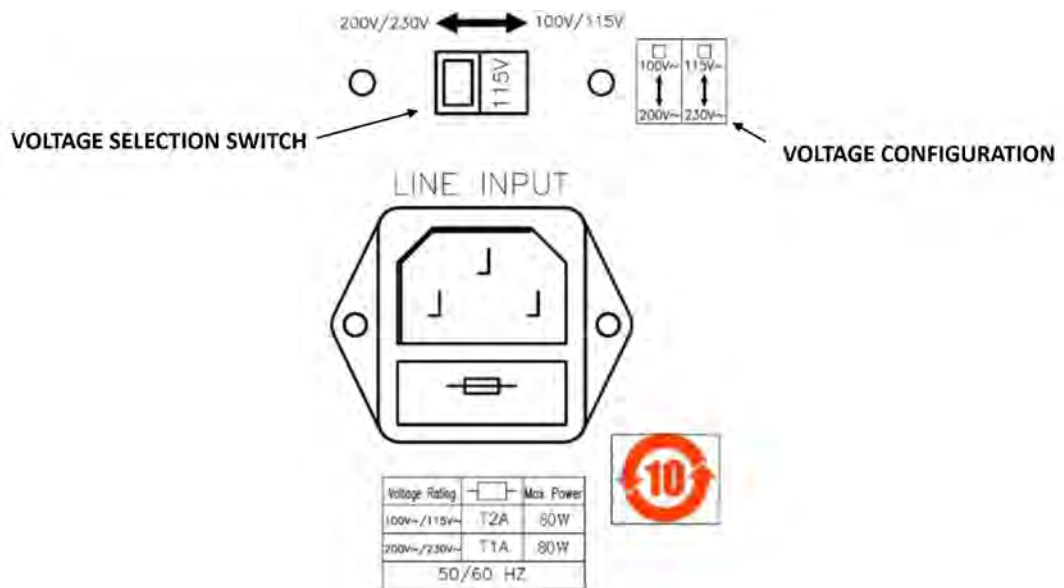



Figure 5-1: AC Input Voltage Selection


5.3 Input Fuse

This product is fitted with a mains input fuse. If it needs to be replaced, please adhere to the following procedure.



CAUTION

BEFORE replacing the fuse you must switch off the unit and mains power outlet and disconnect the plug of the AC Power cable from the input socket of the load chassis.



WARNING

If prior to exchanging the fuse, there is any abnormal noise or odor, do not use the unit. Please inform your local sales office to organize repair of the chassis.

To avoid the risk of fire or electronic shock the fuse must only be replaced with same type and rating as the original. Any replacement fuse used should meet local national safety standards. Any use of an improper fuse or shorting the Fuse holder is extremely dangerous and is strictly prohibited.

5.3.1 Fuse Replacement Procedure

To replace the AC line input fuse, proceed as follows:

1. Check the rating of the mains input fuse. Replace only with the correct type and rating.
For 100V/115Vac Input use T2A/250V (5*20mm),
For 200V/230Vac Input use T1A/250V (5*20mm)
2. The AC line fuse is located below the AC line socket (see Fig 2-2). Use a small screwdriver to remove the fuse holder. Replace the failed fuse with the appropriate type and rating according to your mains voltage. (See Table 1-2)
3. Refit the fuse holder and connect the power cord.

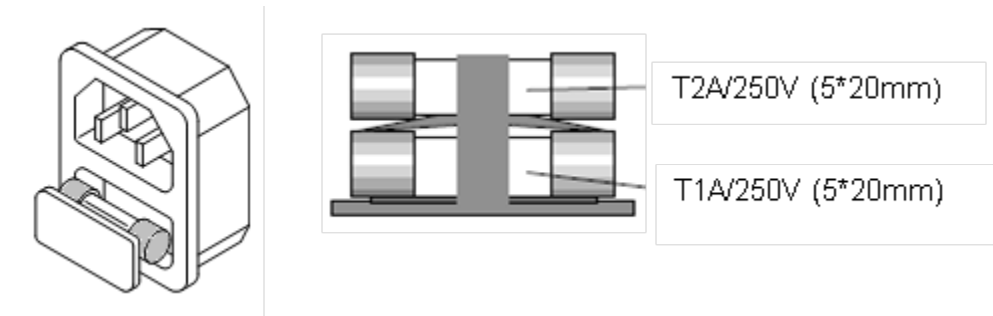


Figure 5-2: Fuse Holder Location

5.4 Grounding Requirements



The unit is grounded via the AC Input. A line cord with proper Earth Ground pin must be used at all times. Correct grounding of your electrical system infrastructure according to applicable national standards must also be observed.

5.5 Chassis Position


The 5L Series load chassis is equipped with surface protection feet and tilt stands installed and is ready for used as a bench instrument. The feet provide a good viewing angle for bench-top use.

5.6 Rack Mounting

The 5L Series chassis is designed to be rack mounted in a standard 19 inch rack for system applications. If needed, the feet and tilt-stands may be removed to accommodate zero stacking with other test equipment.

5.7 Cleaning

To clean this product uses a soft or slightly damp cloth.

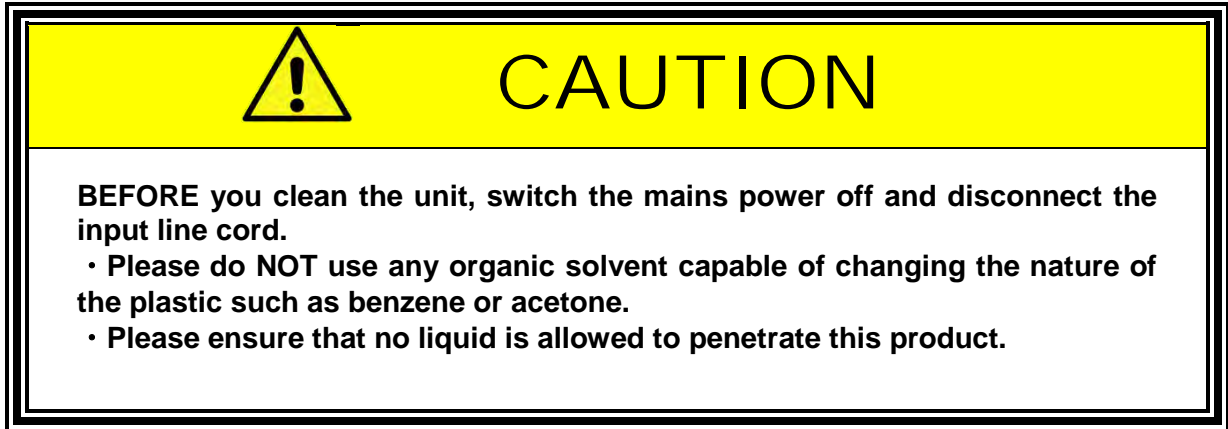

5.8 Powering Up

The following procedure should be followed before applying mains power:

1. Check that the POWER switch is in the off (O) position.
2. Verify that the rear panel voltage selector of the chassis is correctly set.
3. Check that nothing is connected to any of the DC INPUT (load input terminals) on the front and/or rear panels.
4. Connect the correct AC mains line cord to the 5L Series load AC input terminal.
5. Plug the line cord plug into a suitable AC outlet socket.
6. Turn on (I) the POWER switch.
7. If the instrument does not turn on for some reason, turn OFF the POWER switch and verify the presence of the correct AC line input voltage using appropriate safety measures.

5.9 In Case of Malfunction

In the unlikely event of an instrument malfunction or if the instrument does not turn on despite the presence of the correct AC line voltage, please attach a warning tag to the instrument to identify the owner and indicate that service or repair is required. Contact Adaptive Power Systems or its authorized representative to arrange for service.

5.10 Load Connection

When setting up for a new test and connecting any equipment to the DC load, proceed as follows:

1. Always make sure the DC Load is turned OFF at the POWER switch when making any wire connections.
2. Check that the output of the equipment under test is **OFF**.
Note: Some power equipment's output may still be energized even if the equipment has been turned off or its output is turned off. This is especially true for DC Power Supplies.

Note: When working with batteries, it is recommended to provide a suitable disconnect relay or switch so the load connection can be disconnected from the battery for handling purposes.

3. Connect one end of the load wires to the load input terminals on the rear panel.
4. Check the polarity of the connections and connect the other end of the load wires to the output terminal of the equipment under test.
5. When connecting multiple loads to the same EUT, make sure the load wire lengths to each load are the same.

5.11 Interface Options

The 5L Series supports one of four different remote control interface options. The interface specified at the time of order is installed at the factory prior to shipment. It is possible to retrofit interface options in the field. Contact Adaptive Power Systems Customer Service for instructions.

5.11.1 RS232 Serial Interface

Figure 5-3 shows the RS232 connector (Female) on the rear panel. This connects the load unit to an RS232 port of a computer. The RS232 BAUD-RATE can be set on the front panel of the load. Press the "SYSTEM" button twice to enter the desired BAUD RATE adjustment.



Figure 5-3: RS232 Connection

5.11.2 GPIB Interface

The GPIB connector is located on the rear panel. This socket allows the load to be connected to the controller and other GPIB devices. A GPIB system can be connected in any configuration (star, linear, or both) as long as the following conditions are met:

- The maximum number of devices including the controller is equal or less than 15.
- The maximum length of the GPIB cable is no more than 2 meters.
- The total lead length of all devices connected together totals less than 20 meters.
- Please make sure the lock screws are firmly hand-tightened, use a screwdriver only for the removal of screws. Figure 5-4 shows the rear panel of load. The GPIB address of the load is set on the front panel.

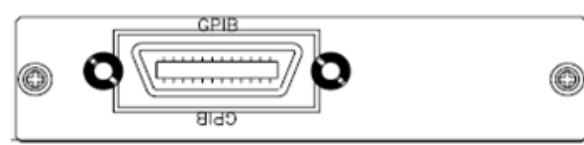


Figure 5-4: GPIB Connection

5.11.3 USB Interface

The 5L Series load is a USB Device and uses a USB Type B connector on the rear panel when equipped with the USB interface option. Figure 5-5 shows the USB connector in the rear panel of the load. Please refer Appendix B for information on USB communications.



Figure 5-5: USB Connection

5.11.4 LAN Interface

The LAN option uses a 100BaseT Ethernet interface. Figure 5-6 shows the LAN connector on the rear panel of the load. Please refer Appendix C for information on LAN communications.



Figure 5-6 LAN Connection

5.12 Analog Programming Input

The 5L Series has an analog programming input located on the rear panel. This feature allows an external waveform to be tracked as long as it is within the load's dynamic capabilities. The analog programming input is available through a compression terminal block on the rear panel of the 5L Series load. These inputs will accept a 0-10V signal. This signal is proportional to the load's maximum current range.

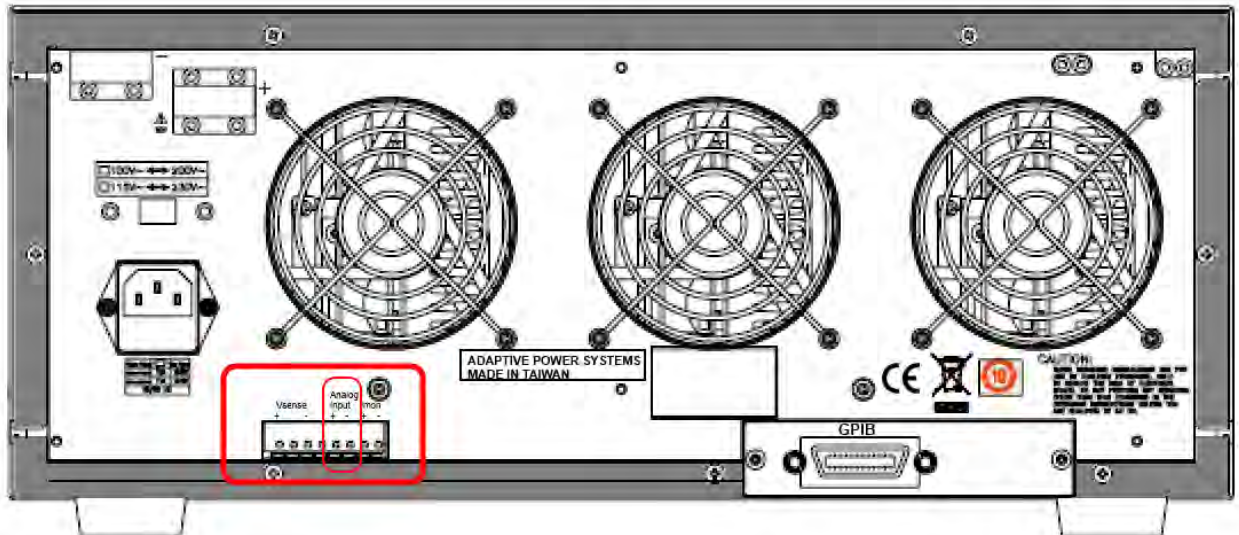


Figure 5-7: Location and Pin-out of Analog Programming Input Connector

The analog programming input operates in CC or CP modes only. The load module will attempt to load proportionally according to the signal and the load module's maximum current or power range.

For example: 5L18-12: $I_{max} = 120A$ and $P_{max} = 1800W$

- In CC mode, if the analog programming input is 4V, the load current will be $0.5 \times 120 = 60A$.
- In CP mode, if the analog programming input is 1V, the load power setting will be $0.1 \times 1800 = 180W$.

The analog programming signal can act alone or it can be summed with the programmed value set via the front panel or the optional computer interface (GPIB, RS232, USB, or LAN) or the front panel.

Figure 5-8 shows the result of an analog programming signal at 4Vac, 500Hz when it is

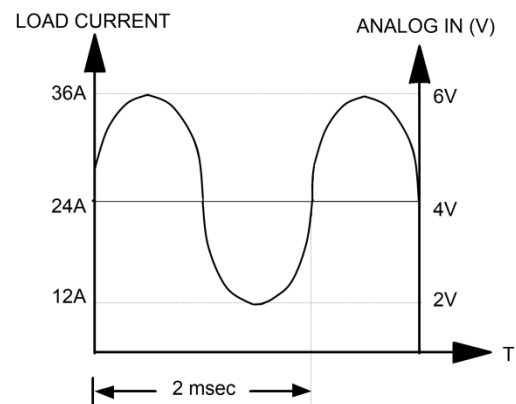


Figure 5-8: Analog Programming Example

summed with a 24A programmed setting in CC mode of DC load.

5.13 Load Current Slew Rate

The programmable current slew rate of the DC load allows control over the rate of change in current any time a change in current occurs. This controls the load current slew rate during load current level changes, power supply turn ON/OFF events or when turning the LOAD ON, and OFF. The 5L Series Electronic loads provide controlled current slewing under all of these conditions. The rise and fall current slew rate can each be set independently.

For example, on Models 5L06-12 and 5L12-12, the rise and fall slew rates can be independently programmed from 80mA/μs to 5000mA/μs in the 120A current range and from 8mA/μs to 500mA/μs in the 12A current range. This allows an independent controlled transition from Low load current level to High load current level (Rise current slew rate) or from High load current level to Low load current level(Fall current slew rate) to minimize induced voltage drops on the wiring inductance, or to control induced voltage transients on the device under test (power supply transient response testing).

See under “DYNAMIC OPERATION, Slew Rate” in the specification section on page 18 for slew rate programming range for other models.

This controllable load current slew rate feature also can eliminate the overload current phenomenon and emulate the actual load current slew rate at turn ON of the power supply under test. Figure 5-9 shows the load current slew rate is according to the power supply's output voltage, load level setting and Load ON/OFF switch.

The ability to apply all these dynamic current characteristics at the same time using the Constant Current mode of the 5L Series load greatly speeds up power supply testing tasks. This can significantly improve the test quality, thoroughness and efficiency.

There are two load current ranges in 5L Series Load, Range I and Range II, the Rise and Fall slews rate range for both current ranges is specified in Section 4.1, “Technical Specifications” on page 18.

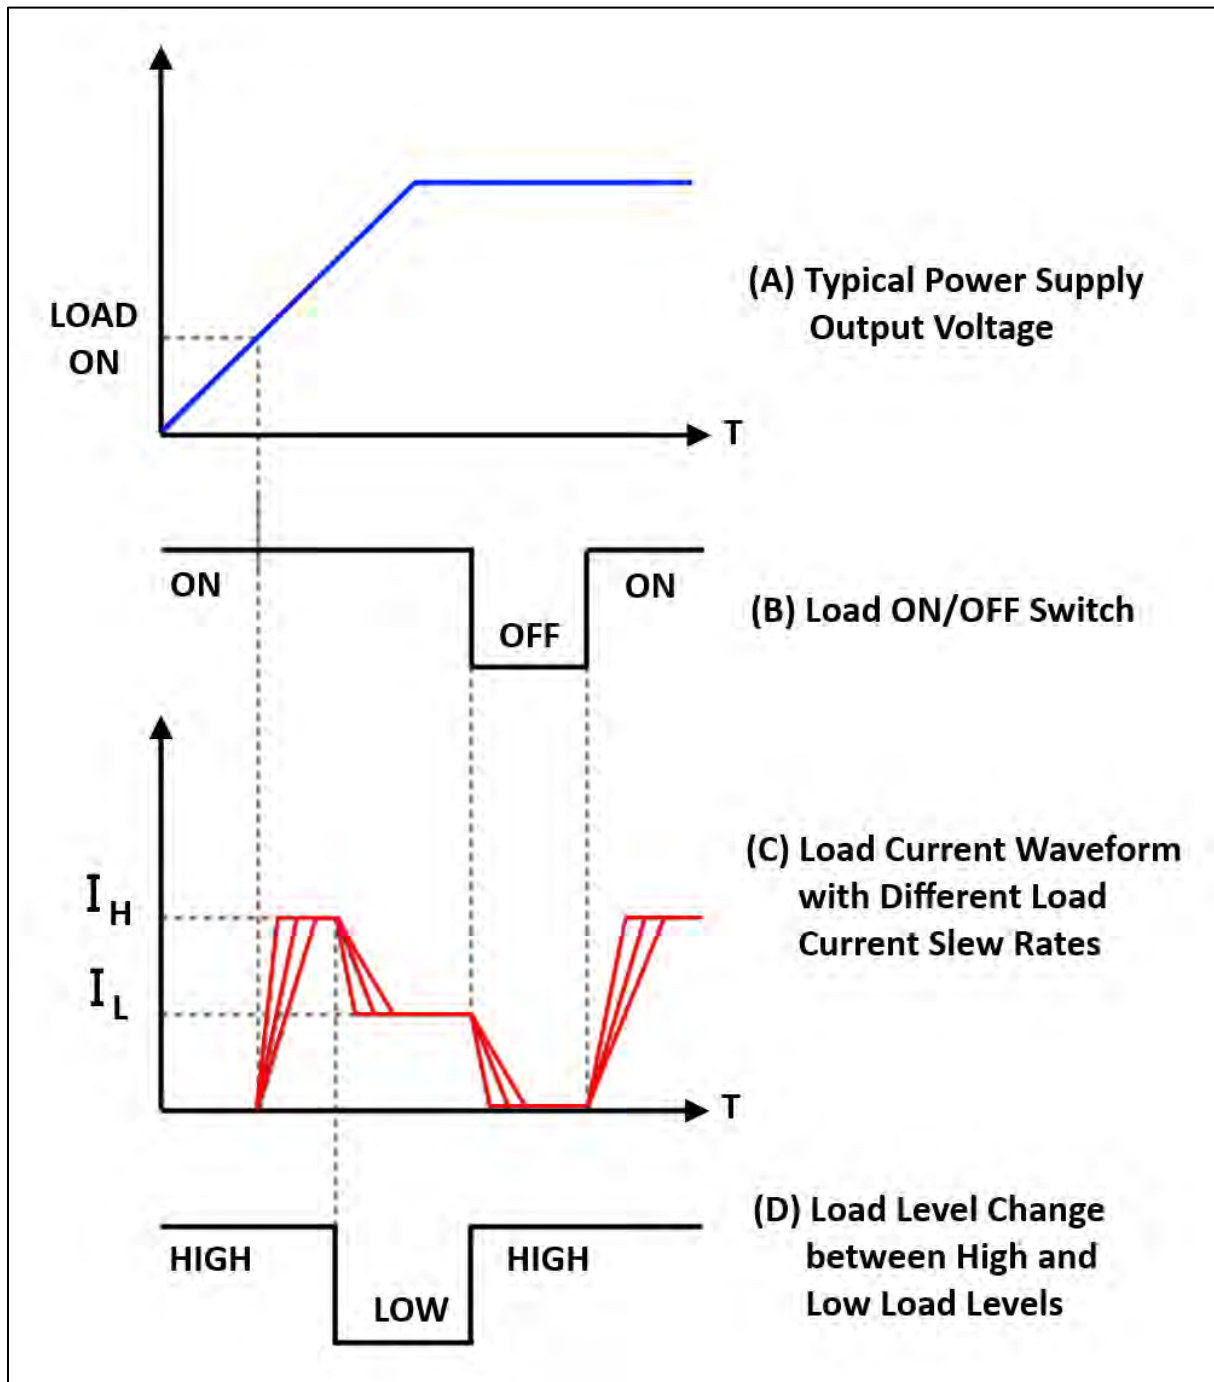


Figure 5-9: Effect of Current Slew Rate Settings on Power Supply Testing

6 Front Panel Operation

This Chapter provides an overview of front panel operation for the 5L Series DC Loads. For remote control operation, refer to Section 8 “Remote Control Programming” of this manual for an overview of available programming commands.

6.1 Front Panel Layout

The front panel layout is shown in Figure 6-1 below. Rack handles and not shown but are included with the unit and may be installed if the unit is to be rack mounted or to facilitate carrying the unit.



Figure 6-1: 5L Series DC Load Front Panel View

Large LCD readouts are located along the top left edge. User controls are located to the right of these displays. Along the bottom edge, memory bank controls are positioned next to a separate memory bank and system setting display. The power ON/OFF switch is found in the lower left corner.

The center section of the front panel is left clear to allow ambient air to enter for cooling purposes. Air is exhausted at the rear of unit aided by a series of variable speed fans.

Note: For optimal cooling, the air intake section on the front panel should not be blocked in any way. Also, some clearance of at least 6 inches / 15 cm should be allowed at the back of the unit from any wall or other obstruction so air can move freely through the load.

6.2 User Controls and Readouts

The following user controls, indicator and displays are common to all 5L Series load models. The purpose and function of each control and indicator is explained in the table below. Refer to figure for the location of each control and indicator.

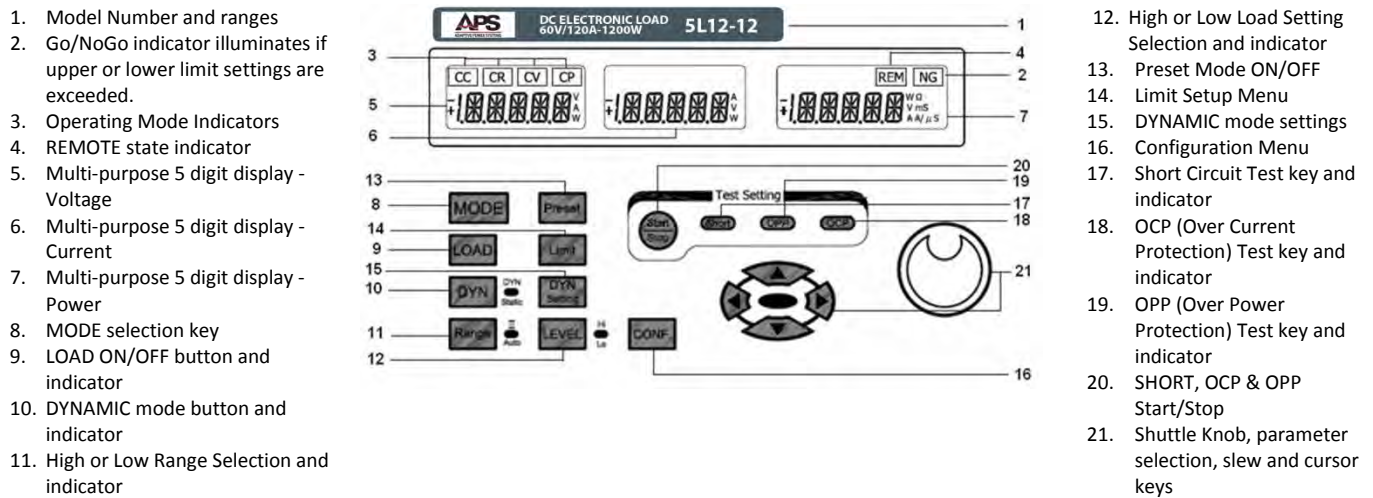


Figure 6-2: Front Panel User Controls and Indicators

The various controls and indicators are explained in more detail in the table below. The Item numbers correspond to the indices in Figure above.

#	Description	
1	Indicates the model number and key performance specifications of the load.	
2	Go/NoGo indicator illuminates if upper or lower limit settings are exceeded.	
3	<p>There are four operating modes can be selected by pressing the "MODE" key on the electronic load. The sequence is Constant Current (CC), Constant Resistance (CR), Constant Voltage (CV), Constant Power (CP) and then repeats. When pressing the "MODE" key, the CC, CR, CV, CP mode indicator will be lit respectively when the appropriate operating mode is selected.</p> <p>The operating theorem of CC, CR, CV and CP mode is described in Section 3.2, "Operating Modes".</p> <p>There are two programming ranges in CC, CR, CV and CP mode respectively; the 5L Series load can adjust to the optimal range automatically according to the programmed load level. The range selection criteria are described below for each operating mode.</p>	
	CC Mode	<p>The Range I (12A) indicates low load current operating range, Range II (120A) indicated high load current operating range. The specification of load current ranges is listed in Error! Reference source not found.. The current range is changed automatically in accordance to the programmed load current.</p> <p>The range 1 is selected automatically if the programmed load current is less than the maximum current of range 1 (12A), and will be set to range II automatically when the programmed current is higher than the maximum current of range 1 (12A).</p>

	CR Mode	<p>Range I indicates low load resistance operating range, Range II indicates high load resistance operating range. The specification of the resistance ranges is shown in Error! Reference source not found.. The resistance range is changed automatically in accordance to the programmed load resistance.</p> <p>The electronic load will switch to range I automatically if the programmed load resistance is higher than the minimum load resistance of range I, and will be set to range II when the programmed load resistance is lower than the minimum load resistance of range I.</p>
	CV Mode	<p>Range I indicates low load voltage operating range, Range II indicates high load voltage operating range The specification of voltage ranges is shown in Error! Reference source not found.. The voltage range is changed automatically in accordance to the programmed load voltage.</p> <p>Range I is selected automatically if the programmed load voltage is less than the maximum voltage of range I (6V), and will be set to range II automatically when the programmed voltage is higher than the maximum voltage of range I (6V).</p>
	CP Mode	<p>Range I indicates low load power operating range, Range II indicates high load power operating range. The power range specification is shown in Error! Reference source not found.. The power range is changed automatically in accordance with the programmed load power.</p> <p>Range I is selected automatically if the programmed load power is less than the maximum power of range I (120W), and will be set to range II automatically when the programmed power is higher than the maximum power of range I (120W).</p>
4	The Remote LCD Indicator is used to indicate the status of remote operation. Front panel operation is locked out while the remote LCD annunciator is ON. In case of Local mode or manual operation, the Remote LCD annunciator is OFF	
5	<p>The 5 digit LCD display is a multi-function display, the functions are described below:</p> <p>Normal mode:</p> <p>This is a 5 digit DVM display, measuring data of the DC input terminal or V-sense input terminal if V-sense AUTO is programmed. If V-sense ON is programmed, the display shows the voltage at the V-sense input terminal only.</p> <p>When the auto-sense of V-sense function is programmed, the auto-sense circuit of the electronic load can check if the V-sense cable is connected, If the V-sense input detected is greater than 0.7V (e.g. 5L12-24,) or not. If both conditions are true, the 5 digit DVM measures at the sense input (remote V sense), otherwise, the 5 digit DVM measures at the DC input terminals of the load (local V sense).</p> <p>Test Setting Mode:</p> <p>Short: Short test Enable and Short Setting programming: Display will show: "Short".</p> <p>OPP: OPP test Enable and OPP Setting programming: Display will show: "OPP".</p> <p>OCP: OCP test Enable and OCP Setting programming: Display will show: "OCP".</p> <p>During Short, OCP and OPP test programming, this display will show sensed voltage or load Input voltage.</p>	
6	<p>This readout can be in one of two modes: Normal or Setting mode.</p> <p>In "Normal" mode, this 5 digit LCD displays the measured current of the DC load when the load is ON.</p>	

	<p>In "Setting" mode, this LCD displays the following setting parameters. The rotary knob is used to scroll through these settings:</p> <ol style="list-style-type: none"> 1. Config ON programming: Display will individually show "SENSE", "LDon", "LDoFF" and "POLAR". 2. Limit ON programming: Display will individually show "V_Hi", "V_Lo", "A_Hi", "A_Lo", "W_Hi", "W_Lo" and "NG". 3. DYN setting ON programming: Display will individually show "T-Hi", "T-Lo", "RISE" and "FALL". 4. Short test Enable, OCP test Enable and OPP test Enable programming: Display will individually show [PRESS]. 5. Short setting programming: Display will individually show "TIME", "V-Hi" and "V-Lo". 6. OPP setting programming: Display will individually show "PSTAR", "PSTEP", "PSTOP" and "VTH". 7. OCP setting programming: Display will individually show "ISTAR", "ISTEP", "ISTOP" and "VTH". 8. Short testing programming: Display shows the current of actual load current, the unit is "A". 9. OCP testing programming: Display shows the set current, the unit is "A". 10. OPP testing programming: Display shows the set power, the unit is "W" <p>When Over current protect is tripped: Display shows [OCP].</p>
7	<p>This readout can be in one of two modes: Normal or Setting mode.</p> <p>In "Normal" mode, this 5 digit LCD displays the power dissipated by the DC load when the load is ON.</p>
	<p>In "Setting" mode, this LCD displays the following setting parameters. The rotary knob is used to scroll through these settings:</p> <ol style="list-style-type: none"> 1. PRESET ON mode display will individually show: <ol style="list-style-type: none"> a. CC mode's current programming value display, the unit is "A" b. CR mode's resistor programming value display, the unit is "Ω" c. CV mode's voltage programming value display, the unit is "V" d. CP mode's power programming value display, the unit is "W" 2. LIMIT ON mode display will individually show : <ol style="list-style-type: none"> a. V_Hi (upper limit voltage) & V_Lo (lower limit voltage) value display, the unit is "V" b. A_Hi (upper limit current) & A_Lo (lower limit current) value display, the unit is "A" c. W_Hi (upper limit power) & W_Lo (lower limit power) value display, the unit is "W" d. NG programming display will show [ON] or [OFF] 3. DYN setting ON mode display will individually show : <ol style="list-style-type: none"> a. T-Hi (level high time)& T-Lo(level low time) programming value display, the unit is "ms" b. Rise/Fall current slew rate programming value display, the unit is "(m)A/us" 4. Config ON mode display will individually show: <ol style="list-style-type: none"> a. SENSE programming display shows [ON] or [AUTO] b. LDon & LDoFF value displayed, the unit are "V" c. Load polarity value display shows [+LOAD] or [-LOAD] 5. Short test Enable, OCP test Enable and OPP test Enable mode will show [START] 6. Short Setting mode <ol style="list-style-type: none"> a. Short setting display will show "CONTI", Short time setting; the unit is "ms" b. V-Hi & V-Lo value display, the unit is "V" 7. OPP Setting mode <ol style="list-style-type: none"> a. OPP PSTAR, OPP PSTEP and OPP PSTOP value display, the unit is "W" b. OPP Vth value display, the unit is "V". 8. OCP Setting mode <ol style="list-style-type: none"> a. OCP ISTAR, OCP ISTEP and OCP ISTOP value display, the unit is "A"

	<p>b. OCP VTH value display, the unit is "V"</p> <p>9. OCP test & OPP test mode display will show [RUN]</p> <p>10. When Over power protect: Display will show [OPP]</p> <p>11. When Over temperature protect: Display will show [OTP]</p>
8	<p>MODE and CC, CR, CV, CP Indicator</p> <p>There are four operating modes that can be selected by pressing the "MODE" key. The sequence is Constant Current (CC), Constant Resistance (CR), Constant Voltage (CV), Constant Power (CP) and then repeats while pressing the "MODE" key. The CC, CR, CV and CP mode indicator will be lit respectively when the appropriate operating mode is selected.</p>
9	<p>LOAD ON/OFF key and LED</p> <p>The load input can be toggled ON/OFF using the front panel's LOAD ON/OFF key. The load current slew rate follows the slew rate setting, so the load current slew rate will change at the programmed Rise/Fall slew rate setting respectively.</p> <p>Turning the LOAD OFF does not affect the programmed settings. The LED is OFF to indicate LOAD OFF status. The LOAD will return to the previously programmed values when the LOAD key is turned to ON again.</p> <p>The Load ON LED indicates the load is ready to sink current from DC input.</p> <ol style="list-style-type: none"> 1. Load ON/OFF key: Switches from load ON to load OFF. The fall slew rate is in accordance with the slew rate setting on the front panel. 2. DC input voltage: There is a load ON and load OFF voltage control circuit in the electronic load. When the Device under Test turns ON, the output voltage of D.U.T will increase up from 0 to rated output voltage. The electronic load will start to sink current after load voltage is higher than load ON voltage configuration setting (See "Config" key). The programmed load ON voltage for the 5L Series load is from 0.1 to 25V. When the Device under Test turns OFF, the output voltage of D.U.T will decrease down to 0 volt. The electronic load will stop to sink current after load voltage is lower than load OFF voltage configuration setting (See "Config" key). The programmed load OFF voltage for the load is from 0 Vdc to the load ON voltage value.
10	<p>DYN / STA key and LED</p> <p>This Key is available in Constant Current and Constant Power mode only. In Constant Resistance and Constant Voltage mode, this key has no function and the LED is OFF. The load will default to static mode. In Constant Current and Constant Power mode, the Static or Dynamic mode is toggled by this key; the LED will be lit if the load is in Dynamic mode.</p>
11	<p>Range key and LED</p> <p>Range AUTO / II Key is for range selection. If the Range AUTO LED is OFF, the load will be in Range I or II in accordance with the actual current value. When Range the II, LED is ON, the current programming will be locked on Range II.</p>
12	<p>LEVEL key and LED</p> <p>In the Dynamic Constant Current mode, there is no effect to the load although the LED may indicate the High or Low level in the Static mode. The only fact is switching the load from Dynamic load to Static load.</p> <ol style="list-style-type: none"> 1. In Constant Current mode: The level is initially set to High. LEVEL High / Low has two levels, Low current level setting must be lower than Level High. 2. In Constant Resistance mode: The level is initially set to High. LEVEL High / Low has two


	<p>levels, Low resistance level setting must be higher than Level High.</p> <p>Note: CR Mode Level High / Low level by current perspectives.</p> <p>3. In Constant Voltage mode: The level is initially set to High. LEVEL High / Low has two levels, Low voltage level setting must be lower than Level High.</p> <p>Note: CV Mode Level High / Low has "automatic push function.</p> <p>4. In Constant Power mode: The level is initially set to High. LEVEL High / Low has two levels, Low power level setting must be lower than Level High.</p> <p>Note: Automatic push function: The Level High setting must be higher or equal than Level Low setting. When Level High is equal to LEVEL Low, it cannot be adjusted anymore. When Level High equals Level Low, the Automatic push function will adjust the Level Low value so the Level High value can continue to be adjusted.</p>
13	<p>RESET ON/OFF key and LED</p> <p>In Preset OFF state, the load input voltage is shown on the right hand side 5 digit Meter, and load input current is shown on the middle 5 digit Meter. The load input power is shown on the left hand side 5 digit Meter. The engineering unit "V", "A" and "W" LCDs will be lit respectively.</p> <p>In Preset ON state, the PRES. LED is ON, the left hand side 5 digit Meter display will be determined by the CC, Dynamic, CR, CV, and CP operating mode.</p> <p>In Preset ON condition, the 5 digit DAM indicates the set load current, which can be from front panel or remote control interface setting.</p> <ol style="list-style-type: none"> 1. In Constant Current mode: The High / Low level load current value can be preset on the left hand side 5 digit LCD display. The unit is "A" and the "A" will be lit as well. 2. In Dynamic load mode: The Thigh / Tlow parameters value of High / Low load current duration and Rise / Fall setting can be displayed on the left hand side 5 digit LCD display. The unit is "ms" and the "ms" will be lit as well. 3. In Constant Resistance mode: The High / Low level load resistance value can be preset on the left hand side 5 digit LCD display. The engineering unit is "Ω" and the "Ω" will be lit as well. 4. In Constant Voltage mode: The High / Low level load voltage value can be preset on the right hand side 5 digit LCD display. The unit is "V" and the "V" will be lit as well. 5. In Constant Power mode: The High / Low level load power value can be preset on the right hand side 5 digit LCD display. The unit is "W" and the "W" will be lit as well.
14	<p>Limit key and LED</p> <p>The Limit key setting includes the GO/NG check of Digital Voltage meter Upper/Lower limit, Current meter Upper/Lower limit, and Watt meter Upper/Lower limit within the Limit key setting. The setting sequence is shown below:</p> <p>OFF → DVM Upper/Lower limit → DAM Upper/Lower limit → DWM Upper/Lower limit → GO/NG check ON/OFF → OFF → Repeat</p>
15	<p>DYN setting key and LED</p> <p>DYN setting key is to set the Dynamic Mode parameters. They are rise, fall, Thigh and Tlow. Parameters can be changed using the rotary knob. Press any key to escape the DYN parameter setting mode.</p> <ol style="list-style-type: none"> 1. Press DYN setting key, LED will turn ON 2. Setting level High Period: Middle 5 digit LCD display will show "T-Hi", left 5 digit LCD display will show setting value. The unit is "ms" 3. Setting level Low period: Middle 5 digit LCD display will show "T-Lo", left 5 digit LCD display

	<p>will show setting value. The unit is “ms”</p> <ol style="list-style-type: none"> Setting rise time: Middle 5 digit LCD display will show “RISE”, left 5 digit LCD display will show setting value. The unit is “(m)A/us” Setting fall time: Middle 5 digit LCD display will show “FALL”, left 5 digit LCD display will show setting value. The unit is “(m)A/us”
16	<p>Config key and LED</p> <p>The Config key setting includes the Sense AUTO/ON, Load ON/OFF voltage and Load Polarity. The setting sequence is shown below.</p> <p>OFF → SENSE AUTO/ON → Load ON/OFF Voltage → Polarity setting → OFF → Repeat</p>
17	<p>SHORT key and LED Functions</p> <ol style="list-style-type: none"> Short test function Enable/Disable Key: Press the “SHORT” key to enable the short test function. The indicator LED will be lit. The LCD display shows “SHORT” on the right hand side 5-digit LCD display, shows “PRESS” on the middle 5-digit LCD display and shows START” on the left hand side 5-digit LCD display. Short test function parameter setting key: There are three parameters for the SHORT test function. The parameters are: TIME, V-Hi and V-Lo. Press the “SHORT” key again to set short test time when the SHORT test function is enabled. Press SHORT key again to proceed to the next parameter and follow the sequence of TIME, V-Hi, V-Lo and Disable. Press any another key to exit and save the SHORT settings. The SHORT test parameter descriptions are as follows: <ol style="list-style-type: none"> TIME: Setting the short test time. The LCD display shows “SHORT”, “TIME” and CONT (or initial setup value) on the right to left 5-digit LCD displays. The setting range is “CONTI” which means continuous or 100ms to 10000ms in 100ms steps. Turn the rotary knob clockwise to adjust this the setting. The short test will have no time limitation when set to “CONTI” until the “START/STOP” key is pressed to stop the short test. V-Hi: Short test voltage check upper limitation setting. The LCD displays show “SHORT”, “V-Hi” and 0.00V (or initial setup value) from right to left. The V-Hi setting range is from 0.00 to 60.00V in 0.01V steps and can be adjusted by turning the rotary knob. V-Lo: Short test voltage check lower limitation setting. The LCD displays show “SHORT”, “V-Lo” and 0.00V (or initial setup value) from right to left. The V-Lo setting range is from 0.00 to 60.00V in 0.01V steps and can be adjusted by turning the rotary knob. <p>Note: The V-Hi and V-Lo parameters of the SHORT test are different from the V-Hi and V-Lo settings of the LIMIT function.</p> START/STOP Test key. Press the “START/STOP” key to start or stop the SHORT test when SHORT test function is enabled. The Load will go to “ON” state automatically when the “START/STOP” key is pressed and start the SHORT test. The Load will go to “OFF” state automatically when the “START/STOP” key is pressed to stop the short test. However, the Load will stay in the “ON” state if the load was “ON” before SHORT test execution. The SHORT test function is used to the UUT’s short circuit protection function. The SHORT test will sink the load’s full scale current until the UUT’s voltage drop is between the set V_Hi and V_Lo limits. The left hand side 5-digit LCD display will shows “PASS”, otherwise it will show “FAIL”. Press any key to return to normal mode LCD display.
18	<p>OCP key and LED Functions</p>


	<ol style="list-style-type: none"> 1. OCP test function Enable/Disable Key. Press the “OCP” key to enable the OCP test function and the indicator LED will be lit. The LCD display shows “OCP” on right 5-digit LCD display, shows “PRESS” on the middle 5-digit LCD display and shows “START” on left 5-digit LCD display. 2. OCP test function parameter settings. There are four parameters for the OCP test function. These parameters are: ISTAR, ISTEP, ISTOP and Vth. Press the “OCP” key again to set the OCP test parameter ISTAR(start current point) Press the “OCP” key again to proceed to the next parameter in order of ISTEP, ISTOP, Vth and Disable. Press any another key to exit the and save the OCP settings. The OCP test parameter descriptions are as follows: <ol style="list-style-type: none"> a. ISTAR: Setting the start current point. The LCD display shows “OCP”, “ISTAR” and 0.000A (or initial setup value) from right to left on the 5-digit LCD displays. The setting range is 0.000A to the full scale of the CC mode specification. This parameter can be adjusted by turning the rotary knob. b. ISTEP: Setting the increment current step size. The LCD display shows “OCP”, “ISTEP” and 0.000A (or initial setup value) from right to left on the 5-digit LCD displays. The setting range is 0.000A to the full scale of the CC mode specification. This parameter can be adjusted by turning the rotary knob. c. ISTOP: Setting the stop current point. The LCD display shows “OCP”, “ISTOP” and 120.0A (actual value depends on 5L Series model) from right to left on the 5-digit LCD displays. The setting range is 0.000A to the full scale of the CC mode specification. This parameter can be adjusted by turning the rotary knob. d. Vth: Setting the threshold voltage. The LCD display shows “OCP”, “Vth” and 0.50V (or initial setup value) from right to left on the 5-digit LCD displays. The setting range is 0.00V to the full scale of the Voltage specification. This parameter can be adjusted by turning the rotary knob. 3. START/STOP Test key. Press START/STOP key to start or stop the OCP when the OCP test function is enabled. The Load will go to the “ON” state automatically when the “START/STOP” key is pressed and start the OCP test. The Load will return to the “OFF” state automatically when the “START/STOP” key is pressed to stop the OCP test. The Load will remain in the “ON” state if the load was “ON” before OCP test execution. The OCP test function tests the UUT’s over current protection function. The OCP test will start sinking current from I-START and increase by ISTEP current until the UUT’s output voltage drops below the threshold voltage(V-th setting), and the OCP trip point is between the A_Hi and A_Lo limit settings. The left hand side 5- digits LCD display will shows "PASS", otherwise it will show "FAIL". Press any key to return to normal mode LCD display.
19	<p>OPP key and LED Functions</p> <ol style="list-style-type: none"> 1. OPP test function Enable/Disable Key. Press the “OPP” key to enable the OPP test function and the indicator LED will be lit. The LCD display show “OPP” on right 5 left LCD display, shows “PRESS” on middle 5-digit LCD display and shows “START” on the left hand side 5-digit LCD display. 2. OPP test function parameter setting key. There are four parameters for the OPP test function. These parameters are: PSTAR, PSTEP, PSTOP and Vth. Press the “OPP” key again to set the OPP test parameter PSTAR (start power point). Press the “OPP” key again to proceed to the next parameter in order of PSTEP, PSTOP, Vth and Disable. Press any other key to exit and save the OPP setting. The OPP test parameter descriptions are as follows: <ol style="list-style-type: none"> a. PSTAR: setting the start power, The LCD display shows “OPP”, “PSTAR” and 0.00W (or

	<p>initial setup value) from right to left 5 digits LCD display, the setting range is 0.00W to the full scale of the CP mode specification. The setting is by rotating the setting knob.</p> <p>b. STEP: setting the increment step power, The LCD display shows "OPP", "PSTEP" and 0.00W (or initial setup value) from right to left 5 digits LCD display, the setting range is 0.00W to the full scale of the CP mode specification. The setting is by rotating the setting knob.</p> <p>c. PSTOP: setting the stop power, The LCD display shows "OPP", "PSTOP" and 1200.0W (or initial setup value) from right to left 5 digits LCD display, the setting range is 0.00W to the full scale of the CP mode specification. The setting is by rotating the setting knob.</p> <p>d. Vth: Setting threshold voltage; The LCD display shows "OPP", "Vth" and 0.50V (or initial setup value) from right to left 5 digits LCD display, the setting range is 0.00V to the full scale of the Voltage specification. The setting is by rotating the setting knob.</p> <p>3. START/STOP Test key. Press START/STOP key to start or stop the OPP test when the OPP test function is enabled.</p> <p>The Load will go to the "ON" state automatically when the "START/STOP" key is pressed and start the OPP test. The Load will return to the "OFF" state automatically when the "START/STOP" key is pressed to stop the OPP test. The Load will remain in the "ON" state if the load was "ON" before OPP test execution.</p> <p>The OPP test function tests the UUT's over power protection function. The OPP test will start sinking current from PSTART and increase power by PSTEP until the UUT's output voltage drops below the threshold voltage (V-th setting), and the OPP trip point is between the P_Hi and P_Lo limit settings. The left hand side 5- digits LCD display will shows "PASS", otherwise it will show "FAIL".</p> <p>Press any key to return to normal mode LCD display.</p>
20	<p>START/STOP key Operation</p> <ol style="list-style-type: none"> 1. Press START/STOP key to start or stop the short test by SHORT、 OCP & OPP test setting parameter when SHORT、 OCP & OPP test function is enabled. 2. The Load will goes to "ON" automatically when press START/STOP key to start the short test and the Load will goes to "OFF" automatically when press START/STOP key to stop the short test. The Load will stay to "ON" If load was "ON" before short test. 3. The SHORT、 OCP & OPP test function for test the UUT's short protection, The SHORT, OCP & OPP tests will sink the load's full scale current or power to apply the test condition. If the UUT's voltage drop is between the V_Hi and V_Lo limits programmed, the left 5-digit LCD display will shows "PASS", otherwise it will show "FAIL". <p>Press any key to return to normal mode LCD display.</p>
21	<p>Rotary Shuttle Knob</p>


Right Knob: Adjust flash digit value clockwise to increase set value.

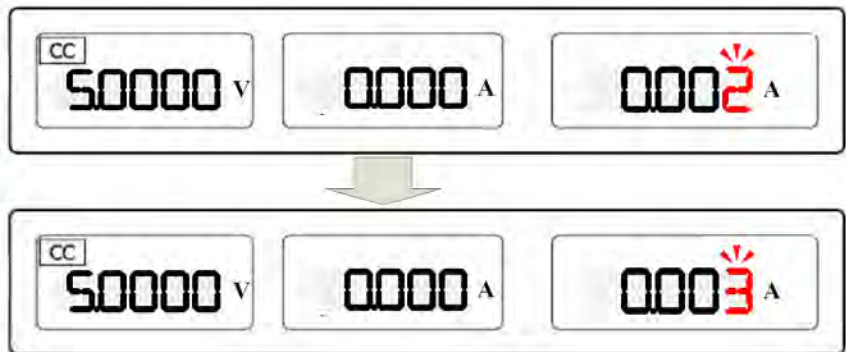



Right Knob: Adjust flash digit value counter-clockwise to increase set value.

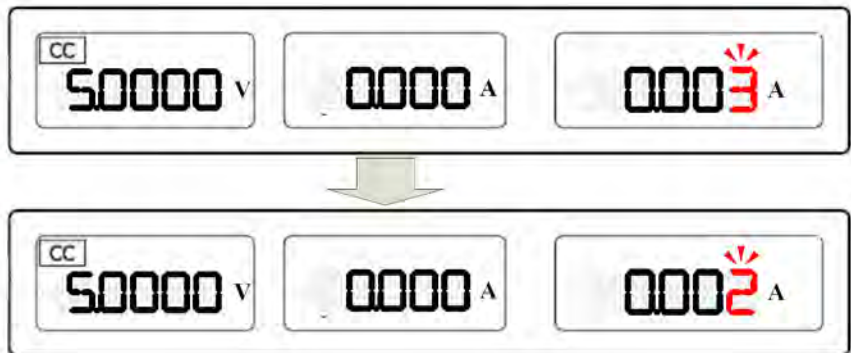


Left Cursor key: Moves the flashing digit over to the left by one position.

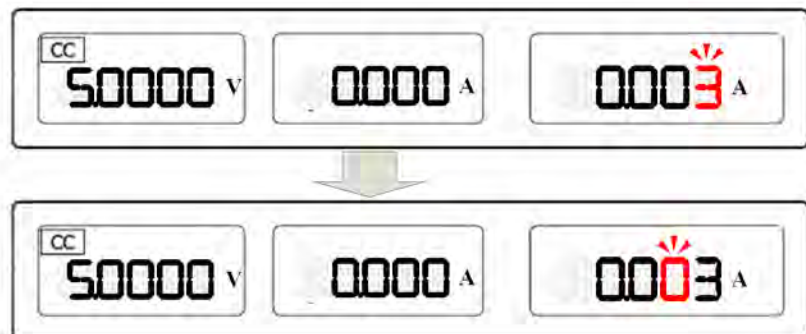


Right Cursor key: Moves the flashing digit over to the right by one position.

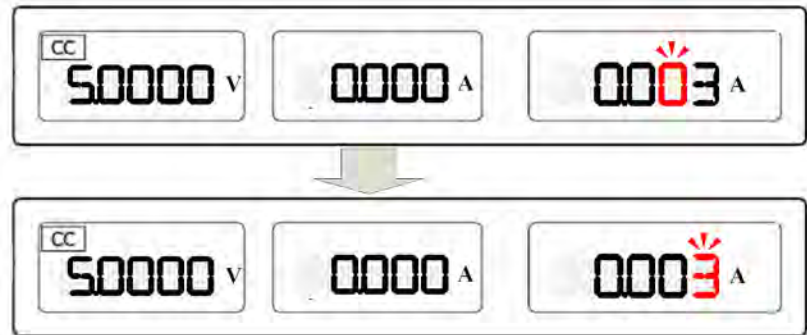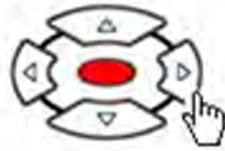

Up Cursor key: Increments flashing digit setting value by one count.

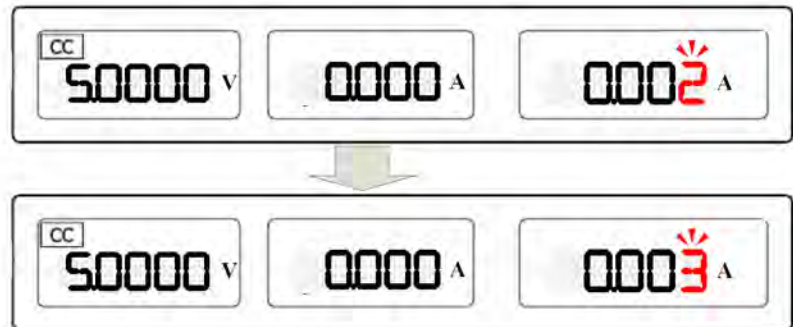

Down Cursor key: Decrements flashing digit setting value by one count.

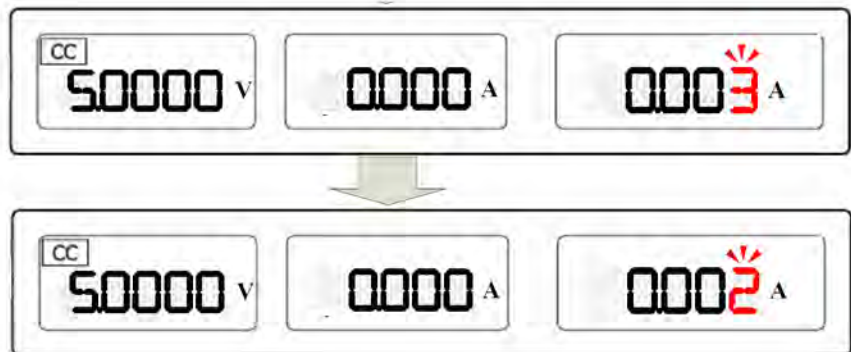


NOTE:


- In CR MODE, the Right and Up Cursor keys decrease setting value.
- In CR MODE, the Left and Down Cursor keys increase setting value.

Table 6-1: Front Panel Display and Keyboard Functions

6.3 Bottom LCD Display

The LCD display located along the bottom of the load will illuminate fully when power is applied. Please refer to the relevant section number below for a brief description of the information displayed.

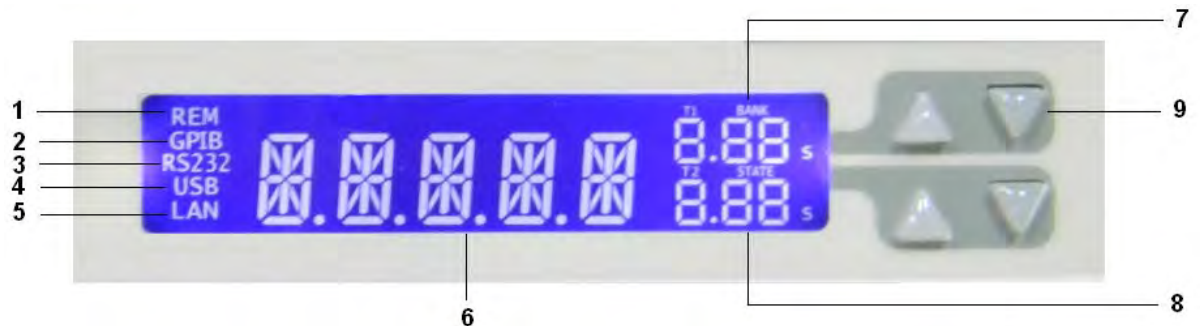

#	Displays	Description
1	Remote State	The REM annunciator will be lit when load is being controlled via the GPIB/RS232/USB or LAN -Interface. To bring back the unit to front panel control, the LOCAL button on the Right hand side of the mainframe can be pressed
2	GPIB Installed	The GPIB annunciator will be permanently lit if the GPIB Interface option is detected.
3	RS232 Installed	The RS232 annunciator will be permanently lit if the RS232 Interface option is detected.
4	USB Installed	The USB annunciator will be permanently lit if the USB Interface option is detected.
5	LAN Installed	The LAN annunciator will be permanently lit if the LAN Interface option is detected.
6	Status Display	At power up, the LCD will display "Nor" which indicates NORMAL operation. The message displayed will change if a setting such as WAKE-UP or AUTO-SEQUENCE is selected. 
7	BANK T1 / Display	The upper digits on the right hand side of the screen relate to the memory BANK in normal mode. There are 15 BANKS which can be selected in turn by pressing the upper pair of arrow keys. Each BANK has 10 separate memory STATES (locations) which are selected with the lower pair of arrow keys. When in auto-sequence mode, T1 is displayed. T1 is the test time. The test time can be adjusted using the upper arrow keys between 0.1sec and 9.9sec in 100ms steps. Please note that during the T1 test time, the mainframe LCD will not flag

#	Displays	Description
		"NG". The T2 setting is used for checking the no-go (NG) function according to the voltage, current or power limits set in the LIMIT menu.
8	STATE / T2 Display	<p>The lower digits relate to the memory STATE (location) in normal mode. There are 10 memory STATES (locations) which can be selected in turn by pressing the Lower arrow keys. These memory STATES are supplemented by the 15 memory BANKS, giving the user a total of 150 memory locations.</p> <p>When in auto-sequence mode the T2 function is displayed. T2 is the time that NG/GO is checked according to the LIMITS that have been set for that test step. So if the NG flag has been enabled and the load measures values outside the preset LIMIT values, then the test will stop during T2. The mainframe's LCD will flash "NG" and the test will stop at that step in the auto-sequence. At this point, the user can either press the ENTER key to carry on to the next step or the EXIT key to abort the auto-sequence.</p>
9	Arrow Buttons	The ARROW keys are used to increase or decrease setting values.

Table 6-2: Memory Bank LCD Display and Selection Keys

6.4 Bottom Keypad Description

This paragraph covers the keypad located on along the bottom of the chassis' front panel. Please refer to the relevant section number below for a brief description of the purpose for each key.



#	Key	Description
1	EXIT, TEST, ENTER and EDIT	The 4 buttons marked EXIT, TEST, ENTER and EDIT are used to set and execute an auto-sequence.
2	1 - 10	The numbered buttons 1 through 10 are the memory states (locations) for storing or recalling a load set up. They are also used to select a previously saved Auto-sequence when in test mode.
3	SYSTEM	Pressing the system button once allows the GPIB address to be changed by using the arrow keys. Pressing the system button again allows the RS232 baud rate to be adjusted. With the third press of the system button the buzzer can be switched On/Off. Another press puts the LCD back to the Normal state as shown below.
4	LOCAL	The local button is used to exit the remote mode and bring the unit back to front panel control
5	STORE	The store button is used to save the load configuration.
6	WAKE UP	The wake up button is used to recall the load configuration at mains power on.


Table 6-3: Memory Bank Control Keypad

6.5 Setting System Parameters

The SYSTEM button allows the setting for GPIB address, RS232 and Buzzer mode.


GPIB Settings

To set the GPIB address, you must press the SYSTEM key once. The LCD will display the current address. The arrow keys are used to change the address. Once the required address is reached, press the ENTER or STORE button to save the new address. The exit key can be pressed to return to the normal screen.

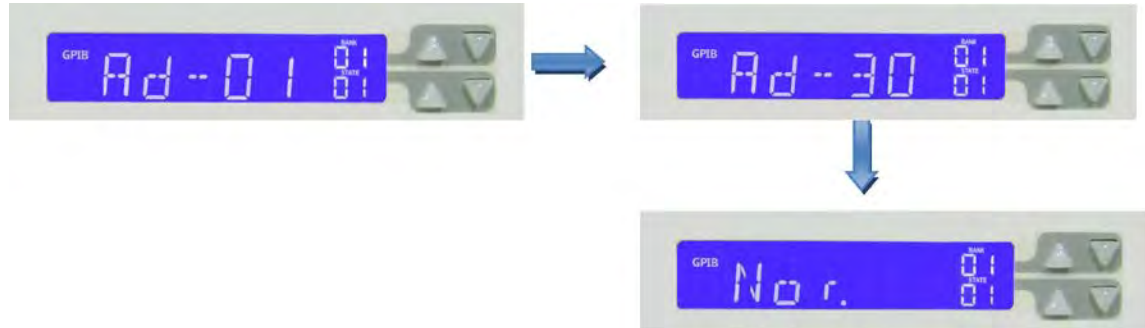

RS232 Settings

To set the RS232 baud rate you must press the SYSTEM key twice. The LCD will display the current baud rate. The upper arrow keys are used to change the baud rate. Once the required value is reached, press ENTER or STORE button to save the new setting. The EXIT key can be pressed to return to the normal screen.

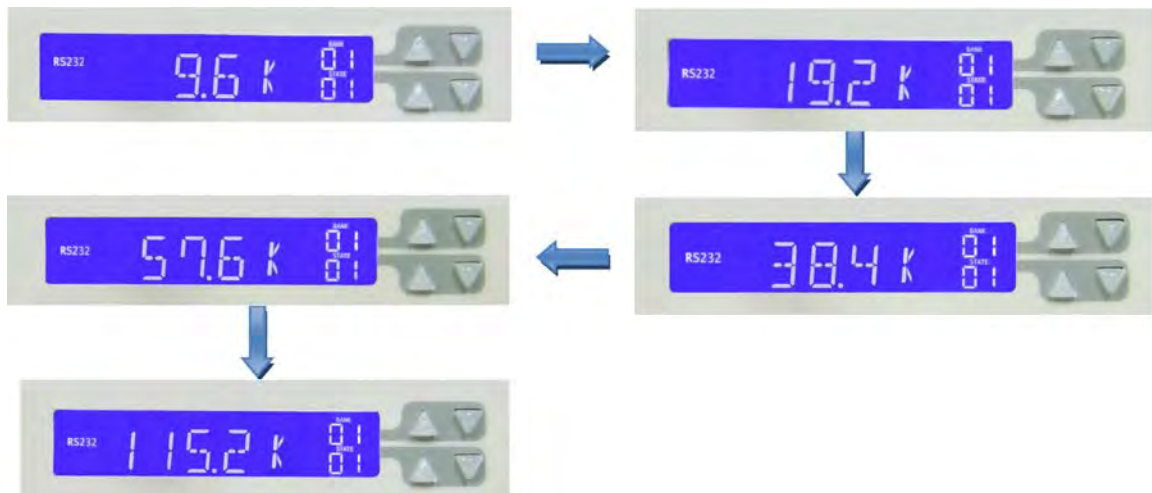

Buzzer Settings

To set the buzzer on/off you need to press the SYSTEM key 3 times. The arrow key is used to change the buzzer state. The buzzer is used to signal that an automatic sequence has ended or failed. To save the setting press ENTER or STORE.



TBD : USB and LAN Settings

6.6 Settings STORE/RECALL Operation

The function keys on the front panel of the load are used to STORE or RECALL up to 10 Electronic Load STATES. Each state can contain up to 15 BANKS for setup data for a total of 150 electronic load settings. Each setting can store a variety of electronic load status and settings.

6.6.1 Storing a Load Setup

To store a new load setting from the front panel, proceed as follows:

1. Adjust the desired electronic load module to desired status and settings.
2. With the UP and DOWN keys, select the bank (1 to 15) in which you want to store the set up.
3. Press the store key. The store key starts flashing. (If you no longer wish to store a setting, you can press the EXIT button or wait about 20 seconds for the unit to automatically exit the store operation).
4. While the STORE light is flashing, press one of the number keys (1 to 10) where the set-up is to be saved. The STORE light will go out and the numbered key pressed will stay illuminated. This indicates the set-up has been saved to that location.

6.6.2 Recalling a Load Setup

To recall a load setting from the front panel, proceed as follows:

1. First select the memory bank by using the UP and DOWN arrow buttons.
2. Pressing one of the numbered STATE buttons will recall the previously saved load configuration.
3. The electronic load will immediately switch to the previously saved set-up changing the load values, operation mode and limits accordingly.

6.7 WAKE-UP Function

The wake up function automatically recalls a setting at mains power on. To use this feature, proceed as follows:

1. Press WAKE UP once or twice so that message SET is displayed on the bottom LCD display



2. Select the memory location (BANK and STATE) that is to be used at power on. Once the correct location has been selected, press the STORE key. The example below shows BANK 01 STATE 01. After pressing the STORE key, the LCD will revert to the normal (Nor) message.



3. Use the mains switch on the front panel to power down the unit.
4. At mains power on the unit will automatically recall the previously saved set-up from the selected memory location.
5. To clear the settings, press the WAKE UP key once or twice so that the LCD shows clear. Now press the STORE key to cancel the previously set WAKE UP function.



6.8 AUTO-SEQUENCING


An auto-sequence allows the user to step through previously saved set-ups stored in the mainframe's memory. Up to 9 auto-sequences can be saved. Each auto-sequence can consist of up to 16 steps. There are two modes in the auto-sequence function:

- EDIT mode
- TEST mode

6.8.1 AUTO-SEQUENCE – EDIT MODE

To create a new auto-sequence or edit an existing one, proceed as follows:

1. Press the EDIT key.
2. The EDIT button will become lit and the LCD will display "FX-XX". This field is made up as follows:
 - a. The "FX" part indicates the auto-sequence number (F1 to F9 are possible). The numbered STATE keys are used to select the auto-sequence number.
 - b. The "XX" part is the test step. (1 through 16)

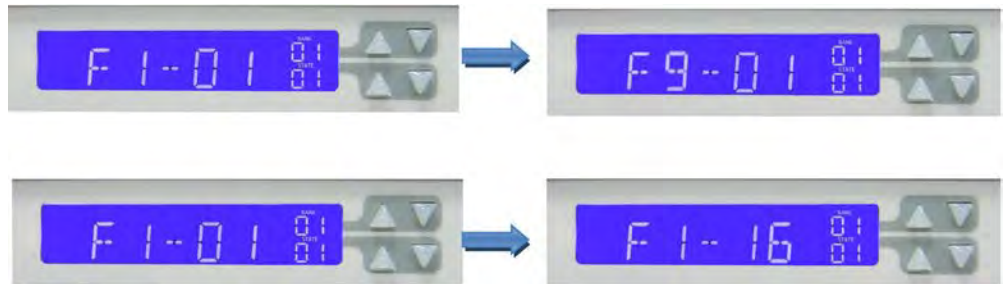


3. Once the auto-sequence number is selected, the memory location of the first test step can be selected. The arrow keys next to the bottom LCD are used to select the memory BANK and STATE. Once the desired location has been selected, press ENTER.
4. Next the total test time for that step (T1+T2) can be entered. T1 is the test time without checking the NG/LIMIT settings. T2 is the test time where if NG is ON the LIMIT settings will be checked. The upper arrow keys are used to set T1 and the lower arrow keys are used to set T2. The time setting can be adjusted in the range of 0.1s to 9.9s in 100ms increments. Please refer to Table 4 for a definition of T1 and T2.



5. Press ENTER to set the next setting step. Repeat the same process for each setting steps. Up to 16 steps can be entered. Once the T1 and T2 settings have been

entered for the final step press the STORE button. The LCD will now show REP.

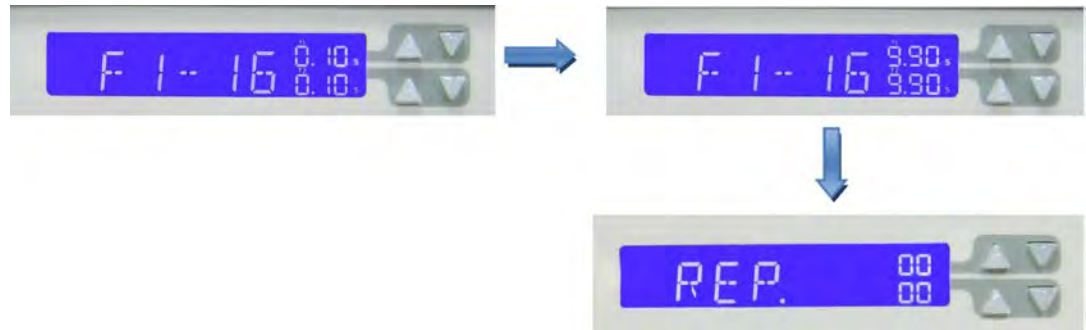

6. The REP function allows the auto-sequence to be repeated a number of times. Both sets of arrow keys are used to set the number of repeats between 0 and 9999 times. Once the number of repeats has been set, press the STORE button to save the auto-sequence.



Example:

The following screen shot shows the number of repetitions has been set to 2023.



The above Auto-Sequence Edit procedure is illustrated in the flow chart shown below.

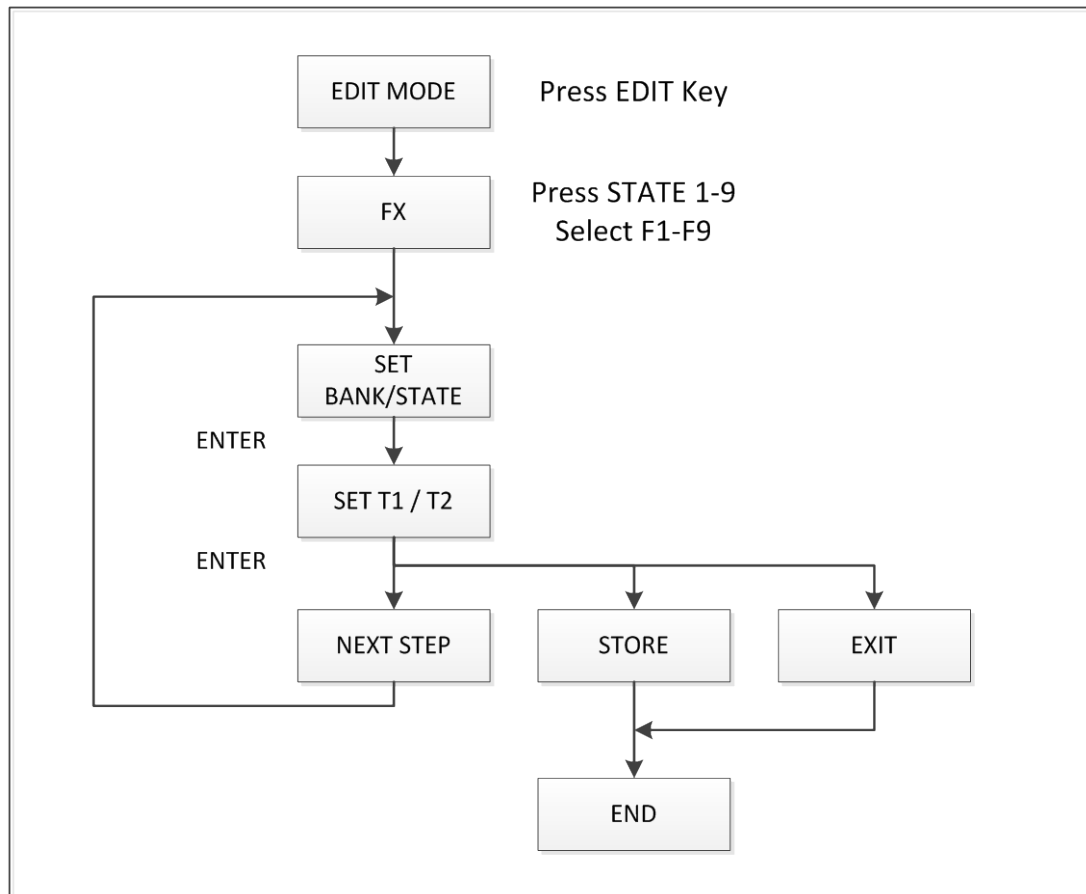


Figure 6-3 Auto Sequence Edit Mode Procedure Flow Chart

6.8.2 AUTO-SEQUENCE – TEST MODE

To execute an existing auto-sequence, proceed as follows:


1. Pressing the TEST button will cause the TEST switch to illuminate and the LCD to show the last selected Auto-sequence number (F1 to F9). The numbered STATE buttons (1-9) are used to change the Auto-sequence number (F1 ~ F9). Once the desired auto-sequence has been selected press ENTER to start the test.



2. The LCD will display "SXX", where "XX" is the actual STEP being presently tested. If during a given test step the values measured are outside the preset limits (and the NG Function has been enabled) then the LCD will flash "NG" and the test is suspended.
3. The user can press the ENTER button to continue the remaining test steps. Alternatively, the EXIT button may be used to leave the test mode.
4. If all the test steps are OK, the LCD displays "PASS". If the unit under test fails any of the test steps the mainframe's LCD will show "FAIL".
5. If the buzzer is set to ON, the PASS result is also accompanied by a single buzzer call out. If the test shows FAIL the buzzer will sound twice.
6. When the test is completed, the user can press the ENTER key again to start the test again. Alternatively, the EXIT button may be used to leave the test mode.


Example 1:

Once editing of the 16-step test is completed, press the TEST key. The unit will then automatically run through the test steps S01 to S16 in order. If all tests steps have been completed then the LCD will show PASS.

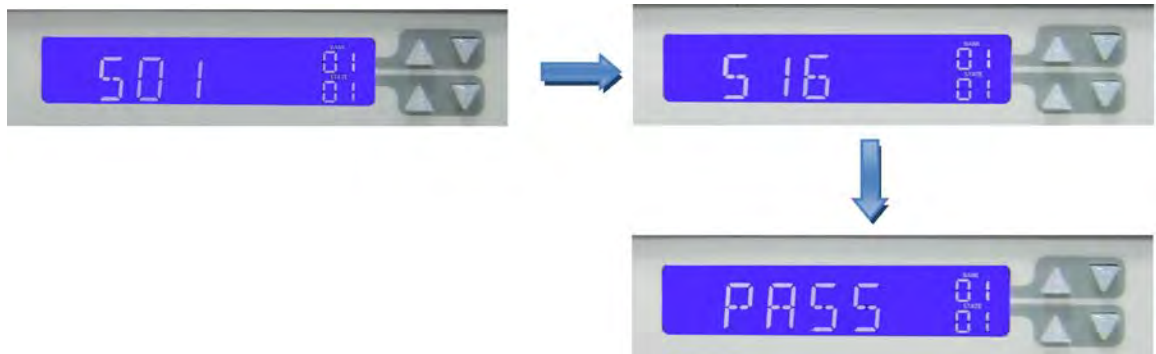


Example 2:

Once the edit mode has been used to set the 16-step auto-sequence, the user can press the TEST key. If the test fails at one of the test steps the LCD will flash “NG” and the test will stop. The user can then press ENTER key to continue the test or press the EXIT button to leave the test mode.

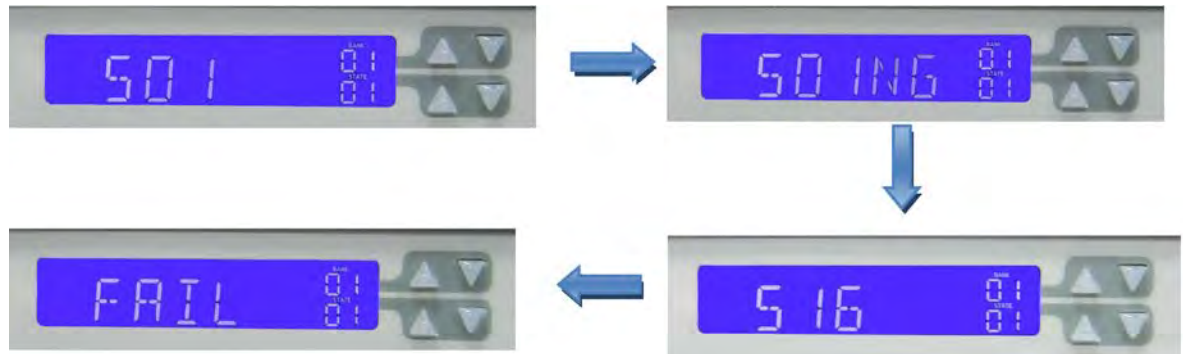

The Auto-sequence Test Process is illustrated in the flow chart shown below.

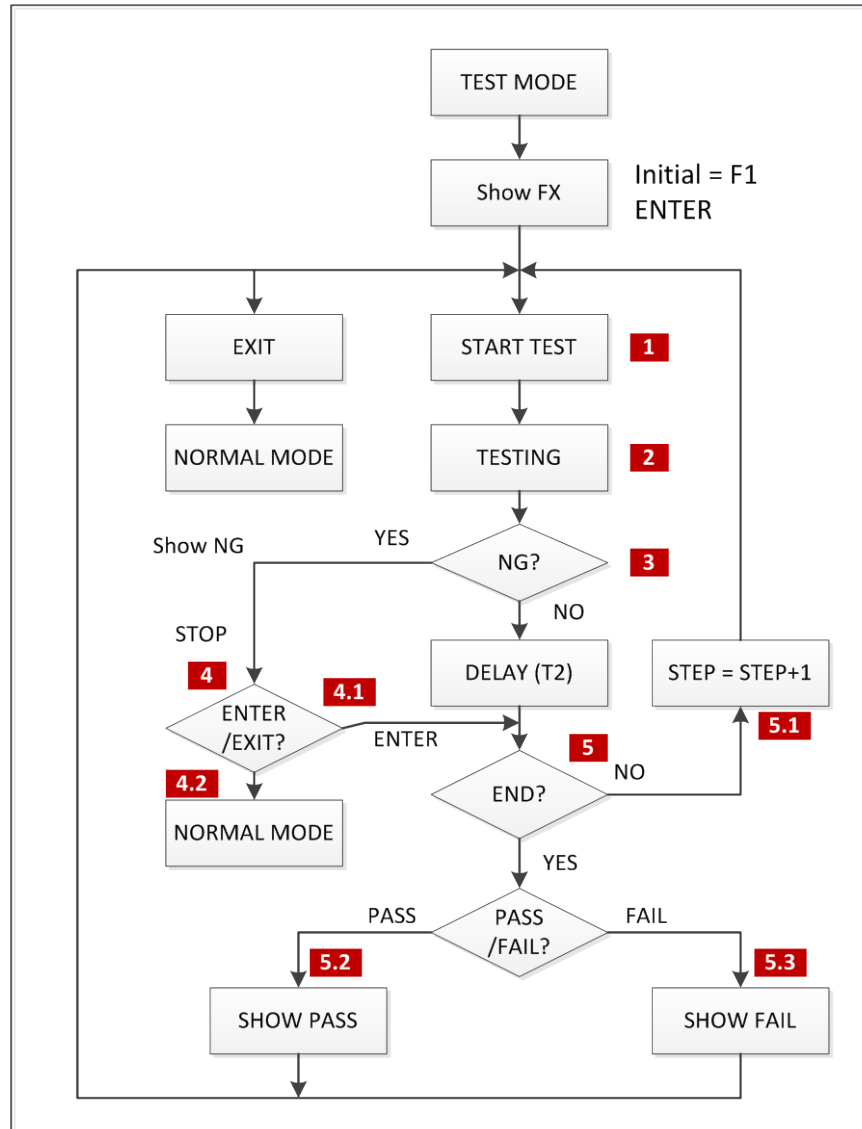

Process Steps:

1. Recall selected setup from F1-F9 memory
2. Check results against GO/NG criteria
3. Suspend testing if results is NG
4. Wait for operator Input
 - a. If the operator pressed ENTER, continue test sequence
 - b. If the operator pressed EXIT, abort test sequence and return to Normal Mode
5. If test is GO, is this the last step in the sequence?
 - a. If no, then increment to next step and continue
 - b. If yes, then if all test steps passed, show PASS

- c. If yes but at least one test step failed, show FAIL

6.9 Initial Power-on Settings

When power up the 5L Series electronic loads, the initial load settings after power ON are as shown in the tables below respectively by model number. These are the factory default settings.

6.9.1 Model 5L06-12 Power-on Settings

Item		Initial value	Item	Initial value
CC L+Preset		0.000 A	V_Hi	60.000 V
CC H+Preset		0.000 A	V_Lo	0.000 V
CR H+Preset		30000 Ω	I_Hi	120.00 A
CR L+Preset		30000 Ω	I_Lo	0.00 A
CV H+Preset		60.000 V	W_Hi	600.00 W
CV L+Preset		60.000 V	W_Lo	0.00 W
CP L+Preset		0.000 W	SENSE	Auto
CP H+Preset		0.000 W	LD-ON	1.0 V
DYN	T HI	0.050 ms	LD-OFF	0.500 V
	T LO	0.050 ms	POLAR+LOAD	
	RISE	8.0 mA/ μ s	SHORT	Disabled
	FALL	8.0 mA/ μ s	OPP	Disabled
			OCP	Disabled

Table 6-4: Model 5L06-12 Power-on Settings

6.9.2 Model 5L12-12 Initial Settings

Item		Initial value	Item	Initial value
CC L+Preset		0.000 A	V_Hi	60.000 V
CC H+Preset		0.000 A	V_Lo	0.000 V
CR H+Preset		30000 Ω	I_Hi	120.00 A
CR L+Preset		30000 Ω	I_Lo	0.00 A
CV H+Preset		60.000 V	W_Hi	1200.00 W
CV L+Preset		60.000 V	W_Lo	0.00 W
CP L+Preset		0.000 W	SENSE	Auto
CP H+Preset		0.000 W	LD-ON	1.0 V
DYN	T HI	0.050 ms	LD-OFF	0.500 V
	T LO	0.050 ms	POLAR+LOAD	
	RISE	8.0 mA/ μ s	SHORT	Disabled
	FALL	8.0 mA/ μ s	OPP	Disabled
			OCP	Disabled

6.9.3 Model 5L12-24 Initial Settings

Item		Initial value	Item		Initial value
CC L+Preset		0.000 A	LIMIT	V_Hi	60.000 V
CC H+Preset		0.000 A		V_Lo	0.000 V
CR H+Preset		15000 Ω		I_Hi	240.00 A
CR L+Preset		15000 Ω		I_Lo	0.00 A
CV H+Preset		60.000 V		W_Hi	1200.00 W
CV L+Preset		60.000 V		W_Lo	0.00 W
CP L+Preset		0.000 W	CONFIG	SENSE	Auto
CP H+Preset		0.000 W		LD-ON	1.0 V
DYN	T HI	0.050 mS		LD-OFF	0.500 V
	T LO	0.050 ms		POLAR+LOAD	
	RISE	0.016 A/ μ s		SHORT	Disabled
	FALL	0.016 A/ μ s		OPP	Disabled
			OCP		Disabled

6.9.4 Model 5L18-12 Initial Settings

Item		Initial value	Item		Initial value
CC L+Preset		0.000 A	LIMIT	V_Hi	60.000 V
CC H+Preset		0.000 A		V_Lo	0.000 V
CR H+Preset		30000 Ω		I_Hi	120.00 A
CR L+Preset		30000 Ω		I_Lo	0.00 A
CV H+Preset		60.000 V		W_Hi	1800.00 W
CV L+Preset		60.000 V		W_Lo	0.00 W
CP L+Preset		0.000 W	CONFIG	SENSE	Auto
CP H+Preset		0.000 W		LD-ON	1.0 V
DYN	T HI	0.050 ms		LD-OFF	0.500 V
	T LO	0.050 ms		POLAR+LOAD	
	RISE	8.0 mA/ μ s		SHORT	Disabled
	FALL	8.0 mA/ μ s		OPP	Disabled
			OCP		Disabled

6.9.5 Model 5L18-24 Initial Settings

Item		Initial value	Item		Initial value
CC L+Preset		0.000 A	LIMIT	V_Hi	60.000 V
CC H+Preset		0.000 A		V_Lo	0.000 V
CR H+Preset		15000 Ω		I_Hi	240.00 A
CR L+Preset		15000 Ω		I_Lo	0.00 A
CV H+Preset		60.000 V		W_Hi	1800.00 W
CV L+Preset		60.000 V		W_Lo	0.00 W
CP L+Preset		0.000 W	CONFIG	SENSE	Auto
CP H+Preset		0.000 W		LD-ON	1.0 V
DYN	T HI	0.050 ms		LD-OFF	0.500 V
	T LO	0.050 ms		POLAR+LOAD	
	RISE	0.016 A/ μ s		SHORT	Disabled
	FALL	0.016 A/ μ s		OPP	Disabled
			OCP		Disabled

6.9.6 Model 5L18-36 Initial Settings

Item		Initial value	Item		Initial value
CC L+Preset		0.000 A	LIMIT	V_Hi	60.000 V
CC H+Preset		0.000 A		V_Lo	0.000 V
CR H+Preset		10020 Ω		I_Hi	360.00 A
CR L+Preset		10020 Ω		I_Lo	0.00 A
CV H+Preset		60.000 V		W_Hi	1800.00 W
CV L+Preset		60.000 V		W_Lo	0.00 W
CP L+Preset		0.000 W	CONFIG	SENSE	Auto
CP H+Preset		0.000 W		LD-ON	1.0 V
DYN	T HI	0.050 ms		LD-OFF	0.500 V
	T LO	0.050 ms		POLAR+LOAD	
	RISE	0.024 A/ μ s		SHORT	Disabled
	FALL	0.024 A/ μ s		OPP	Disabled
			OCP		Disabled

7 Rear Panel Overview and Connectors

This section describes the rear panel layout of the 5L Series DC Loads.

7.1 DC INPUT Terminals

The positive and negative terminals for load input connection are located in the upper left hand corner of the rear panel when facing the back of the chassis.

Note: Always refer to Section 2.3 “Safety Information” and Section 2.4 “Safety Notices” before making any load connections.

7.1.1 Wire Size

A major consideration in making input connection is the wire size. The minimum wire size is required to prevent overheating and to maintain good regulation. It is recommended that the wires are sized large enough to limit the voltage drop at the maximum current rating of the DC load to less than 0.5V per lead.

7.1.2 Connecting a UUT

When setting up for a new test and connecting any equipment to the DC load, proceed as follows:

1. Always make sure the DC Load is turned OFF at the POWER switch when making any wire connections.
2. Check that the output of the equipment under test is **OFF**.
Note: Some power equipment’s output may still be energized even if the equipment has been turned off or its output is turned off. This is especially true for DC Power Supplies.

Note: When working with batteries, it is recommended to provide a suitable disconnect relay or switch so the load connection can be disconnected from the battery for handling purposes.

3. Connect one end of the load wires to the load input terminals on the rear panel.
4. Check the polarity of the connections and connect the other end of the load wires to the output terminal of the equipment under test.
5. When connecting multiple loads to the same EUT, makes sure the load wire lengths to each load are the same.

7.1.3 Polarity and Ground

- It is recommended to connect the negative DC terminal to ground for positive output power supply EUTs.

- It is recommended to connect the positive DC terminal to ground for negative output power supply EUTs.

7.2 Voltage Sense Input Terminals

To measure the UUT output DC voltage at the UUT terminals, external voltage sense mode must be used. The external voltage sense terminal is provided for this purpose. Refer to the illustration below for details on the V Sense terminal location and polarity.

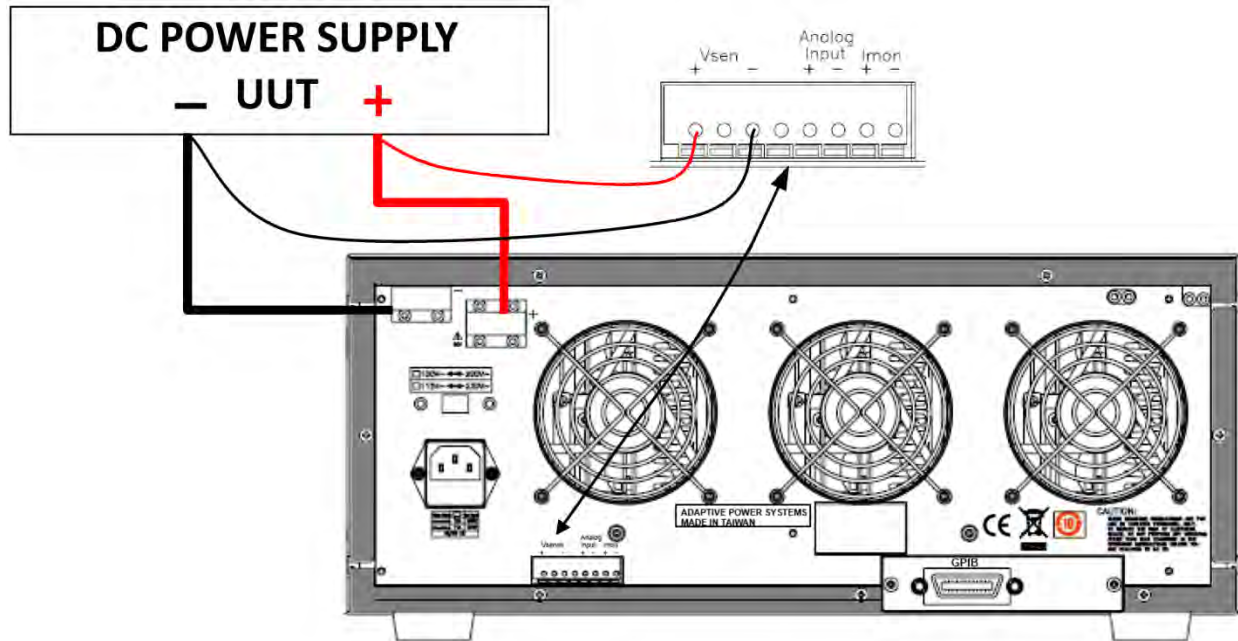


Figure 7-1: DC Load Connection with External Voltage Sense

7.3 Current Output Monitor (I-Monitor)

The I-Monitor terminal is designed to monitor the Electronic load's input current or short current. An isolated amplifier output with 0V to 10V full scale output signal represents the zero to full scale current the electronic load is sinking.

Please refer to the I-Monitor voltage /current scaling values for each 5L Series load model in Section 4, "Technical Specifications".

7.3.1 Non-Isolated Output

The I-Monitor output can be used to display and capture the load current waveform on a digital storage oscilloscope to further evaluate the voltage and current waveform of a power supply under test.

Note: The I-Monitor is non-isolated. It is intended for support in for power supply development and testing and must be ground referenced.

Since its purpose is to allow monitoring of voltage and current simultaneously on a single oscilloscope. Most oscilloscope inputs are also ground referenced and **not** isolated from each other.



CAUTION

The 5L Series Current Output Monitor or I-Monitor is NOT ISOLATED. Do NOT use the I-Monitor output with different channels to avoid common grounding problems. Improper connections may cause damage

7.3.2 Output Impedance

The I-Monitor output volt range is 0 to 10V. Output impedance is 1K Ω . The equivalent output circuit of the I-Monitor output is shown in the figure below.

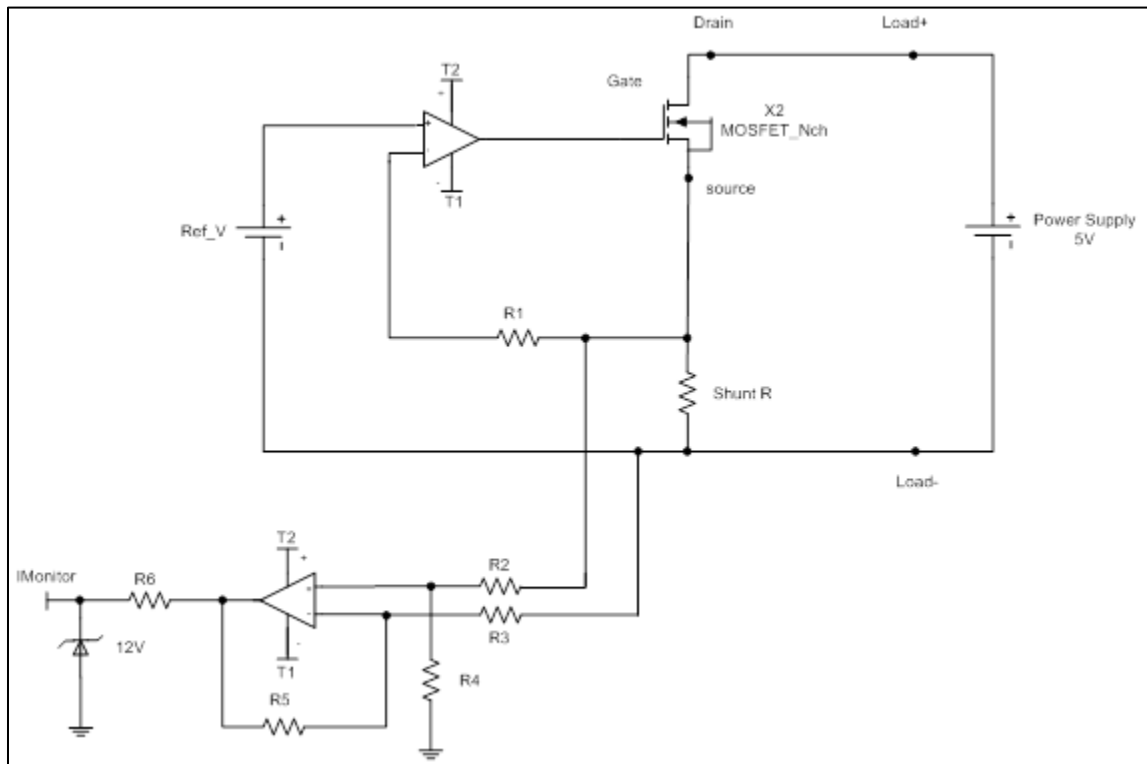


Figure 7-2: Equivalent I-Monitor Output Circuit

7.3.3 Connecting I-Monitor Output to an Oscilloscope

When you connect the load's current monitor to an oscilloscope, please carefully check the polarities of the scope probes of the oscilloscope as shown in Figure 7-3.

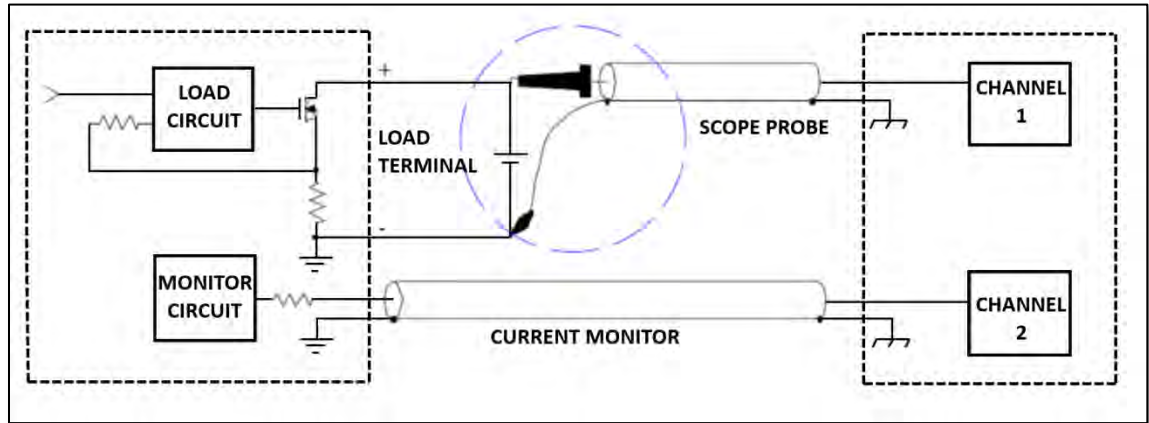


Figure 7-3: Correct I-Monitor Connections to UUT and Oscilloscope

Reversing signal and ground on the voltage probe will result in a current to flow to ground as shown in Figure 7-4 and may damage the UUT, the oscilloscope and possibly the electronic load.

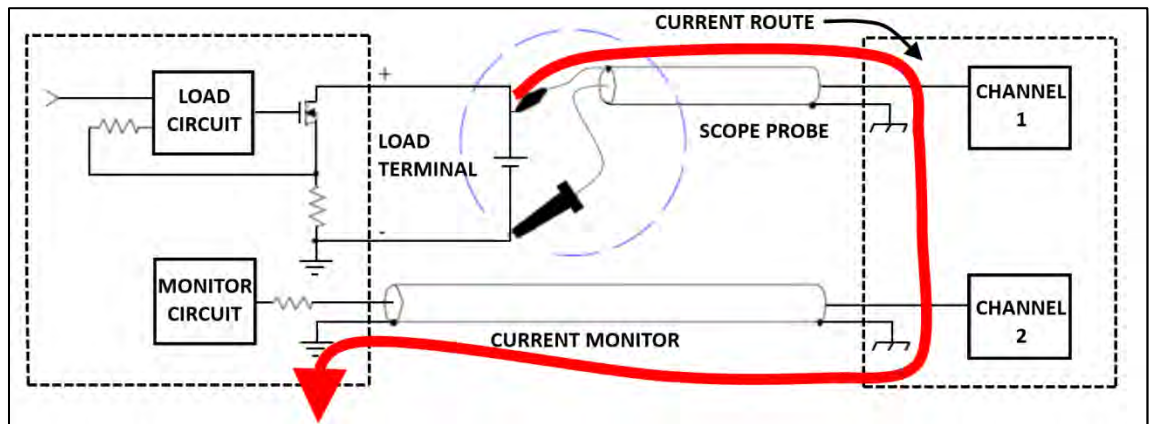


Figure 7-4: **Incorrect** I-Monitor Connections to UUT and Oscilloscope


7.4 Protection Features

The 5L Series electronic loads include the following protection features:

- Over Voltage
- Over Current
- Over Power
- Over Temperature
- Reverse Polarity Indication

7.4.1 Over Voltage Protection

The Over voltage protection circuit is set at a predetermined voltage (63V for the 5L Series), which **cannot** be changed. If the Over voltage circuit has tripped, the load input turns OFF immediately to prevent damaging the load. When an Over voltage trip condition has occurred, the Digital Current Meter's LCD display will indicate "OVP"

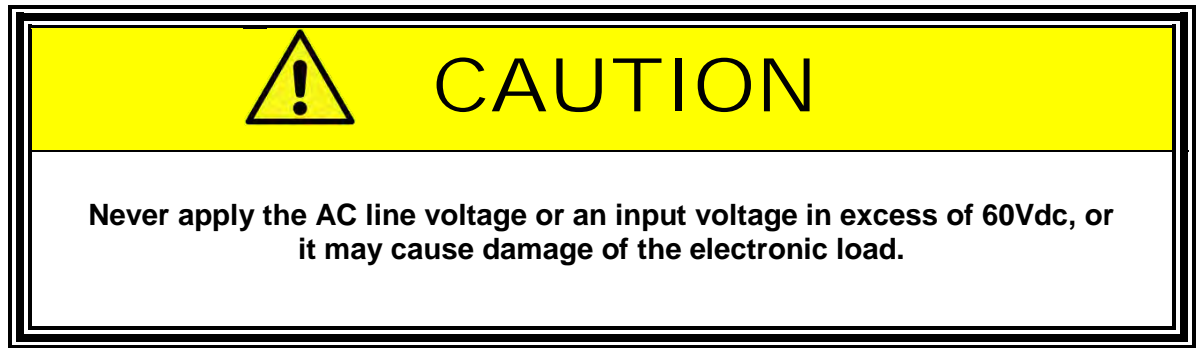

7.4.2 Over Current Protection

The load always monitors the current it is sinking. When the current sink is greater than 105% of the rated maximum current, the load module will turn load to OFF state internally. When an Over Current condition has occurred, the Digital Current Meter's LCD display will indicate "OCP".

7.4.3 Over Power Protection

The load always monitors the power dissipated by the load. When the power dissipation is greater than 105% of the rated power input, the load module will turn load to OFF state internally. When an Over power condition has occurred, the Digital Current Meter's LCD display will indicate "OPP".

7.4.4 Over Temperature Protection

As soon as the temperature of load's internal heat sinks reaches a level greater than 85° C (180° F), the Over temperature protection is triggered. The Digital Current Meter's LCD display will indicate "OTP". The Load will turn load to OFF state internally.

Please check environmental conditions such as the ambient temperature and distance between the rear panel of the load chassis and any wall is greater than 15cm / 6 inches.

The load can reset the Over Voltage, Over Current, Overpower and Over Temperature protection if the condition that caused the fault is removed and the "LOAD" key is pressed to set "ON" state.

7.4.5 Reverse Polarity Protection Indication

The 5L Series electronic load conducts reverse current when the polarity of the DC source connection is incorrect. The maximum reverse current is 120A for all 5L Series models. If the reverse current exceeds the maximum reverse current, it may damage the load.

When a reverse polarity current condition exists, the reverse current is displayed on the 5 digit Current Meter on the front panel, and the 5-digit DCM indicates a negative current reading. Whenever a reverse current is displayed on the current meter, turn OFF power to the DC source immediately and make the correct connections

8 Remote Control Programming

8.1 Overview

If your unit is fitted with a computer interface option then a GPIB, RS232, USB or LAN connector will be present on the rear panel based on the order configuration. The interface allows the load settings to be configured remotely and measurement data to be retrieved for analysis and test report generation.

There are two sets of programming commands for APS Loads. One is referred to as the SHORT FORM commands and the other set as the LONG FORM commands.

For Example

To query the actual voltage present at the load from the load's measurement system, the long form command is:

MEASURE:VOLTAGE?

The same command in its short form is:

MEAS:VOLT?

NOTE: When either one of the RS232, USB or LAN interface options is used to control the load, it is important to send the "REMOTE" command first to make sure the load is in REMOTE state. To return the load to local operation, the "LOCAL" command is used. These two commands do not apply to the GPIB interface as remote and local state of an instruments is handled through the GPIB ATN hardware signal per the IEEE488 standard.

8.2 RS232 Set-up

The RS232 interface of the APS load is configured as follows:

Baud-rate: 9600 - 115200bps (selectable using the SYSTEM key)
 Parity: None
 Data bit: 8 bits
 Stop bit: 1 bit
 Handshaking: Hardware (RTS/CTS).

Make sure the settings used on the controller's COM port match those of the load.

The RS232 Interface connector DB9 pin-out of the load is shown in Table 8-1.

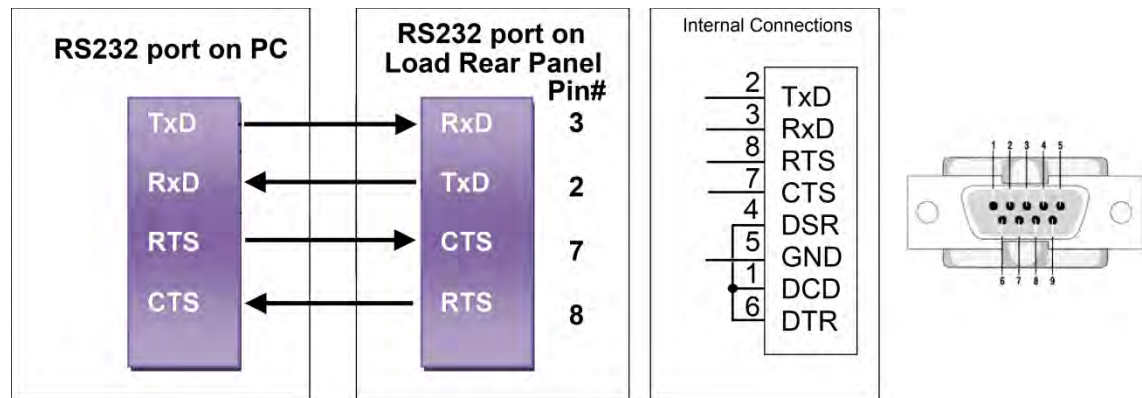


Figure 8-1: RS232 Connection to PC and DB9 Pin out

Signal Pin Assignments:

PIN	Abbreviation	Description
Pin1	DCD	Direct Carrier Detect
Pin2	TXD	Transmit Data
Pin3	RXD	Receive Data
Pin4	DTR	Data Terminal Ready
Pin5	GND	Ground
Pin6	DSR	Data Set Ready
Pin7	RTS	Request To Send
Pin8	CTS	Clear To Send
Pin9	RI	Ring Indicator

Table 8-1: RS232 DB9 Pin Assignments

8.3 Programming Syntax

A variety of syntax notations are used in the description of the remote control commands and in the summary tables. The syntax used is defined as follows:

- SP Space, the ASCII code is 20 hexadecimal.
- ; Semicolon, program line terminator, the ASCII code is 0A hexadecimal.
- NL New line, program line terminator, the ASCII code is 0A hexadecimal.
- NR2 Numeric value with decimal point. Values can be accepted in the range and format of ###.####. For example: 30.12345. In this instance, the load will read up to five significant digits after the decimal point. The decimal point can be omitted if not required.

8.3.1 Parenthesis

The following parentheses are used in the command descriptions to indicate whether a command is necessary or optional and whether a choice has to be made. The symbols { }, [], | or ? are not actually used in the programming commands. The symbols { }, [] and | are merely used to illustrate the command syntax.

- { } - Required: The contents of the { } symbol must be used as part of the command, it cannot be omitted.
- [] - Optional: The contents of the [] symbol indicates that the command is optional. The use of the contents depends on the test application.
- | - Required Choice: This symbol means a choice must be made between the stated command key words. For example, "LOW|HIGH" Means a LOW or HIGH choice needs to be made as part of the command.
- ? - Required Choice: Where a question mark is present, it indicates that a choice needs to be made. This may be entering a numerical value that needs to be set.

8.3.2 Terminators

All remote control commands sent to the load must be terminated with a command terminator. The command terminator characters accepted by the APS loads are listed in Table 8-2.

Terminator	Hex Code	Decimal	C Code	Notes
LF	0x0A	10	\n	
LF+ EOI	0x0A	10	\n	GPIB only
CR+LF	0x0D + 0x0A	13 + 10	\r\n	
CR+LF+EOI	0x0D + 0x0A	13 + 10	\r\n	GPIB only

Table 8-2: Supported Command Terminators

Semicolon “;” The semicolon character allows you to combine multiple commands in one message string to create a command sequence. The commands will be parsed in the order in which they are received.

8.4 Short Form Command Syntax

The setting and query commands for the 5L Series are listed in the summary tables below. Short form commands use an abbreviated syntax, which reduces the amount of characters required for each command and thus increases throughput.

SETTING PRESET NUMERIC COMMAND SUMMARY	REMARK
RISE{SP} {NR2} { ; NL}	(m)A/us
FALL{SP} {NR2} { ; NL}	(m)A/us
PERD : {HIGH LOW} {SP} {NR2} { ; NL}	
LDONV{SP} {NR2} { ; NL}	
LDOFFV{SP} {NR2} { ; NL}	
CC CURR : {HIGH LOW} {SP} {NR2} { ; NL}	
CP : {HIGH LOW} {SP} {NR2} { ; NL}	
CR RES : {HIGH LOW} {SP} {NR2} { ; NL}	
CV VOLT : {HIGH LOW} {SP} {NR2} { ; NL}	
TCONFIG {SP} {NORMAL OCP OPP SHORT} { ; NL}	
OCP:START {SP} {NR2} { ; NL}	
OCP:STEP {SP} {NR2} { ; NL}	
OCP:STOP {SP} {NR2} { ; NL}	
VTH {SP} {NR2} { ; NL}	
OPP:START {SP} {NR2} { ; NL}	
OPP:STEP {SP} {NR2} { ; NL}	
OPP:STOP {SP} {NR2} { ; NL}	
STIME {SP} {NR2} { ; NL}	

Table 8-3: Setting Commands - Short Form

QUERY PRESET NUMERIC COMMAND SUMMARY	RETURN FORMAT
RISE {?} { ; NL}	###.####
FALL {?} { ; NL}	###.####
PERD : {HIGH LOW} {?} { ; NL}	###.####
LDONV {?} { ; NL}	###.####
LDOFFV {?} { ; NL}	###.####
CC CURR : {HIGH LOW} {?} { ; NL}	###.####
CP : {HIGH LOW} {?} { ; NL}	###.####
CR RES : {HIGH LOW} {?} { ; NL}	###.####
CV VOLT : {HIGH LOW} {?} { ; NL}	###.####
RISE {?} { ; NL}	###.####
FALL {?} { ; NL}	###.####
PERD : {HIGH LOW} {?} { ; NL}	###.####
TCONFIG {?}; NL}	1:NORMAL
	2:OCP
	3:OPP
	4:SHORT
OCP: START {?} { ; NL}	###.####
OCP: STEP {?}; NL}	###.####
OCP: STOP {?}; NL}	###.####
VTH {?}; NL}	###.####
OPP: START {?} { ; NL}	###.####
OPP: STEP {?}; NL}	###.####
OPP: STOP {?}; NL}	###.####
STIME {?}; NL}	###.####
OCP {?}; NL}	###.####
OPP {?}; NL}	###.####

Table 8-4: Query Commands - Short Form

LIMIT COMMAND SUMMARY	RETURN FORMAT
IH IL{SP}{NR2}{ ; NL}	
IH IL{?}{ ; NL}	
WH WL{SP}{NR2}{ ; NL}	
WH WL{?}{ ; NL}	###.####
VH VL{SP}{NR2}{ ; NL}	
VH VL{?}{ ; NL}	###.####
SVH SVL{SP}{NR2}{ ; NL}	
SVH SVL{?}{ ; NL}	###.####

Table 8-5: Limit Commands - Short Form

TEST COMMAND SUMMARY	REMARK
LOAD {SP}{ON OFF 1 0} {; NL}	
LOAD {?} {; NL}	0 : OFF 1 : ON
MODE {SP} {CC CR CV CP} {; NL}	
MODE {SP} {CC CR CV} {; NL}	
MODE {SP} {LED} {; NL}	
MODE {?} {; NL}	0 : CC 1 : CR 2 : CV 3 : CP
SHOR {SP} {ON OFF 1 0} {; NL}	
SHOR {?} {; NL}	0 : OFF 1 : ON
PRES {SP} {ON OFF 1 0} {; NL}	
PRES {?} {; NL}	0 : OFF 1 : ON
SENS {SP} {ON AUTO 1 0} {; NL}	
SENS {SP} {ON OFF} {; NL}	
SENS {?} {; NL}	0 : OFF/AUTO 1 : ON
LEV {SP} {LOW HIGH 0 1} {; NL}	
LEV {?} {; NL}	0 : LOW 1 : HIGH
DYN{SP} {ON OFF 1 0} {; NL}	
DYN{?} {; NL}	0 : OFF 1 : ON
CLR{; NL}	
ERR {?}{; NL}	
NG {?}{; NL}	0 : GO 1 : NG
PROT {?}{; NL}	
CCR{SP}{AUTO R2}{; NL}	
NGENABLE{SP}{ON OFF}{; NL}	
POLAR{SP}{POS NEG}{; NL}	
START{; NL}	
STOP{; NL}	
TESTING {?} {; NL}	0:TEST END 1:TESTING

Table 8-6: Test Commands - Short Form

SYSTEM COMMANDS	NOTES	RETURN FORMAT
RECALL {SP} {m [,n] } {; NL}	m=1 -10, n=1 – 15 m:STATE, n:BANK	
STORE {SP} {m [,n] } {; NL}	m=1 – 10, n=1 – 15 m:STATE , n:BANK	
REMOTE {; NL}	RS232/USB/LAN only command	
LOCAL{; NL}	RS232/USB/LAN only command	
NAME {?} {; NL}		“XXXXX”

Table 8-7: System Commands - Short Form

MEASUREMENT QUERY COMMAND SUMMARY	RETURN
MEAS:CURREN {?}{; NL}	###.####
MEAS:VOLT {?}{; NL}	###.####
MEAS:POW {?}{; NL}	###.####

Table 8-8: Measurement Query Commands - Short Form

AUTO SEQUENCE COMMANDS	NOTES	RETURN
FILE {SP} {n} {; NL}	n=1 - 9	1 - 9
STEP {SP} {n} {; NL}	n=1 - 16	1 - 16
TOTSTEP {SP} {n} {; NL}	Total step n=1 - 16	1 - 16
SB {SP} {m, n} {; NL}	m=1 - 10 n=1 - 15 m:STATE, n:BANK	
T1 {SP} {NR2} {; NL}	0.1 - 9.9(s)	0.1 - 9.9 (sec)
T2 {SP} {NR2} {; NL}	0.1 - 9.9(s)	0.1 - 9.9 (sec)
SAVE {; NL}	Save "File n" data	
REPEAT {SP} {n} {; NL}	n=0 - 9999	0 - 9999
RUN {SP} {F} {n} {; NL}	n=1 - 9	AUTO REPLY "PASS" or "FAIL:XX" (XX=NG STEP)

Table 8-9: Auto Sequence Commands - Short Form

8.4.1 Notations and Conventions Used in programming commands:

1. Current engineering unit: A
2. Voltage engineering unit: V
3. Resistance engineering unit: Ω
4. Time Period engineering unit: ms
5. Slew-rate engineering unit: (m)A/us
6. Power engineering unit: W

8.5 Long Form Command Syntax

The setting and query commands for the 5L Series are listed in the summary tables below. Long form commands use extended command key words for easier code readability.

SETTING COMMAND SUMMARY	REMARK
[PRESet:] RISE{SP} {0NR2} {;} NL}	(m)A/us
[PRESet:] FALL{SP} {;} NL}	(m)A/us
[PRESet:] PERI PERD : HIGH LOW {SP} {NR2} {;} NL}	
[PRESet:] LDONv{SP} {NR2} {;} NL}	
[PRESet:] LDOFv{SP} {NR2} {;} NL}	
[PRESet:] CC CURR : {HIGH LOW} {SP} {NR2} {;} NL}	
[PRESet:] CP: {HIGH LOW} {SP} {NR2} {;} NL}	
[PRESet:] CR RES : {HIGH LOW} {SP} {NR2} {;} NL}	
[PRESet:] CV VOLT : {HIGH LOW} {SP} {NR2} {;} NL}	
[PRESet:] FALL{SP} {;} NL}	
[PRESet:] PERI PERD : HIGH LOW {SP} {NR2} {;} NL}	
[PRESet:] CV VOLT SP NR2	
[PRESet:] TCONFIG {SP} {NORMAL OCP OPP SHORT} {;} NL}	
[PRESet:] OCP:START {SP} {NR2} {;} NL}	
[PRESet:] OCP:STEP {SP} {NR2}{;} NL}	
[PRESet:] OCP:STOP {SP} {NR2}{;} NL}	
[PRESet:] VTH {SP} {NR2}{;} NL}	
[PRESet:] OPP:START {SP} {NR2}{;} NL}	
[PRESet:] OPP:STEP {SP} {NR2}{;} NL}	
[PRESet:] OPP:STOP {SP} {NR2}{;} NL}	
[PRESet:] STIME {SP} {NR2}{;} NL}	

Table 8-10: Setting Commands - Long Form

QUERY COMMAND SUMMARY	RETURN FORMAT
[PRESet:] RISE {?} {;} NL}	###.####
[PRESet:] FALL {?} {;} NL}	###.####
[PRESet:] PERI PERD : {HIGH LOW} {?} {;} NL}	###.####
[PRESet:] LDONv {?} {;} NL}	###.####
[PRESet:] LDOFv {?} {;} NL}	###.####
[PRESet:] CC CURR: {HIGH LOW} {?} {;} NL}	###.####
[PRESet:] CP: {HIGH LOW} {?} {;} NL}	###.####
[PRESet:] CR RES : {HIGH LOW} {?} {;} NL}	###.####
[PRESet:] CV VOLT : {HIGH LOW} {?} {;} NL}	###.####
[PRESet:] TCONFIG {?} {;} NL}	1:NORMAL 2:OCP 3:OPP 4:SHORT
[PRESet:] OCP: START {?} {;} NL}	###.####
[PRESet:] OCP: STEP {?} {;} NL}	###.####
[PRESet:] OCP: STOP {?} {;} NL}	###.####
[PRESet:] VTH {?} {;} NL}	###.####
[PRESet:] OPP: START {?} {;} NL}	###.####
[PRESet:] OPP: STEP {?} {;} NL}	###.####
[PRESet:] OPP: STOP {?} {;} NL}	###.####
[PRESet:] STIME {?} {;} NL}	###.####

Table 8-11: Query Commands - Long Form

LIMIT COMMAND SUMMARY	RETURN FORMAT
LIMit:CURRent : {HIGH LOW}{SP}{NR2} {;} NL}	
LIMit:CURRent : {HIGH LOW} {?} {;} NL}	###.####
IH IL{SP}{NR2} {;} NL}	
IH IL {?} {;} NL}	
LIMit:POWer: {HIGH LOW}{SP}{NR2} {;} NL}	
LIMit:POWer: {HIGH LOW} {?} {;} NL}	###.####
WH WL{SP}{NR2} {;} NL}	
WH WL {?} {;} NL}	###.####
LIMit:VOLTagE: {HIGH LOW}{SP}{NR2} {;} NL}	
LIMit:VOLTagE: {HIGH LOW} {?} {;} NL}	###.####
VH VL{SP}{NR2} {;} NL}	
VH VL {?} {;} NL}	###.####
SVH SVL{SP}{NR2} {;} NL}	
SVH SVL {?} {;} NL}	###.####

Table 8-12: Limit Commands - Long Form

STATE COMMAND SUMMARY	REMARK
[STAtE:] LOAD {SP}{ON OFF} {;} NL}	
[STAtE:] LOAD {?} {;} NL}	0 : OFF, 1 : ON
[STAtE:] MODE {SP} {CC CR CV CP} {;} NL}	
[STAtE:] MODE {SP} {CC CR CV} {;} NL}	
[STAtE:] MODE {LED} {;} NL}	
[STAtE:] MODE {?} {;} NL}	0 1 2 3 4 CC CR CV CP
[STAtE:] SHORt {SP} {ON OFF} {;} NL}	
[STAtE:] SHORt {?} {;} NL}	0 : OFF, 1 : ON
[STAtE:] PRESet {SP} {ON OFF} {;} NL}	
[STAtE:] PRESet {?} {;} NL}	0 : OFF, 1 : ON
[STAtE:] SENSE {SP} {ON AUTO} {;} NL}	
[STAtE:] SENSE {SP} {ON OFF} {;} NL}	
[STAtE:] SENSE {?} {;} NL}	0 : OFF/AUTO, 1 : ON
[STAtE:] LEVEL {SP} { LOW HIGH} {;} NL}	
[STAtE:] LEVEL {?} {;} NL}	0 : LOW, 1 : HIGH
[STAtE:] LEV{SP} {LOW HIGH} {;} NL}	
[STAtE:] LEV {?} {;} NL}	0 : LOW, 1 : HIGH
[STAtE:] DYNAmic {SP} {ON OFF} {;} NL}	
[STAtE:] DYNAmic {?} {;} NL}	0 : OFF, 1 : ON
[STAtE:] CLR{;} NL}	
[STAtE:] ERRor {?} {;} NL}	
[STAtE:] NO {SP} GOOD {?} {;} NL}	0 : GO, 1 : NG
[STAtE:] NG {?} {;} NL}	0 : GO, 1 : NG
[STAtE:] PROtect {?} {;} NL}	
[STAtE:] CCR{SP}{AUTO R2} {;} NL} (NOTE 1)	
[STAtE:] NGENABLE{SP}{ON OFF} {;} NL}	
[STAtE:] POLAR{SP}{POS NEG} {;} NL}	
[STAtE:] START{;} NL}	
[STAtE:] STOP{;} NL}	
[STAtE:] TESTING {?} {;} NL}	0: TEST END, 1: TESTING

Table 8-13: State Commands - Long Form

SYSTEM COMMANDS	NOTE	RETURN FORMAT
[SYStem:] RECall {SP} {m [,n] } {;} NL}	m=1 – 10, n=1 - 15	
[SYStem:] STORe {SP} {m [,n] } {;} NL}	m=1 – 10, n=1 - 15	
[SYStem:] REMOTE {;} NL}	RS232/USB/LAN command	
[SYStem:] LOCAL{;} NL}	RS232/USB/LAN command	
[SYStem:] NAME {?} {;} NL}		“XXXXXX”
[SYStem:]*RST {;} NL}		
[SYStem:]SYNC:LOAD {SP} {ON OFF} {;} NL}		

Table 8-14: System Commands - Long Form

MEASUREMENT QUERY COMMAND SUMMARY		RETURN FORMAT
MEASure:CURRent {?}{; NL}		###.####
MEASure:VOLTage {?}{; NL}		###.####
MEASure:POWer {?}{; NL}		###.####

Table 8-15: Measurement Query Commands

AUTO SEQUENCE COMMANDS	NOTES	RETURNS
FILE {SP} {n}{; NL}	n=1 - 9	1 - 9
STEP {SP} {n}{; NL}	n=1 - 16	1 - 16
TOTSTEP {SP} {n}{; NL}	Total steps n=1 - 16	1 – 16
SB {SP} {m,n}{; NL}	m=1 -10, n=1 – 15 m:STATE, n:BANK	
T1 {SP} {NR2}{; NL}	0.1 - 9.9(s)	0.1 - 9.9 (sec)
T2 {SP} {NR2}{; NL}	0.1 - 9.9(s)	0.1 - 9.9 (sec)
SAVE {; NL}	Save "File n" data	
REPEAT {SP} {n}{; NL}	n=0 - 9999	0 - 9999
RUN {SP} {F} {n}{; NL}	n=1 - 9	AUTO REPLY "PASS" or "FAIL:XX" (XX=NG STEP)

Table 8-16: Auto Sequence Commands - Long Form

8.6 Remote Control Command Descriptions

The remote control syntax of all available commands is described in the following sections. Supported commands are grouped in the following categories:

Command Category	Description
SETTING	Setting commands are used to program operating modes, sink values and built in test modes like SHORT, OPP and OCP.
LIMIT	Limit commands may be used to set expected upper and lower operating limits as they apply to a unit under test. These limit settings are used in conjunction with Go/No-go testing to indicate the load is sinking outside expected parameters.
STATE	State commands are used to query or clear status information from a load module to determine its operating condition.
SYSTEM	System commands enable querying of load module model number and configuration data, RS232 control on/off. They also support storing and saving load set-ups in non-volatile memory. (15 Banks / 10 States)
MEASUREMENTS	Allows querying load measurement data.

8.6.1 SETTING Commands

RISE

Command Syntax:

[PRESet:] RISE {SP} {NR2} {; | NL}

[PRESet:] RISE ? {; | NL}

Purpose:

Set and read the RISE SLEW-RATE

Description:

1. The definition of the RISE SLEW-RATE is the rate of current change from a LOW level to a HIGH level when operating in dynamic mode. The settings of RISE and FALL are completely independent.
2. The RISE command must include a number value otherwise, the command will not be valid.
3. The least significant number is the fourth digit after the decimal point.
4. Should a value be entered that is higher than what is possible then the load will automatically set its maximum value according the load module fitted.
5. The engineering unit is A/us for load modules 41L0630, 41L0660& 41L2512. The engineering unit is mA/us for load modules 41L5012, 41L0615, 41D & 42D.

FALL

Command Syntax:

[PRESet:] FALL {SP} {; | NL}

[PRESet:] FALL? {; | NL}

Purpose:

Set and read the FALL SLEW-RATE

Description:

1. The definition of the FALL SLEW-RATE is the rate of current change from a HIGH level to a LOW level when operating in dynamic mode. The settings of RISE and FALL are completely independent.
2. Should a value be entered that is higher than what is possible then the load will automatically set its maximum value according the load module fitted.
3. The engineering unit is A/us for load modules 41L0630, 41L0660& 41L2512. The engineering unit is mA/us for load modules 41L5012, 41L0615, 41D & 42D.

PERI or PERD

Command Syntax:

[PRESet:] PERI | PERD : HIGH | LOW {SP} {NR2} { ; | NL}

[PRESet:] PERI | PERD : HIGH | LOW ? { ; | NL}

Purpose:

Set and read the combined TLOW and THIGH of a DYNAMIC waveform

Description:

1. The time period combines TLOW (time low) and THIGH (time high) sections of a DYNAMIC waveform.
2. The value of TLOW and THIGH has to be included the number of the decimal point; otherwise the command will not be available.
3. The least significant number is the fifth after the decimal point.
4. Should a value be entered that is higher than what is possible then the load will automatically set its maximum value according the load module fitted.
5. The engineering unit is ms.

LDONv

Command Syntax:

[PRESet:] LDONv {SP} {NR2}{ ; | NL}

[PRESet:] LDONv?{ ; | NL}

Purpose:

Set and Read the voltage level at which the LOAD will switch ON.

Description:

This command is used to set or query the voltage value at which the LOAD will automatically switch ON. The engineering unit is V.

LDOFv

Command Syntax:

[PRESet:] LDOFv {SP} {NR2} { ; | NL}

[PRESet:] LDOFv?{ ; | NL}

Purpose:

Set and Read the voltage level at which the LOAD will switch OFF.

Description:

This command is used to set or query the voltage value at which the LOAD will automatically switch OFF. The engineering unit is V.

CURR : HIGH | LOW

Command Syntax:

[PRESet:] CC | CURR : HIGH | LOW{SP} { NR2}{; | NL}

[PRESet:] CC | CURR : HIGH | LOW? {; | NL}

Purpose:

Set or read the HIGH or LOW current levels in Amps.

Description:

This command is used to set or query the HIGH and LOW levels of load current allowed. These 2 current levels need to be used if a dynamic load waveform is used. It also allows the user to switch between two preset current levels.

1. The least significant number is the fifth digit after the decimal point.
2. The LOW level current value cannot be higher than the HIGH level.
3. Should a value be entered that is higher than what is possible then the load will automatically set the maximum value according the load module installed.
4. The engineering unit is A.

CURR

Command Syntax:

[PRESet:] CC | CURR {SP} {NR2}{; | NL}

[PRESet:] CC | CURR?{; | NL}

Purpose:

Set or read the load current.

Description:

This command is used to set or query the load current.

1. The least significant number is the fifth digit after the decimal point.
2. Should a value be entered that is higher than what is possible then the load will automatically set the maximum value according the load module installed.
3. The engineering unit is A.

CP: {HIGH | LOW}

Command Syntax:

[PRESet:] CP:{ HIGH | LOW} {SP} {NR2} {; | NL}

[PRESet:] CP:{ HIGH | LOW}? {; | NL}

Purpose:

Set and read the operating power value in Watts

Description:

This command is used to set or query the HIGH or LOW setting levels of load power. These 2 power levels need to be used should a dynamic load waveform be desired. It also allows the user to switch between two preset power levels.

1. The least significant number is the fifth digit after the decimal point.
2. The LOW level power value cannot be higher than the HIGH level.
3. Should a value be entered that is higher than what is possible then the load will automatically set its maximum value according the load module installed.
4. The engineering unit is W.

CR | RES:{HIGH | LOW}

Command Syntax:

[PRESet:] CR | RES:{HIGH | LOW} {SP} {NR2} {; | NL}

[PRESet:] CR | RES:{HIGH | LOW}? {; | NL}

Purpose:

Set and read the HIGH or LOW resistance levels.

Description:

This command is used to set or query the HIGH and LOW levels of load resistance. It allows the user to switch between two resistance levels.

1. The least significant number is the fifth digit after the decimal point.
2. The LOW level resistance value cannot be higher than the HIGH level.
3. Should a value be entered that is higher than what is possible then the load will automatically set its maximum value according the load module installed.
4. The engineering unit is Ω .

CR | RES

Command Syntax:

[PRESet:] CR | RES {SP} {NR2}{; | NL}

[PRESet:] CR | RES? {; | NL}

Purpose:

Set and read the resistance.

Description:

This command is used to set or query the load resistance.

1. The least significant number is the fifth digit after the decimal point.
2. Should a value be entered that is higher than what is possible then the load will automatically set its maximum value according the load module installed.
3. The engineering unit is Ω .

CV: {HIGH | LOW}

Command Syntax:

[PRESet:] CV: {HIGH | LOW} {SP} {NR2}{; | NL}

[PRESet:] CV: {HIGH | LOW}? {; | NL}

Purpose:

Set and Read the value of DC Load Voltage

Description:

This command is used to set or query the HIGH and LOW levels of load voltage. It allows the user to switch between two voltage levels.

1. The least significant number is the fifth digit after the decimal point.
2. The LOW level voltage value cannot be below the HIGH level.
3. Should a value be entered that is higher than what is possible then the load will automatically set its maximum value according the load module installed.
4. The engineering unit is V.

CV

Command Syntax:

[PRESet:] CV {SP} {NR2}{; | NL}

[PRESet:] CV? {; | NL}

Purpose:

Set and Read the value of DC Load Voltage

Description:

This command is used to set or query the load voltage.

1. The least significant number is the fifth digit after the decimal point.
2. Should a value be entered that is higher than what is possible then the load will automatically set its maximum value according the load module installed.
3. The engineering unit is V.

OCP: START

Command Syntax:

[PRESet:] OCP:START {SP} {NR2}{; | NL}

[PRESet:] OCP:START? {; | NL}

Purpose:

Set and read the initial value of OCP test

Description:

This command is used to set or query the required initial value (I-START) of the OCP test.

OCP: STEP

Command Syntax:

[PRESet:] OCP:STEP {SP} {NR2}{; | NL}

[PRESet:] OCP:STEP? {; | NL}

Purpose:

Set and read the increasing value of OCP test

Description:

This command is used to set or query the increment value (I-STEP) for the OCP test.

OCP:STOP

Command Syntax:

[PRESet:] OCP:STOP {SP} {NR2} {; | NL}

[PRESet:] OCP: STOP? {; | NL}

Purpose:

Set and read the maximum value of OCP Test

Description:

This command is used to set or query the maximum or end value (I-STOP) for the OCP test.

VTH

Command Syntax:

[PRESet:] VTH {SP}{NR2}{; | NL}

[PRESet:] VTH ? {; | NL}

Purpose:

Set and read the value of the Threshold Voltage

Description:

This command is used to set or query the minimum threshold voltage for the OCP/OPP tests. If the measured voltage is below the threshold voltage and the OCP/OPP test started, the test will not run and an error will be flagged.

OPP:START

Command Syntax:

[PRESet:] OPP:START {SP}{NR2}{; | NL}

[PRESet:] OPP:START? {; | NL}

Purpose:

Set and read the initial value of OPP Test

Description:

This command is used to set or query setting the initial value (P-START) of the OPP test.

OPP:STEP

Command Syntax:

[PRESet:] OPP:STEP {SP}{NR2}{; | NL}

[PRESet:] OPP:STEP? {; | NL}

Purpose:

Set and read the increasing value of OPP Test

Description:

This command is used to set or query the power increments, which the OPP test will follow between the P-START and P-STOP values.

OPP:STOP

Command Syntax:

[PRESet:] OPP:STOP {SP} {NR2} {; | NL}

[PRESet:] OPP:STOP ? {; | NL}

Purpose:

Set and read the maximum value of OPP Test

Description:

This command is used to set or query the maximum power value (P-STOP) of the OPP test.

TCONFIG

Command Syntax:

[PRESet:] TONFIG {NORMAL | OCP | OVP | OPP | SHORT} {; | NL}

[PRESet:] TONFIG ? {; | NL}

Purpose:

Set or query the function mode of Dynamic Test

Description:

There are five options for this command. Those are NORMAL mode, OCP Test, OVP Test, OPP Test and SHORT Mode Test.

STIME

Command Syntax:

[PRESet:] STIME {SP} {NR2}{; | NL}

[PRESet:] STIME? {; | NL}

Purpose:

Set and read time of the short-circuit test

Description:

This command is used to set the short-circuit test time. If the time is set to zero, there is no time limit. In other words, a continuous short circuit test will be implemented. If a non-zero value is entered, this is the short circuit duration test time in milliseconds (ms).

OCP

Command Syntax:

OCP? {; | NL}

Purpose:

Query the OCP test current.

Description:

This command is used to query the OCP current measured in the OCP test.

OPP

Command Syntax:

OPP? {; | NL}

Purpose:

Query the OPP test power level in watt.

Description:

This command is used to query the OPP power for the OPP test.

8.6.2 LIMIT Commands

LIMIT commands are used to set high and low operating limits that can be used in conjunction with the GO/NOGO (NG) function to signal that the load is sinking outside the expected parameters.

[LIMit:]CURRent:{HIGH | LOW} or IH | IL

Command Syntax:

[LIMit:]CURRent:{HIGH | LOW} {SP} { NR2 } {; | NL}

[LIMit:]CURRent:{HIGH | LOW}? {; | NL}

[IH | IL]{SP}{ NR2 } {; | NL}

[IH | IL]? {; | NL}

Purpose:

Set or query the HIGH / LOW load current limits when operating in CC or CR modes.

Description:

This command is used to set or query two current LIMIT values. Operation outside these LIMIT values will cause a No Good (NG) signal to be generated.

1. The LOW level cannot be higher than the HIGH level.
2. If the current taken by the load falls below the LOW limit then a No Good (NG) signal is available.
3. If the current rises above the HIGH limit then the NG signal is available.

4. If the current stays between HIGH and LOW LIMIT levels the NG signal will not be sent.

[LIMit:]POWer:{HIGH | LOW} or WH | WL

Command Syntax:

[LIMit:]POWer:{HIGH | LOW}{SP}{ NR2 }{;|NL}

[LIMit:]POWer:{HIGH | LOW}? {;|NL}

[WH | WL]{SP}{ NR2 } {;|NL}

[WH | WL]? {;|NL}

Purpose:

Set or query the HIGH / LOW load power limits when operating in CP or CR modes.

Description:

This command is used to set two power LIMIT values. Operation outside these LIMIT values will cause a NG signal to be generated.

1. The LOW level cannot be higher than the HIGH level.
2. If the power taken by the load falls below the LOW limit then a No Good (NG) signal is available.
3. If the power rises above the HIGH limit then the NG signal is available.
4. If the power stays between HIGH and LOW LIMIT levels the NG signal will not be sent.

[LIMit:]VOLtage:{HIGH | LOW} or VH | VL

Command Syntax:

[LIMit:]VOLtage:{HIGH | LOW} {SP} { NR2 }{;|NL}

[LIMit:]VOLtage:{ HIGH | LOW}? {;|NL}

[VH | VL] {SP} { NR2 }{;|NL}

[VH | VL]? {;|NL}

Purpose:

Set or query the HIGH / LOW limits of voltage present at the load terminals.

Description:

This command is used to set two voltage LIMIT values. Operation outside these LIMIT values will cause a NG signal to be generated.

1. The LOW level cannot be higher than the HIGH level.
2. If the voltage at the load input falls below the LOW limit then a No Good (NG) signal is available.
3. If the voltage rises above the HIGH limit then the NG signal is available.

4. If the current stays between HIGH and LOW LIMIT levels, the NG signal will not be sent.

[LIMit :] SVH | SVL

Command Syntax:

[LIMit:] {SVH | SVL} {SP} {NR2}{;|NL}

[LIMit:] {SVH | SVL}? {;|NL}

Purpose:

Set or query the upper and lower voltage levels during for short test.

Description:

This command is used to set two voltage LIMIT values. If during the short test the voltage is outside these LIMIT values, a NG signal will be generated.

1. The LOW level cannot be higher than the HIGH level.
2. If the voltage at the load input falls below the LOW limit then a No Good (NG) signal is available.
3. If the voltage rises above the HIGH limit then the NG signal is given.
4. If the current stays between HIGH and LOW LIMIT levels, the NG signal will not be sent.

8.6.3 STATE Commands

STATE commands can be used to set or query the actual operating status of the electronic load at any time.

[STATE:] LOAD {SP} {ON | OFF}

Command Syntax:

[STATE:] LOAD {SP} {ON | OFF}; | NL}

[STATE:] LOAD? {; | NL}

Purpose:

Read LOAD ON or OFF status.

Description:

This command is used to see if the Load is ON or OFF. 0 = Load OFF, 1 = Load ON.

[STATE:] MODE {SP} {CC | CR | CV | CP}

Command Syntax:

[STATE:] MODE {SP} {CC | CR | CV | CP}; | NL}

[STATE:] MODE? {; | NL}

Purpose:

Set and read the operating mode of LOAD

Description:

The return value is 0 | 1 | 2 | 3 which corresponds to the operating mode that the load is in. i.e. CC|CR|CV|CP.

Mode:	CC	CR	CV	CP
Value:	(0)	(1)	(2)	(3)
Supported	V	V	V	V

[STATE:] SHORt {SP} {ON | OFF}

Command Syntax:

[STATE:] SHORt {SP} {ON | OFF}; | NL}

[STATE:] SHORt? {; | NL}

Purpose:

Reads back whether the short circuit test is active or not

Description:

0 = short circuit test active, 1 = short circuit test inactive

[STATE:] PRESet {SP} {ON | OFF}

Command Syntax:

[STATE:] PRESet {SP} {ON | OFF};; | NL}

[STATE:] PRESet? {; | NL}

Purpose:

Reads back whether load is in preset mode.

Description:

This command is used to check if the load is in preset mode.

0 = Preset mode OFF, 1 = Preset mode ON

[STATE:] SENSE{SP} {ON | OFF | AUTO}

Command Syntax:

[STATE:] SENSE {SP}{ON | OFF | AUTO };; | NL}

[STATE:] SENSE? {; | NL}

Purpose:

Reads back whether the sense function is ON or OFF.

Description:

0 = Sense OFF or Sense AUTO

1 = Sense ON

[STATE:] LEVel {SP} {HIGH | LOW} or LEV {SP} {HIGH | LOW}

Command Syntax:

[STATE:] LEVel {SP} {HIGH | LOW };; | NL}

[STATE:] LEVel? {; | NL}

[STATE:] LEV {SP} {HIGH | LOW};; | NL}

[STATE:] LEV? {; | NL}

Purpose:

Reads back whether the load is operating at its LOW or HIGH LEVEL.

Description:

In CC, CR, CV or CP operating modes the user can set two LEVELS of load current, resistance, voltage or power. The load will read back which level it is at:

0 = Load operating at low level

1 = Load operating at high level

[STATe:] DYNamic {SP} {ON | OFF}

Command Syntax:

[STATe:] DYNamic {SP} {ON | OFF}{; | NL}

[STATe:] DYNamic? {; | NL}

Purpose:

Reads back whether the load is operating in STATIC or DYNAMIC mode.

Description:

0 = Dynamic operation

1 = Static Operation

[STATe:] CLR

Command Syntax:

[STATe:] CLR {; | NL}

Purpose:

Clears the error flag.

Description:

This command is used for clearing the contents of the PROT and ERR registers. After execution, the contents of these two registers will be "0".

[STATE:] ERRor

Command Syntax:


[STATE:] ERRor? {; | NL}

Purpose:

Query if there are any errors flagged in the module.

Description:

1. ERR? : Read the register of ERR status. Table 22 shows the corresponding number of ERR status.
2. Use command CLR to clear the register of ERR status to be "0"

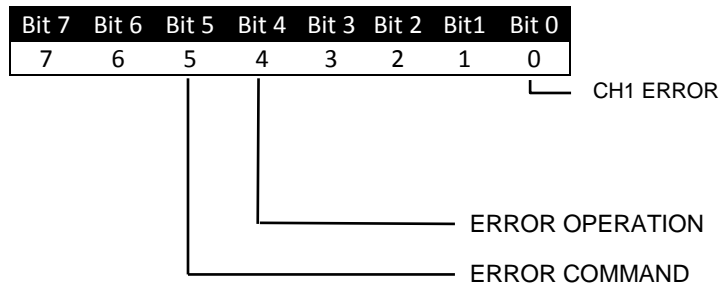

BIT ID	BIT VALUE	REMARK
bit 0-3	0 = Off, 1 = Triggered	CH1 error
bit 4	0 = Off, 1 = Triggered	Operation error
bit 5	0 = Off, 1 = Triggered	Command error (e.g. syntax error)

Table 8-17: Error Register Bits

[STATE:] NG? {; | NL}

Command Syntax:

[STATE:] NG? {; | NL}

Purpose:

Query if the NG flag is displayed on this module.

Description:

This command queries the NG status. If the response is "0", the LED of NG (NO GOOD) will be off. If the response is "1", the LED will be lit, showing that the NG flag is present.

[STATE:] PROTECT? {; | NL}

Command Syntax:

[STATE:] PROTECT? {; | NL}


Purpose:

Query the state of the protection register on this module.

Description:

1. PROT? requests the status of the units protection register.
2. Use the command "CLR" to clear the register of PROT status to "0".

Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
7	6	5	4	3	2	1	0

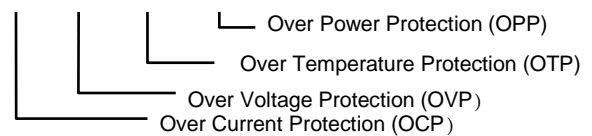

BIT ID	BIT VALUE	REMARK
bit 0	0 = Off, 1 = Triggered	Over Power Protection (OPP)
bit 1	0 = Off, 1 = Triggered	Over Temperature Protection (OTP)
bit 2	0 = Off, 1 = Triggered	Over Voltage Protection (OVP)
bit 3	0 = Off, 1 = Triggered	Over Current Protection (OCP)

Table 8-18: Protection Status Register Bits

[STATE:] CCR {AUTO | R2}

Command Syntax:

[STATE:] CCR {AUTO | R2} {; | NL}

Purpose:

This command sets the CC MODE RANGE, forcing RANGE II operation if required.

Description:

Switches the unit between AUTO RANGE and RANGE II. AUTO RANGE will allow the unit to move to a more precise range at low currents, while forcing the unit to remain in RANGE II keeps the range consistent regardless of the current level.

[STATE:] POLAR {POS | NEG}

Command Syntax:

[STATE:] POLAR {POS | NEG} {; | NL}

Purpose:

Sets the polarity displayed by the voltage meter.

Description:

The voltage read-out can be set to POS for positive, and NEG for negative polarity display.

[STATE:] START

Command Syntax:

[STATE:]START {; | NL}

Purpose:

Set for load to begin the test.

Description:

Begins the test, according to the TEST CONFIG (TCONFIG). The load module will start to test based on the items and parameters stored.

[STATE:] STOP

Command Syntax:

[STATE:]STOP {; | NL}

Purpose:

Stops a test, if one is in progress.

8.6.4 SYSTEM Commands

SYSTEM commands allow the user to read the part number of the load modules and turn RS232 control ON and OFF. Commands are also available for storing and retrieving load set-ups saved in the memory of the load. The load has 150 separate memory locations. This is comprised of 15 memory BANKS with each bank having 10 STATES.

All 5L Series Models	
BANK (n)	15
STATE (m)	10
Total States / Mem. Locations	150

[SYStem:] RECall {SP} { m} [, n]

Command Syntax:

[SYStem:] RECall {SP} {m} [, n] {; | NL}

Purpose:

Recalls the load set-up, which has been previously saved in memory.

Description:

This command is for recalling the procedure stored in a specified memory location where:

m = STATE, 1 through 10

n = BANK, 1 through 15

If the memory STATE to be used is from the currently selected BANK as shown on the mainframe's display, then the BANK [n] can be omitted.

For example:

RECALL 2,15 Recalls the load set up saved in the 2nd STATE and 15th BANK of the memory.

REC 3 Recalls the load set up from the 3rd memory STATE from the current BANK as shown on the units front panel display.

[SYStem:] STORe {SP} {m}[, n]

Command Syntax:

[SYStem:] STORe {SP} {m} [, n] {; | NL}

Purpose:

Saves the Load's status to the unit's memory.

Description:

This command is for saving the current set up to a specified memory location where:

m = STATE, 1 through 10

n = BANK, 1 through 15

If the memory STATE to be saved to the currently selected BANK then the BANK [n] part of the command can be omitted.

For example:

STORE 2, 15 Saves the status of the load to the 2nd STATE of the 15th memory BANK.

STOR 3 Saves the load setup to the 3rd memory STATE of the current BANK as shown on the units front panel display.

[SYStem:] NAME?

Command Syntax:

[SYStem:] NAME? {; | NL}

Purpose:

Return the model number of selected load module.

Description:

This command is for reading the model number of the load. If no module is operating, the display will display "NULL". The model number length is limited to 5 characters. The model number will be returned as per Table 24.

APS-Model	Return Value
5L06-12	APS_5L06-12
5L12-12	APS_5L12-12
5L12-24	APS_5L12-24
5L18-12	APS_5L18-12
5L18-24	APS_5L18-24
5L18-36	APS_5L18-36

Table 8-19: 5L Series Load Model Name Return Values

[SYSTem:] *RST

Command Syntax:

[SYSTem:] *RST {; | NL}

Purpose:

Load reset.

Description:

This command resets the load to its default state.

[SYSTem:] REMOTE

Command Syntax:

[SYSTem:] REMOTE {: | NL}

Purpose:

Command to enter REMOTE status (only for RS232, USB or LAN).

Description:

This command is for enabling control of the unit via RS232, USB or LAN.

[SYSTem:] LOCAL

Command Syntax:

[SYSTem:] LOCAL {; | NL}

Purpose:

Command to exit the REMOTE status (only for RS232)

Description:

This command closes the RS232 control interface.

SYNC:LOAD {SP} {ON | OFF}

Command Syntax:

SYNC:LOAD {SP} {ON | OFF} {; | NL}

Purpose:

Command to enable or disable all electronics loads in the mainframe at the same time.

Example: SYNC:LOAD ON

 SYNC:LOAD OFF

8.6.5 MEASUREMENT Commands

Measurement commands allow measurement data for each module to be retrieved.

MEASure:CURRent?

Command Syntax:

MEASure:CURRent? {; | NL}

Purpose:

Measures the load current.

Description:

Reads the current meter data. The engineering unit is Ampere (A).

MEASure:VOLTage?

Command Syntax:

MEASure:VOLTage? {; | NL}

Purpose:

Measures the load voltage.

Description:

Reads the voltmeter data. The engineering unit is Voltage (V).

MEASure:POWer?

Command Syntax:

MEASure:POWer? {; | NL}

Purpose:

Reads the power being absorbed by the load.

Description:

Reads the power meter data. The engineering unit is Watt (W).

9 USB Driver Installation


9.1 Overview

The load may be equipped with a USB interface. To communicate with this interface, a USB device driver is required on a Windows PC. This appendix describes the driver installation process for the PL-2303 USB to Serial Driver. Once installed, the USB port will appear as a COM port to the Windows Operating System.

9.2 USB Driver Installation

To install the USB device driver, proceed as follows:


1. Insert the supplied CD ROM into a CD Rom drive.
2. If configured for auto-start, the driver installation program will launch. If not, run "USB\SETUP\PL-2303 Driver Installer.exe" from the CD Rom drive.
3. This will open the first installation wizard screen.

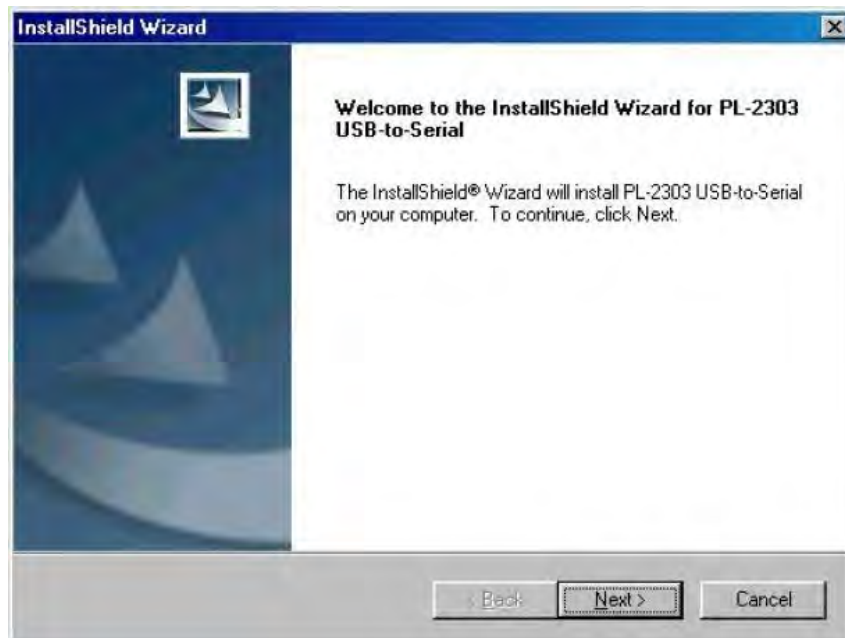

4. Follow the on-screen prompts.




5. After the installation completes, open the Windows Control Panel from the Start menu and select "Device Manager".
6. In the Device Manager Listing, locate the "Ports (COM & LPT)" entry

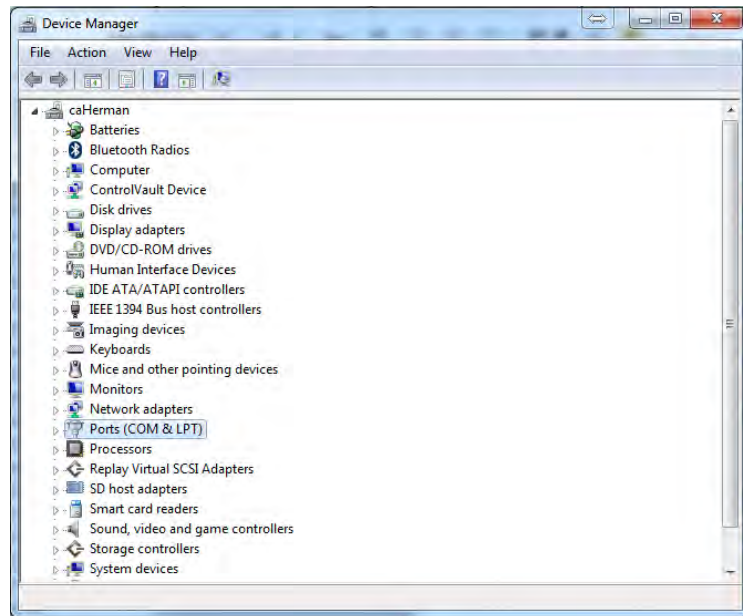

7. One of the entries should show "USB to Serial Port (COMx)" with x any value higher than 2.
8. Note the Com port number at which the USB device is located. Right click on this Com port and select "Properties".
9. In the Properties dialog box, select "Port Settings".

10. Select the relevant COM port and set Bit per second (baud rate) to “115200” and Flow control “Hardware”

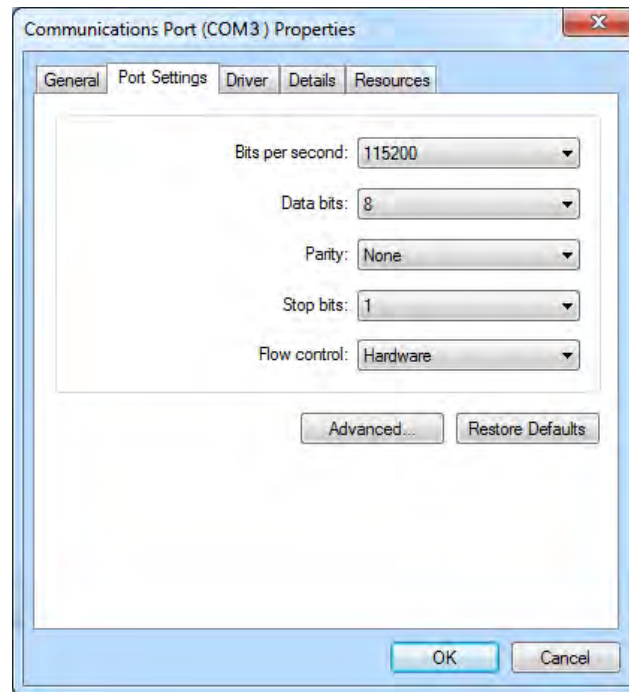

11. Connect the load to the PC using a suitable USB cable. (not supplied with the load).
12. You should now be able to communicate with the load through COMn.

10 LAN Driver Installation


10.1 Overview

The load may be equipped with a LAN (Ethernet) interface. To communicate with this interface, an Ethernet Manager Utility program is supplied with the LAN interface. This appendix describes the use of this utility to establish a network connection with the load under Windows.


10.2 Introduction

To establish an Ethernet connection between a PC on your network and the load, proceed as follows:

1. Connect AC power and the network (LAN) CAT5 cable to the load.
2. Connect the other side of the network cable to an existing Ethernet network.
3. After inserting the driver CD-ROM, run LAN\ETM.EXE from the CD.
4. The Ethernet Manager screen will be displayed as shown below. If the Ethernet Manager window does not appear, press F5 to search again (refresh), and check the LAN connections if necessary.

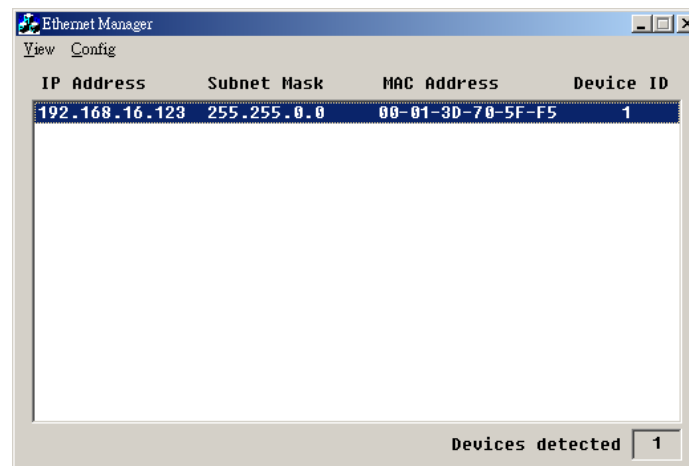

5. The connected unit will appear on the list, click it to set the IP Address and Subnet Mask as shown in the figure below.

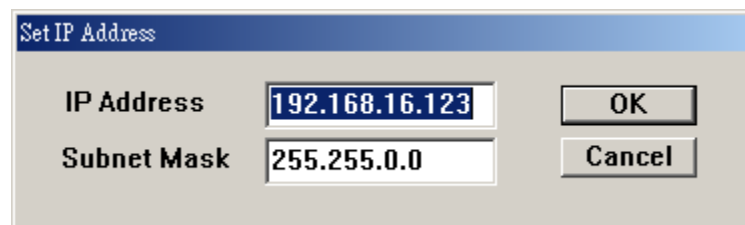

6. At this point, the Controller Setup page should be accessible, once everything is set correctly. This allows greater control over the communications interface.

Controller Setup				
IP Address	192.186.16.128			
Subnet mask	255.255.255.0			
Gateway address	0.0.0.0			
Network link speed	Auto			
DHCP client	Enable			
Socket port of HTTP setup	80			
Socket port of serial I/O	4001	TCP Server		
Socket port of digital I/O	5001	TCP Server		
Destination IP address / socket port (TCP client and UDP) Connection	0.0.0.0	0	Auto	
TCP socket inactive timeout (minutes)	0			
Serial I/O settings (baud rate, parity, data bits, stop bits)	115200	N	8	1
Interface of serial I/O	RS 232 (RTS/CTS)			
Packet mode of serial input	Disable			
Device ID	1			
Report device ID when connected	Disable			
Setup password				
UPDATE				

7. Insert the following into the controller set up screen:

IP Address: as recommended according to your network
 Subnet Mask: as recommended according to your network
 Gateway Address: as recommended according to your network
 Network link speed: Auto
 DHCP client: Enable
 Socket port of HTTP setup: 80
 Socket port of serial I/O: 4001, TCP Server
 Socket port of digital I/O: 5001, TCP Server
 Destination IP address / socket port (TCP client and UDP) Connection: Auto
 TCP socket inactive timeout(minutes) : Set the network disconnection after N minutes, set 0 minutes will work forever.
 Serial I/O settings (baud rate, parity, data, bits, stop bits): 115200, N, 8, 1
 Interface of serial I/O: RS 232 (RTS/CTS)
 Packet mode of serial input: Disable
 Device ID : 5
 Report device ID when connected : Auto
 Setup password: Not required

If you experience difficulties establishing a connection, contact your network administrator for assistance. Network security setting may prevent you from connecting properly.

11 Auto Sequence Programming Examples

11.1 Overview

An auto-sequence allows the user to step through previously saved set-ups stored in the mainframe's memory. Up to nine auto-sequences can be saved. Each auto-sequence can consist of up to sixteen steps. There are two modes available for the auto-sequence function. These are **edit mode** - to set up an auto-sequence and **test mode** - to recall and start an auto-sequence execution.

11.2 Edit Mode

To set up a new auto-sequence using the Edit mode, proceed as follows:

1. Set-up all load parameters such as the operating mode, along with sink values and the LOAD ON/OFF status. Configuration and limit settings can also be set and the NG ON function may be selected as part of the setup.
2. Press the STORE key and one of the numbered STATE keys to store the set up in one of the memory locations. The BANK number can also be changed to provide additional memory locations.
3. Repeat the previous steps as needed to create additional load set-ups and saved them to separate memory locations using the STORE, BANK and STATE keys.
4. Once the required number of load setups has been saved enter the EDIT mode by pressing the EDIT key. The EDIT key will light up indicating the EDIT mode is active.
5. With the EDIT button lit, the auto-sequence identity (F1 to F9) can be selected using the numbered STATE keys.
6. Now select the first memory location by pressing the up/down arrow keys to select the BANK and STATE. This will become the first step of the AUTO-SEQUENCE.
7. Press ENTER to set the chosen BANK and STATE memory location.
8. Using the arrow keys set the test time (T1) and NG/LIMIT checking time (T2) for that step of the auto-sequence.
9. Press ENTER to save the time setting and move onto the next step of the auto-sequence.
10. Repeat steps 6 to 9 to as needed to enter up to 16 steps to form the auto-sequence.
11. Once the desired number of steps have been set, press the STORE button.
12. The LCD will show REP (repetitions).
13. Use the arrow keys to set the number of auto-sequence repetitions.
14. Press STORE to confirm the sequence edit.

This completes the programming sequence.

11.3 Test Mode

To execute a previously stored auto-test sequence, proceed as follows:

1. Press the TEST key on the mainframe to enter the TEST mode.
2. Use the numbered STATE keys (1 to 9) to select the previously saved auto-sequence.
3. Press ENTER to start the auto-sequence.
4. The LCD shows "PASS" or "FAIL" after testing.
If limits and the NG functions have been set and a test step fails, the mainframe LCD display will flash "NG". The user must then press ENTER to continue the auto-sequence execution or EXIT to abort the auto-sequence.
5. Press Auto-sequence or EXIT at any time to abort an auto-test sequence.

11.4 AUTO TEST SEQUENCY Example

In this example, we will create a program based on following illustration of a varying current over time. A total of eight sequence steps will be needed to implement this sequence. The program executes steps 1 to 8 in sequence.

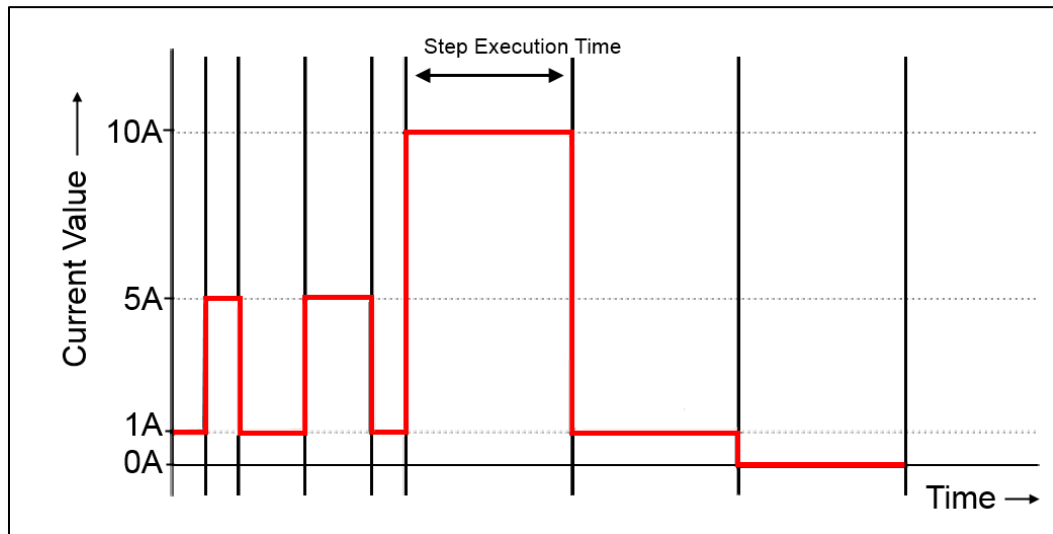


Figure 11-1Auto-Test Sequence Example Illustration

The desired current levels and durations are shown in the table below.


Auto-sequence Step number	Memory BANK	Memory STATE	Current Value	Execution Time (T1+T2)
1	3	1	1.0 Adc	200 ms
2	3	2	5.0 Adc	200 ms
3	3	3	1.0 Adc	400 ms
4	3	4	5.0 Adc	400 ms
5	3	5	1.0 Adc	200 ms
6	3	6	10.0 Adc	1000 ms
7	3	7	1.0 Adc	1000 ms
8	3	8	0.0 Adc	1000 ms

Table 11-1: Auto-Test Sequence Example Values

To program this sample sequence, proceed as follows:

1. Set the operation mode: Press the mode key to CC mode.
2. Set the range: Press RANGE key to force range 2.
3. Set LOAD ON/OFF Status: Press Load ON.
4. Set the current values steps 1-8 and store to memory BANK 3 STATES 1-8.
5. Press EDIT key of 3300F mainframe.
6. Press the number 2 key to select F2 as the auto sequence location.
7. Press up/down key to memory bank 3 and state 1.
8. Press ENTER key to confirm the sequence memory.
9. Press up/down key to set the test time for that step (T1+ T2).
10. Press ENTER key to confirm the sequence step.
11. Repeat steps 7 to 10 to set auto-sequence steps 1-8.
12. After setting the final step, press the STORE key.
13. Press up/down key to 1 to repeat the auto-sequence one time.
14. Press STORE key to confirm the number of repetitions.
15. Press TEST key to enter TEST mode.
16. Press number 2 to select auto-sequence F2.
17. Press ENTER to confirm selection and start TEST.
18. The load will now step through the auto-sequence.

The current test waveform can be checked on an oscilloscope as shown below - assuming that the DC Source can supply the programmed load currents.

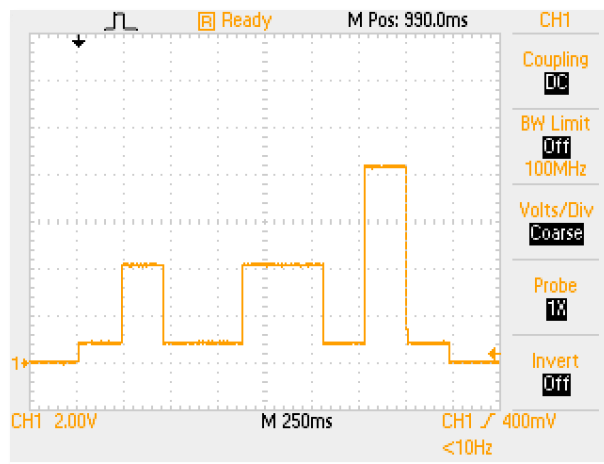

12 Short Circuit, OPP and OCP Test Examples

12.1 Overview

This appendix provides examples on how to program the built-in test modes of the 4 Series loads. These tests allow commonly used functional testing of power supplies with minimal programming effort.

The parameters for the Short, Over Power Protection and Over Current Protection tests can all be programmed over the optional computer interfaces. The following examples may prove useful.

12.2 SHORT Test

To invoke short circuit testing of a unit under test, send the following sequence of commands to the load:

SHORT Test

This example sets a short test for 500ms until the STOP command is received.

REMOTE	Set Remote
TCONFIG SHORT	Set SHORT test function
STIME 500	Sets short time to 500ms time*
START	Start SHORT testing
TESTING?	Ask Testing? 1:Testing, 0:Testing End
STOP	Stop SHORT testing

* if 500 is replaced with 0 the short test is continuous until STOP command

12.3 OPP Test

To invoke over power protection circuit testing of a unit under test, send the following sequence of commands to the load:

OPP Test

In this example, threshold limits are set and the NG signal is enabled.

REMOTE	Set Remote
TCONFIG OPP	Set OCP test
OPP:START 3	Set start load watt 3W
OPP:STEP 1	Set step load watt 1W
OPP:STOP 5	Set stop load watt 5W
VTH 0.6	Set OPP VTH 0.6V
WL 0	Set watt low limit 0W
WH 5	Set watt high limit 5W
NGENABLE ON	Set NG Enable ON
START	Start OPP testing
TESTING?	Ask Testing? 1:Testing, 0:Testing End
NG?	Ask PASS/FAIL? 0:PASS,1:FAIL
OPP?	Ask OPP watt value
STOP	Stop OPP testing

12.4 OCP Test

To invoke over current protection circuit testing of a unit under test, send the following sequence of commands to the load:

OCP Test

This test will start sinking current at 3A and increase to 5A in 1A steps.

REMOTE	Set Remote
TCONFIG OCP	Set OCP test
OCP:START 3	Set start load current 3A
OCP:STEP 1	Set step load current 1A
OCP:STOP 5	Set stop load current 5A
VTH 0.6	Set OCP VTH 0.6V
IL 0	Set current low limit 0A
IH 5	Set current high limit 5A
NGENABLE ON	Set NG Enable ON
START	Start OCP testing
TESTING?	Ask Testing? 1:Testing, 0:Testing End
NG?	Ask PASS/FAIL?,0:PASS,1:FAIL
OCP?	Ask OCP current value
STOP	Stop OCP testing.

13 RoHS Material Content Declaration

The table below shows where these substances may be found in the supply chain of APS's products, as of the date of sale of the relevant product. Note that some of the component types listed above may or may not be a part of the enclosed product.

Part Name	Hazardous Substance					
	<i>Pb</i>	<i>Hg</i>	<i>Cd</i>	<i>Cr6+</i>	<i>PBB</i>	<i>PBDE</i>
PCB Assy's	x	0	x	0	0	0
Electrical Parts not on PCB Assy's	x	0	x	0	0	0
Metal Parts	0	0	0	x	0	0
Plastic Parts	0	0	0	0	x	x
Wiring	x	0	0	0	0	0
Packaging	x	0	0	0	0	0

Legend:

0: Indicates that the concentration of the hazardous substance in all homogeneous materials in the parts is below the relevant RoHS threshold.

x: Indicates that the concentration of the hazardous substance of at least one of all homogeneous materials in the parts is above the relevant RoHS threshold.

Notes:

1. APS has not fully transitioned to lead-free solder assembly at this point in time. However, the vast majority of components used in production are RoHS compliant.
2. These APS products are labeled with an environmental-friendly usage period in years. The marked period is assumed under the operating environment specified in the product specifications.

Example of marking for a 10 year period.

